
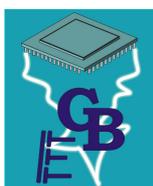


Operating manual

# Double Sound Speed Controller

## SFR-1-D V1.01

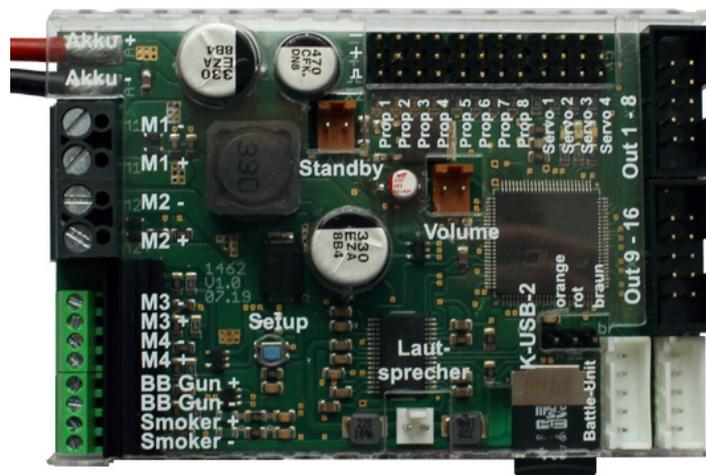


### BEIER-Electronic

Winterbacher Str. 52/4, 73614 Schorndorf - Weiler

Phone +49/7181/46232, Fax +49/7181/45732

eMail: [modellbau@beier-electronic.de](mailto:modellbau@beier-electronic.de)

Internet: <http://www.beier-electronic.de/modellbau>

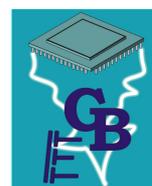

## Table of Contents

Table of Contents .....	2
Introduction.....	4
Safety notes .....	5
Additional information and help .....	5
Technical details.....	6
Pin assignment.....	8
Wiring diagram .....	9
Installation .....	10
Connection .....	10
Setup (teaching function).....	15
Loudspeaker.....	17
Volume control .....	18
Sounds .....	19
Engine sound .....	20
Turning on/off engine sound.....	22
Engine sound 2 .....	23
Functions of the SFR-1-D.....	24
Additional sounds 1 - 30 .....	26
Random sounds .....	28
WAV-Player.....	28
Functional assignment at proportional channels #1 - #8 .....	30
Stick simulation via keys or switches.....	32
One-channel multi-function selection (EKMFA).....	33
Nautic mode / multiswitch mode.....	33
Sum signals S-BUS, SUMD/SUMD3 and i-BUS.....	34
Digital switches at sum signal SUMD3 .....	35
Switching outputs .....	35
Additional outputs.....	42
Input „cannon shot“ .....	43
Output sequences .....	43
Servo outputs .....	44
Function sequences .....	45
Battle unit .....	45
Voltage monitoring.....	45

Current monitoring.....	46
LEDs on the SFR-1-D.....	48
PC software „SFR-1-D Sound-Teacher“ .....	49
Using software „SFR-1-D Sound-Teacher“ .....	51
Saving sounds and configurations on SD card.....	86
Transferring configurations with data cable K-USB-2.....	87
Adjustments of driving sound with the driving sound diagram.....	88
Sound simulation.....	90
Testing functions with help of data cable K-USB-2 .....	90
Diagnosis.....	91
Firmware update.....	94
Neue Sounds am PC aufnehmen.....	95
Sounddateien konvertieren.....	98
Sounds am PC bearbeiten .....	99

## Introduction

The SFR-1-D is a multifunction all-rounder module, designed for RC models with two brushed DC motors, such as tracked vehicles and ships. The module combines the functions of the sound module [USM-RC-2](#) and the speed controller [UFR-1230-D](#).

Thanks to various setting options the SFR-1-D can be easily adjusted to all model requirements and driving behaviours.

The SFR-1-D comes with a large light control unit, eight proportional channels, four servo outputs, two mini speed controller for auxilliary drives and additional outputs for a smoke generator, a Xenon flasher and an IR battle unit.

For an easy start we have more than 90 ready to use sound projects and 700 sound files for different types of models. Own recordings can also be used.

Sound functions:

Sounds can be selected for following areas:

- Driving and engine sounds (speed-dependent)
- Additional sounds (e.g. horns, hydraulic and compressed air noises)
- Random sounds (e.g. squeaking, animal and ambient sounds)

Driving functions:

Brushed motors (DC) can be controlled smooth and realistic with the SFR-1-D. An ideal driving behavior can be achieved through a variety of settings.

The speed controller on the SFR-1-D has following characteristics:

- Different dual mixer
- Different brake functions (with hand- and emergency brake)
- Adjustable load regulation
- Adjustable mass inertia
- Adjustment of throttle curve for different driving behaviours

Light functions:

To realize different light effects, the module comes with 16 switching outputs to connect LEDs, lamps and other consumers. Light functions, such as low beam, rear light, brake light, indicator lights, warning lights, flickering lights, etc. can be easily implemented and controlled.

All light functions can be activated or deactivated automatically with sounds and movements.

Servo movements:

With four additional servo outputs, movements can be realised and equipped with sound.

## Safety notes

- Please read this operating manual carefully and keep it for future use!
- The integrated circuits on the sound module are sensitive to electrostatic charge. It is important not to touch these components, before discharging yourself (e.g. through a grip onto a grounded device).
- Under certain circumstances unfavourable placement and wiring of the sound module in the model may lead to restriction of transmitter range (mainly with 35/40 MHz transmitter).
- The sound module should only be used with supply voltages that are given in the technical data.
- Always switch off power first before connecting the module!
- The sound module is not suitable for children under 14 years.

## Additional information and help

You have problems with your module and need additional information?  
No worries, we are here to help you!

### **BEIER-Electronic forum**

Check out our [BEIER-Electronic forum](#) on our website. This is the most appropriate place to get a quick and competent assistance. In our forum you can ask questions and receive help from us and from other forum user. Through an intensive exchange of expertise and experience, all forum users can benefit from the information, presented solutions and ideas. Maybe your question / problem has already been described and you can find immediately the solution (e.g. in the [FAQ](#)).

### **BEIER-Electronic on facebook**

Also visit us on [facebook](#). You can find news and additional information about our products there. Customers of us also founded a [facebook group](#), where you can present your project and get help, just like in our forum.

### **YouTube tutorials**


If you have questions about basic functions of the sound module SFR-1-D, please watch our [YouTube video tutorials](#) with English subtitles. In these videos we explain for example how to connect the sound module and how to program and control different functions.

## Technical details

<b>Supply Voltage (U<sub>b</sub>):</b>	6 – 18 V DC
<b>Power consumption:</b>	Bias current: approx. 1 mA Standby current (sound, motor and outputs off): approx. 80 mA
<b>Motor current (M1 and M2):</b>	Max. 2 x 30 A continuous current, 60 A short-term current (1 minute)
<b>Motor current (M3 and M4):</b>	Max. 2 x 2 A continuous current, 3 A short-term current (10 seconds)
<b>BEC voltage:</b>	approx. 5,6 V
<b>BEC current:</b>	max. 3 A continuous current, 5 A short term (10 seconds)
<b>Proportional inputs:</b>	8 inputs Supported protocols: <ul style="list-style-type: none"> <li>• PPM / PCM (1,000 - 2,000 ms)</li> <li>• Sum signals: S-Bus, SUMD/SUMD3 and i-Bus (max. 16 channels)</li> <li>• Nautic / Multiswitch / Multikanal / EMS</li> </ul>
<b>Servo outputs:</b>	4 outputs (1,000 - 2,000 ms)
<b>Switching outputs:</b>	16 outputs (nnp – open collector), max. 1,5 A each output, the total current of all outputs must not exceed 3,0 A
<b>Output smoke generator:</b>	Max. 3 A
<b>Output BB gun:</b>	Max. 3 A
<b>Audio amplifier:</b>	20 W
<b>Recommended loudspeaker:</b>	4 – 8 Ω
<b>Volume setting:</b>	With extra poti (100 kΩ) and/or by the radio
<b>Memory for sound files:</b>	Micro SD card (1 to 32 GB)
<b>May. length of sound:</b>	approx. 180 minutes per 1 GB
<b>Supported file format:</b>	WAV-Format, 8/16 Bit, Mono/Stereo, 22/44 kHz
<b>Sound output:</b>	16 Bit, Mono, 22/44 kHz
<b>Number of possible sounds:</b>	<ul style="list-style-type: none"> <li>• 5 running steps/gears (internally in up to 255 steps accelerated)</li> <li>• 8 change sounds between the running steps/gears</li> <li>• Turn on noise, turn off noise, starting noise, stopping noise, idling noise, brake noise, reverse warning, curve squeal, flashing lights sound</li> <li>• 30 additional sounds</li> <li>• 8 random sounds (random generator)</li> <li>• 30 tracks for WAV-Player</li> </ul>
<b>Random sound generator:</b>	Times between 1 to 999s adjustable
<b>Additional ports:</b>	<ul style="list-style-type: none"> <li>• Programming interface for data cable</li> </ul>

<b>Protection features:</b>	<ul style="list-style-type: none"><li>• Short circuit protection at motor output stage</li><li>• Short circuit protection at switching outputs</li><li>• Short circuit protection at BEC</li><li>• Temperature monitoring</li><li>• Battery voltage monitoring</li><li>• Protection while switching on power supply</li><li>• Failsafe for proportional inputs</li></ul>
<b>Cables for connection:</b>	<ul style="list-style-type: none"><li>• For battery: 2 x 2,5 mm<sup>2</sup>, length approx. 25 cm (with Deans T male connector)</li></ul>
<b>Permissible ambient temperature:</b>	0 – 60° C
<b>Permissible relative air humidity:</b>	Max. 85 %
<b>Dimensions:</b>	88 x 60 x 25 mm (with SD card: 88 x 63 x 25 mm)
<b>Weight:</b>	100 g


## Pin assignment

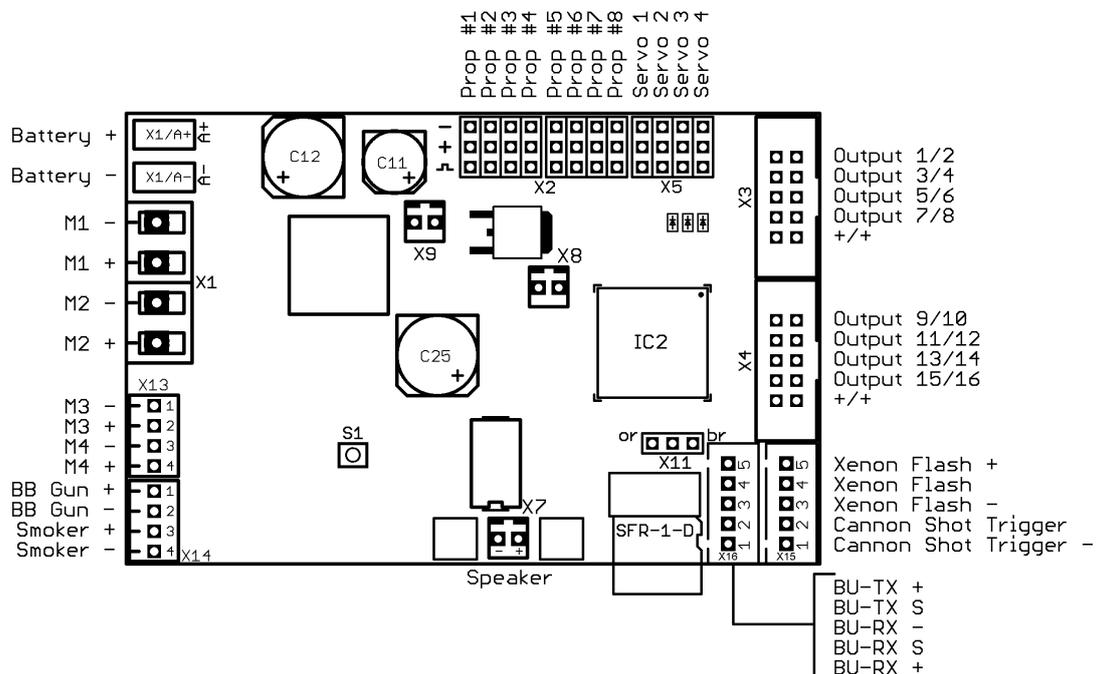

### Connections at SFR-1-D:

<b>X1/A+</b>	Battery + / Akku + (6 – 18 V)
<b>X1/A-</b>	Battery - / Akku -
<b>X1/M1</b>	Motor 1 (motor left)
<b>X1/M2</b>	Motor 2 (motor right)
<b>X2/1 – X2/8</b>	Proportional input channel #1 – #8
<b>X3</b>	Switching outputs 1 - 8
<b>X4</b>	Switching outputs 9 - 16
<b>X5/1 - X5/4</b>	Servo 1 - 4
<b>X7</b>	Loudspeaker
<b>X8</b>	Volume control with poti
<b>X9</b>	Optional switch (Power off / standby)
<b>X10</b>	Micro SD card
<b>X11</b>	Port for data cable K-USB-2
<b>X13</b>	Motor M3 and M4 (auxiliary drives)
<b>X14</b>	Output for bb-gun and smoke generator
<b>X15</b>	Output for Xenon flash and input for cannon shot
<b>X16</b>	Connection for IR-battle unit

# Wiring diagram

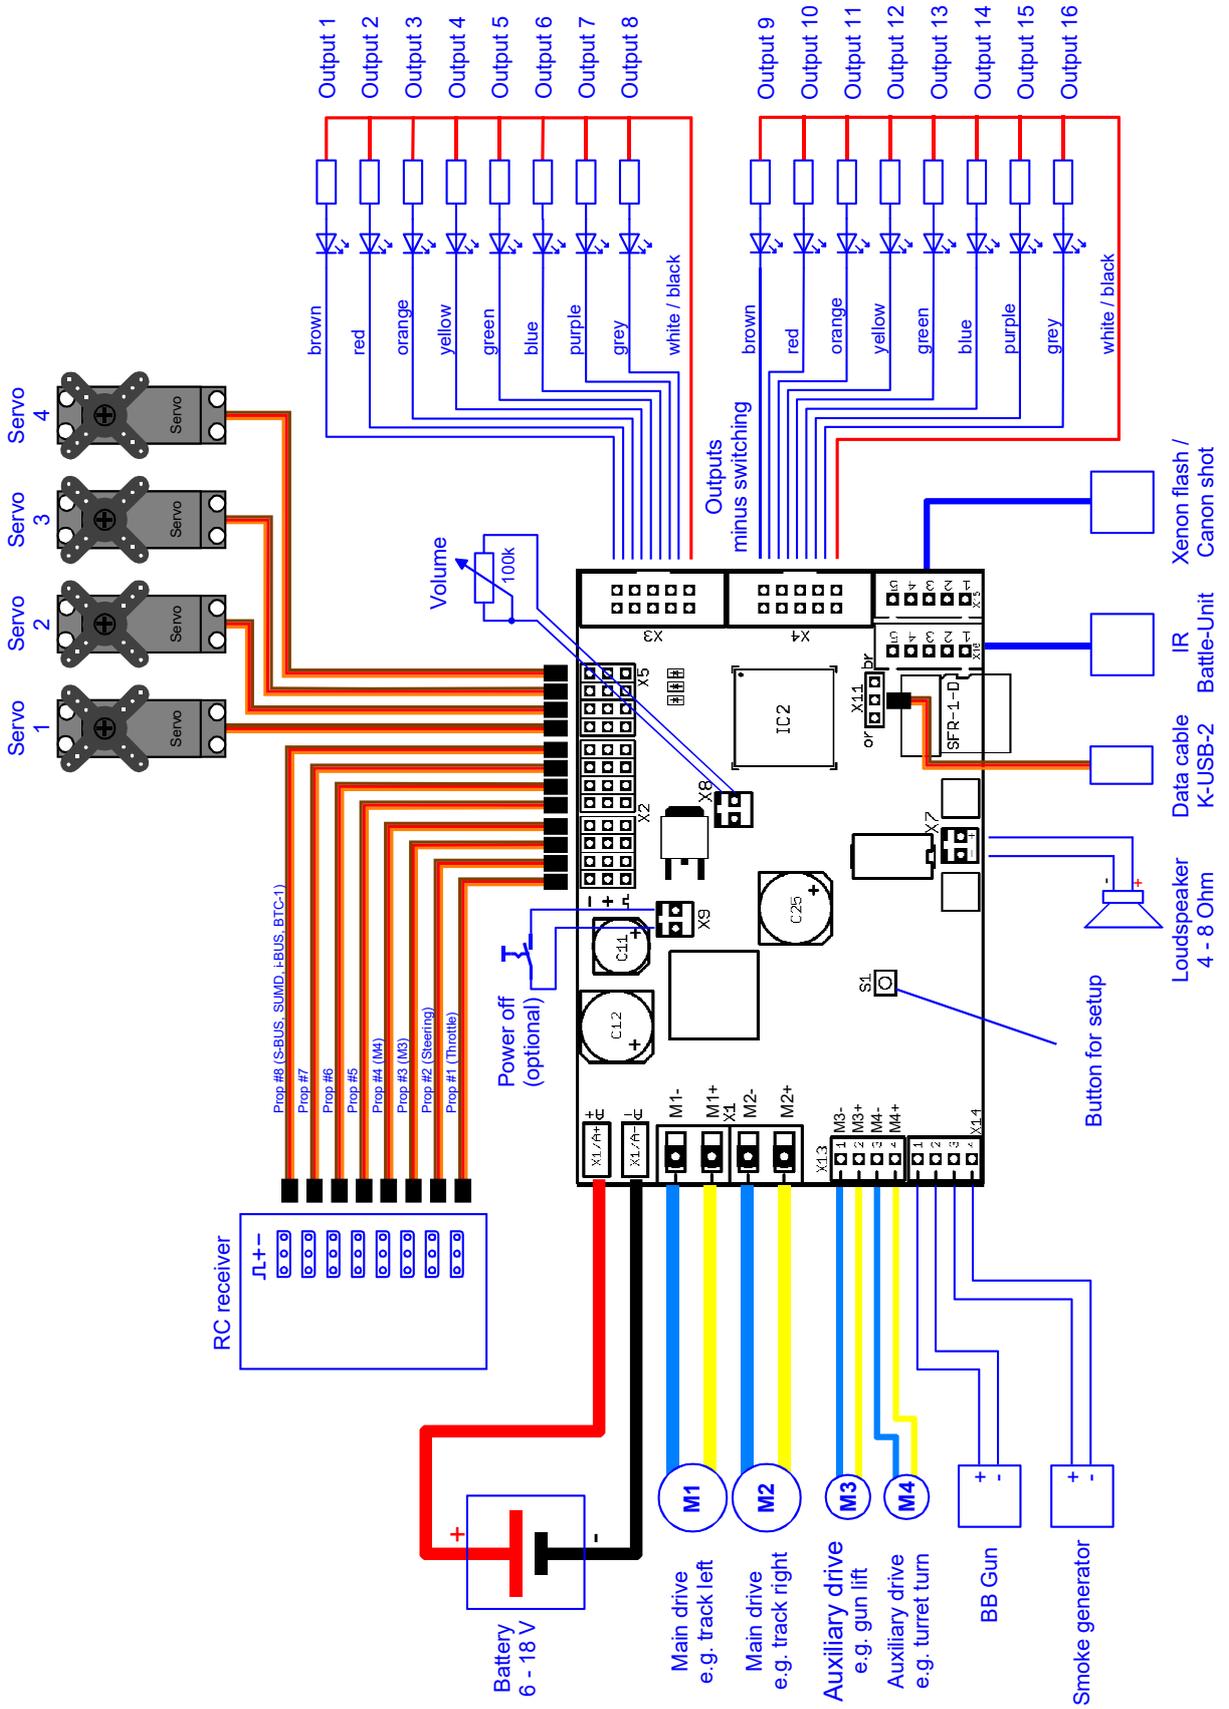

## Installation

For a safe installation of the module, we recommend to use Velcro tape on the SFR-1-D cover.

Pay attention not to connect components and conductor tracks with any metal parts! This may cause a short circuit, which destroys the SFR-1-D!

## Connection

**Always switch off power before connecting the module!**

### **Connection of supply voltage (battery)**

The SFR-1-D is suitable for 6 – 18 V DC. Choose a suitable battery for your motor.

In order to connect the power supply the red cable is connected to the positive pole of the battery and the black cable to the negative pole of the battery.

For an easy connection, the speed controller is delivered with a Deans T male connector, which allows an easy plugging and prevents reverse polarity.

If the supply voltage is connected, the green LED on the module lights up.

**Pay attention to a correct connection of the supply voltage poles! A wrong connection destroys the speed controller immediately!!!**

### **Connection of motors**

The SFR-1-D is suitable for all DC brushed motors with a maximum continuous current of up to 30 A. For maximum one minute, a current peak of 60 A is possible. With the following formula you can easily calculate the required values: Current (A) = Power (W) / Voltage (V).

To X1/M1- the minus of the left motor is connected and to X1/M1+ the positive pole of the motor.


The minus pole of the right motor is connected to X1/M2- and the positive to X1/M2+.

In case the driving direction is wrong (forward and backward are opposite), you can change the connection cables of the motor or you can invert the driving direction in your Sound-Teacher, see page 56.

**If you want to disconnect the supply voltage from the battery, always disconnect the positive lead of the battery first (or plus and minus at the same time)! Never disconnect the negative lead first (or only)!**

In case of poor or no interference suppression motors can be strong sources of interference, which may interfere with the electronics of the SFR-1-D, especially the sound output (whistling, buzzing in the speaker. Therefore motors should be suppressed! With a 2.4 Ghz transmission and a current motor, which is usually already suppressed, disturbances are rare.

If you have problems with interferences, the motor can be additionally suppressed with three capacitors, as shown in the figure. The C1 capacitors are connected to the motor housing.

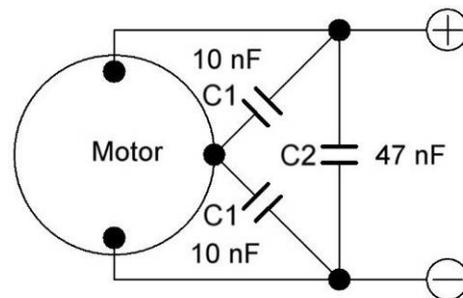

### Connection of proportional inputs

To proportional inputs X2/1 - X2/8 up to 8 proportional channels can be connected to the receiver. 5 servo patch cables are included in the SFR-1-D delivery. Additional servo patch cables (15 and 30 cm) can be ordered in our online shop.

The servo patch cables must be connected to the SFR-1-D with the orange cable pointing to the center of the board (down) and the brown cable to the edge (up).

Functions of proportional channels:

Prop	Assignment
#1	Throttle channel (with mixer) / throttle channel M1
#2	Steering (with mixer) / throttle channel M2
#3	Free function assignment / steering of M3
#4	Free function assignment / steering of M4
#5	Free function assignment / Nautic 1 / EKMFA
#6	Free function assignment / Nautic 2
#7	Free function assignment
#8	Free function assignment / Sum signals S-BUS, SUMD or i-Bus / Bluetooth-Controller BTC-1

The channel numbers of the SFR-1-D do not match with the numbers of your receiver! So channel #1 of the receiver must not necessarily be connected to channel #1 of the SFR-1-D. If the throttlestick (to accelerate your model) is for example at channel #3 on the receiver, you have to connect channel #3 of the receiver with channel #1 of the SFR-1-D.

**BEC – receiver supply voltage**

An additional receiver battery is not required. The SFR-1-D has a BEC supply voltage of 5,6 V. The maximum continuous BEC current is 3 A. Up to 10 seconds a current of 5 A is possible.

In case the BEC voltage of the SFR-1-D should not be used, the red cable from all servo cables from proportional channels #1 - #8 must be disconnected!

**Connection of loudspeaker**

The loudspeaker ist connected to X7 (white) at the SFR-1-D.

The red cable is connected to the positive and the black to the negative pole of the loudspeaker.

The supplied loudspeaker connection cables should not be extended to prevent interference of the receiver (especially with FM systems)! The loudspeaker cables should be installed with a maximum of distance to receiver and antenna.

**Connection of switching-outputs**

The outputs 1 - 16 of the module are located at the pin connectors X3 and X4.

The supplied [ribbon cable](#) can be used to connect these outputs. For an easier connection, the terminals [AKL-8](#) and [AKL-8-W](#) can be ordered in our online-shop.

Of course other cables/plugs with a cross section of 0,14 mm<sup>2</sup> - 0,5 mm<sup>2</sup> can be used as well.

The SFR-1-D is always switching the negative pole to each output and to the connected load. The negative pole is always connected to the load (see wiring diagram).

The common positive pole for outputs 1 – 8 and 9 -16 are the black and white cables. It is also possible to connect the load directly to the positive pole of the battery.

**Ribbon cable assignment:**

Output	Ribbon cable (X3)
1	Brown
2	Red
3	Orange
4	Yellow
5	Green
6	Blue
7	Lila
8	Grey
+	White
+	Black

Output	Ribbon cable (X4)
1	Brown
2	Red
3	Orange
4	Yellow
5	Green
6	Blue
7	Lila
8	Grey
+	White
+	Black

The switched voltage at the outputs (with 100% intensity) is always as high, as the supply voltage of the SFR-1-D. For example if the module is supplied with 12 V, only lamps with 12 V can be connected.

If LEDs are used, series resistors are always required. Furthermore, attention must be paid to the correct polarity of the LED. The series resistors for the LED's are depended on the supply voltage, the LED color and the LED current.

The table below shows the resistance values required for standard LEDs (approx. 15 mA current):

Supply voltage	Series resistors
6 V	270 Ohm
7,2 V	330 Ohm
8,4 V	470 Ohm
9,6 V	510 Ohm
12 V	680 Ohm

In the internet you will find various pages to calculate the necessary resistor value.

If multiple LEDs are connected to one output (e.g. front and rear direction indicators), it is always better to use separate resistors than to connect the LEDs in series.

### **Connection of data cable K-USB-2**

The data cable K-USB-2 is connected to X11. The brown cable points to the SD card.

The data cable does not supply the module with voltage. For using the data cable, the SFR-1-D must be supplied with power via the battery.

**Connection of an optional "standby switch"**

An optional switch can be connected to slot X9 to switch the complete module into a standby mode. If the switch is closed at X9, the BEC voltage is switched off and the processor of the SFR-1-D goes to standby.

The current consumption of the module drops to a current of about 1 mA. This allows to stay on standby for several hours without noticeably draining the battery. However, if the model is not used for several days, the battery should be disconnected completely.

If no switch is connected to X9 or the switch is not closed, the SFR-1-D will operate normally.

At the standby switch there is only a small spreader current of a few  $\mu\text{A}$  and not the complete current of the module. Consequently, a much smaller "standby switch" can be installed.

**General remarks for wiring**

Always use cables with a core diameter of at least 1,5 mm<sup>2</sup> for connecting the power supply and the motors M1 and M2. For all other connections, such as lights you can use smaller cables such as 0.25 mm<sup>2</sup>.

Unfortunately motors are often strong interference sources, which might disturb other electronic modules in your model. Therefore all motors should be absolutely interference-suppressed!

It is important to pay attention to „clean" wire routing. Always use short wires and avoid any unnecessary loops. The supply voltage wires of the speed controller should be connected to the driving-battery as direct as possible.

## Setup (teaching function)

With the teaching function important parameters are synchronised between the radio and the SFR-1-D.

During the setup, the neutral positions of all connected channels are transferred to the encoder positions. For this it is absolutely necessary that all stick or switch positions are in neutral position at the radio.

The SFR-1-D is delivered with following standard setting: neutral position (1,5 ms), minimal position (1,0 ms) and maximal position (2,0 ms).

We recommend to „teach“ the SFR-1-D with the radio at least once. The motor is not used during the setup.

The setup process varies depending on the mixer setting. Choose your mixer type in the Sound-Teacher before doing the setup, see page 56. In our projects and the delivery setting we use dual mixer #1.

The setup can be started with the blue setup button on the SFR-1-D board, with the data cable K-USB-2 and the function „start setup“ (proportional channel or nautic/multiswitch).

### **Setup with dual mixer (delivery setting):**

1. Connect throttle channel, steering channel and all proportional channels you are using.
2. All channels must be in neutral position on your radio. Switch on transmitter first and then the SFR-1-D.
3. Activate the setup, with the blue „setup“ button on the SFR-1-D board, until the green LED flashes fast. The blue LED flashes once.
4. With correct signals at the throttle channel X2/1 and steering channel X2/2, all neutral positions are evaluated and stored. In case the red LED is flashing, the SFR-1-D can not detect a correct signal at X2/1 or X2/2. Please check all connections and start the complete setup process again.
5. Press the throttle stick to full throttle for one or two seconds and return to neutral position. Wait until the blue LED flashes two times and lights permanently afterwards.
6. Within 20 seconds press the throttle stick down and give full throttle backwards and return to neutral position. The blue LED flashes three times. The green and red LED are flashing now fast.
7. Turn the steering completely to the left and return to neutral. The blue LED is flashing 4 times und stays on afterwards.
8. Within 20 seconds turn the steering completely to the right and return to neutral. The blue LED flashes 5 times and turns off afterwards.
9. The green LED stays on and the setup is completed.

**Setup with two separate speed controllers:**

1. Connect throttle channel M1, M2 and all proportional channels you are using.
2. All channels and the trim must be in neutral position on your radio. Switch on transmitter first and then the SFR-1-D.
3. Activate the setup, with the blue „setup“ button on the SFR-1-D board, until the green LED flashes fast. The blue LED flashes once.
4. With correct signals at the throttle channel X2/1 and X2/2, all neutral positions are evaluated and stored. If the red LED is flashing, the SFR-1-D can not detect a correct signal at X2/1 or X2/2. Please check all connections and start the complete process again.
5. Press the throttle stick for the left motor to full throttle for one or two seconds and return to neutral position.
6. Wait until the blue LED flashes two times and lights permanently.
7. Within 20 seconds press the throttle stick of the left motor down and give full throttle backwards and return to neutral position. The blue LED flashes three times. The green and red LED are flashing fast.
8. Turn the throttle stick of the right motor completely to full throttle and return to neutral. The blue LED is flashing 4 times und stays on afterwards.
9. Within 20 seconds turn the throttle stick of the right motor completely to full throttle backwards and return to neutral. The blue LED flashes 5 times and turns off afterwards.
10. The green LED stays on and the setup is completed.

**Setup with differential via throttle curves or with a fix value:**

1. Connect throttle channel X2/1, X2/2 and all proportional channels you are using. X2/2 is not used in this setting, however for the setup it must be connected to any receiver output!
2. All channels and their trim must be in neutral position on your radio. Switch on transmitter first and then the SFR-1-D.
3. Activate the setup, with the blue button on the SFR-1-D board, until the green LED flashes fast. The blue LED flashes once.
4. With correct signals at throttle channel X2/1 and X2/2, all neutral positions are evaluated and stored. In case the red LED is flashing, the SFR-1-D can not detect a correct signal at X2/1 or X2/2. Please check all connections and start the complete setup again.
5. Press the throttle stick to full throttle for one or two seconds and return to neutral position. Wait until the blue LED flashes two times and lights permanently.
6. Within 20 seconds press the throttle stick down and give full throttle backwards and return to neutral position. The blue LED flashes three times and switches off afterward.
7. The green LED stays on and the setup is completed.

**Setup with differential via Prop #2:**

1. Connect throttle channel X2/1, differential channel X2/2 and all proportional channels you are using.
2. All channels and their trim must be in neutral position on your radio. Switch on transmitter first and then the SFR-1-D.
3. Switch on power supply at the speed controller.
4. Activate the setup, with the blue button on the SFR-1-D board, until the green LED flashes fast. The blue LED flashes once.
5. With correct signals at throttle channel X2/1 and X2/2, all neutral positions are evaluated and stored. In case the red LED is flashing, the SFR-1-D can not detect a correct signal at X2/1 or X2/2. Please check all connections and start the complete setup again.
6. Press the throttle stick to full throttle briefly and return to neutral position. Wait until the blue LED flashes two times and lights permanently.
7. Within 20 seconds press the throttle stick down and give full throttle backwards and return to neutral position. The blue LED flashes three times and switches off afterward. The green and red LED are flashing fast.
8. Bring channel X2/2 to maximum and return to neutral. The blue LED flashes four times and stays on afterwards.
9. Within 20 seconds bring the differential channel X2/2 to minimum and return to neutral. The blue LED flashes five times and stays on afterwards.
10. The green LED stays on and the setup is completed.

**Loudspeaker**

You can connect every loudspeaker to the SFR-1-D with an impedance of at least 4  $\Omega$  and the maximal power you are using. We recommend full range loudspeakers with 4 or 8  $\Omega$ . Higher impedances are also possible, but the volume decreases with higher impedances.

The maximum power of the loudspeaker and thus the volume of the SFR-1-D, correlates with the supply voltage.

To reach a good level of volume and sound quality, install the loudspeaker in a suitable resonant body (loudspeaker box). A loudspeaker, which lies only on the table, never reaches optimum sound quality.


Always pay attention to a good air circulation to prevent overheating at the amplifier. Especially with higher voltages (e.g. above 9,6 V) it might be necessary to use active cooling of the SFR-1-D with a little fan.

For more power, it is possible to connect an additional amplifier. A RCA line level converter (high/low) with galvanic separation (used at car radios) and a small capacitor (10 nF) must be connected to the input of the SFR-1-D amplifier.

## Volume control

A volume control is possible by an external potentiometer or by different functions with the radio.

The external potentiometer (100kΩ) is connected to X8 (see wiring diagram, page 9).

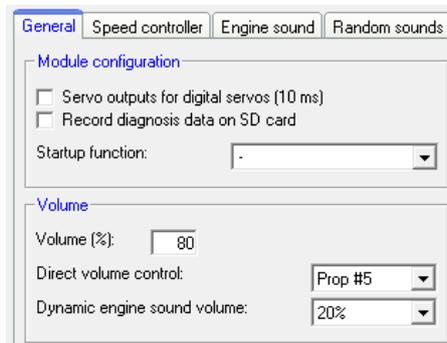

If no potentiometer is connected, the maximum volume, set in the Sound-Teacher (10 – 100 %) at Configuration → General → „Volume (%)” is used.

The volume can be steplessly controlled via a proportional channel and the "Direct volume control" setting. A slide switch or knob on the remote control is recommended with this function.

The volume can also be controlled by a switch. The functions "Volume +" and "Volume -", must be configured in the Sound-Teacher e.g. to a proportional channel or to a nautic/multiswitch.

### **General notes to volume**

Only transfer sounds with an optimal modulation/volume. Common mistakes are far too quiet recordings that can not be played properly.

The volume of each sound can also be changed individually. You will find the setting in your Sound-Teacher on the right side of each sound slot. Values between 10 and 300 % (in relation to the original wav-file) are possible.

If more volume-control options are used at the same time, the lowest volume setting controls the maximum possible volume at the model.

## Sounds

All sounds are stored at the SFR-1-D with our software SFR-1-D Sound-Teacher, in so called „slots“.

You don't have to use every slot. If you don't want e.g. any starting-noise, just keep the starting-noise slot free.

For “Idling noise” and “FG1” (engine sound) you should place a sound, otherwise no sound in standing and driving is played.

Examples for sound slots:

<b>Sound-Slots</b>
Engine start sound coldstart / warmstart
Idle sound
Vehicle start sound (idling → drive)
Vehicle stop sound (drive → idling)
Engine stop sound
Engine sound FG1 - 5 (different types: slow down, normal and speed up)
Shift sounds between FG1 - FG5
Reverse warning
Brake sound
Cornering squeak
Indicator noise
Turn warning left / right
Engine sound 2: Engine start/stop sound, idle sound, vehicle start/stop, engine sound
Additional sounds 1 - 30
Sound from M3 and M4
Sound from Servo 1 - 4 left/right
Cannon shoot
Undervoltage sound
Overcurrent sound
Random sound 1 - 8
Tracks 1-30 for WAV-Player

The engine sound for driving backwards can be different from the sound driving forward. You can put sounds in these slots, but you don't have to. If the slot for driving backward is empty, the sound module will play the normal engine sound. Using slots for driving backward sounds only make sense if the sounds differ from driving forwards.

## Engine sound

The engine sound consists of several single noises. Normally there is an engine start noise, an idling noise, a driving noise and an engine stop noise. This module also offers the possibility to imitate up to five different driving sounds (for example for gears), up to eight change sounds between the driving sounds (for example when you change the gears), a reverse warning sound, a break noise and cornering squeak.

All engine sounds (therefore also the reverse warning and brake noise) are played only when the engine sound is switched on (see page 22).

### **Start engine noise (cold- and warmstart)**

The start engine noise is played when the engine sound is switched on. After the starting noise, the sound changes to the idle sound.

If the engine sound is switched on and the vehicle is already in motion, the starting noise will skip and the module directly plays the engine noise.

Optional, two different engine start noises can be used. The engine coldstart sound (e.g. the starting takes longer, until the engine runs smoothly) and the engine start sound for a warmstart (engine starts immediately). Which starting sound is played, depends on how long the engine was running before. This time can be configured in the Sound-Teacher. (Configuration → Engine sound → Time for warmstart).

If you don't need two different engine start sounds, you can use one of the two slots for your engine start sound. The sound module always plays the sound slot, which is filled with a sound.

### **Idle sound**

The idle sound is always played when the vehicle is in idle. The sound is played in an endless loop. Therefore just a short sound (approx. 1-5 s) is required for this sound slot. In general the longer the sounds file, the better the quality of the idle noise.

### **Vehicle start sound**

The starting sound is played uniquely when the vehicle sets off (idle → drive).

### **Vehicle stop sound**

The stopping noise is played once as soon as the vehicle stops (drive → idle).

### **Engine stop sound**

The engine stopping noise is played when the engine sound is switched off.

**Reverse warning**

The reverse warning sound is played when the vehicle drives backward. This could be e.g. the warning beeping of a truck. The reverse warning sound is mixed/added to the engine sound.

**Brake sound**

The brake noise is played when the driving speed is reduced.

**Cornering squeak**

The sound for the cornering squeak is played, as soon as the model turns. The threshold level is configured in the Sound-Teacher (Configuration → Engine sound → Engine sound).

**Indicator noises**

The indicator sound is played when the vehicle signals. The indicator sound is mixed/added to the engine sound.

**Engine noise / Gears FG1 - FG5**

The engine sound is always played in an endless loop as long as the model moves. The playing speed depends on the driving speed of the vehicle. The SFR-1-D recognizes how fast the vehicle moves, and plays the engine noise in the corresponding speed. The relation between driving and sound speed can be set in the driving sound diagram (see page 88).

You can also set with the Sound-Teacher how many different sounds should be used for driving forward and backward. This could be for instance sounds for different gears for a truck or you can choose different driving sounds for each driving speed (e.g. slow, normal and fast).

Please keep in mind; the “gears” are just generated by the SFR-1-D and not through a mechanic gearshift. Yet it is not possible to activate the different sounds through an engine control or a real gearshift.

For each driving sound FG1 – FG5 you can use three different settings (normal, slow down and speed up). The latter options are just additional to generate a more authentic sound but in most cases the “normal” sound is sufficient.

If you use the sound slot “slow down” and the model brakes, the driving sound switches automatically from “FGx normal” to “FGx slow down”. The same happens when the model accelerates and the sound slot “speed up” is used.

To divide the entire speed range into sections for up to five engine sounds/gears you can use the engine sound diagram (see page 88).

### **Sounds for changing running steps / gears**

If you use more than one running step/gear for your driving sound you can also use sounds to simulate the changing between the different running steps/gears. When you change the running step/gear the changing noise will be played.

Furthermore you can differentiate between acceleration- and deceleration sounds and therefore use for example different sounds for changing the gear from FG1 to FG2 and another for switching from FG2 to FG1.

The changing sound will always be played once and completely when the running step/gear is changed. For this reason the sound should be short (e.g. 1 s). Otherwise, it might occur for example that the model is already standing but the changing sound is still played.

### **How to open sound files**

In the folder "SFR-1-D Sounds", on the supplied DVD-ROM, you will find some exemplary sounds for different vehicle types. In order to store a new sound on the SFR-1-D, start the program "SFR-1-D Sound-Teacher", open a \*.sfr-1-d project file (Menue "File" → Open project) in the respective folder and save the project files on the SD-card.

The USM-RC-2 sound projects are compatible with the SFR-1-D. To open a USM-RC-2 file you have to change the shown data type to „All files (\*.\*)“.

To make your model unique, individual and realistic all sounds can be edited and compiled individually, for example with the software Audacity.

For an easy start we recommend to use one of the ready sound projects and adapt it to your requirements step by step.

## **Turning on/off engine sound**

Before any engine sound is played, it must be switched on first.

There are different ways to switch on the engine sound:

### **Using a proportional channel (X2/3 - X2/8) to switch on engine sound:**

If you have a joystick/slider/switch/rotary switch left, you can use it to switch the engine sound on or off. Therefore the corresponding receiver output must be connected to the corresponding proportional channel of the sound module with a servo patch cable.

The proportional channel must be configured in the Sound-Teacher under Configuration → Proportional channels → Function "Engine sound on/off". If the proportional channel is brought in this area (A -D), the engine sound is switched on or off.

### **Using nautic-mode on proportional channel #5 (X2/5) and #6 (X2/6) to switch on engine sound:**

If you have a nautic switch unit installed in your receiver, you can assign the function "engine sound on/off" to a nautic switch (Configuration → Nautic/multiswitch) to turn the engine sound on or off with the selected switch (see page 33).

### **Using EKMFA-mode on proportional channel #5 (X2/5) to switch on engine sound:**

With the One-channel multi-function selection (EKMFA) you can nearly control the whole sound module with only one free channel of the transmitter. "Counting" (and pressing the joystick a corresponding number of times) is used to determine, which function is triggered. In the Sound-Teacher you can set up, how often the joystick must be pressed, to turn on/off the engine sound (see page 33).

### **Turn on engine sound automatically by motion:**

Is this option activated, the engine sound is switched on automatically, as soon as you accelerate the first time (that means for example moving the joystick out of the neutral position) (see page 60). The engine sound keeps switched on as long as you are driving. If the model is stopped, the engine sound will be turned off after an adjustable time (e.g. 10 seconds). If you start driving again, the sound will be switched on again. This method has the advantage, that no additional channel (or switch) in the transmitter are needed to activate the engine sound.

## **Engine sound 2**

In addition to the actual engine/driving sound; a second speed-dependent sound can also be played. However, this second engine sound does not offer as many sound slots/options as the normal engine sound.

The engine sound 2 must not necessarily be an engine sound that is played while "driving". Generally all speed adjustable sounds can be used for any kind of movement. This can for example be a speed-dependent turret rotation of a tank or the sound of a hydraulic pump in a construction vehicle.

Following sounds are available for the engine sound 2:

- Engine start sound 2
- Idle sound 2
- Motion start 2 sound
- Engine sound 2 (speed dependent)
- Motion stop 2 sound
- Engine stop 2 sound

The functions of engine sound 2 correspond in principle with those of the normal engine sound (see page 20). Depending on type of movement, you do not have to use all of these sound slots. For example, in case of a tank turret rotation, only the

sounds for motion starting, driving, and motion stopping are necessary because there are no idle and engine start/stop sounds when turning a tank turret.

The speed for engine sound 2, can be controlled with one of the 8 proportional channels #1 - #8. Which channel, can be set in the Sound-Teacher (see page 63).

There are 2 options to activate/deactivate engine sound 2:

- by selecting the function "Engine Sound 2 on/off" for a position in "Configuration" - "Proportional channels", "Nautic 1", "Nautic 2", or "EKMFA mode"
- by using the option "Turn on sound automatically by motion" in "Configuration" - "Engine Sound 2".

Furthermore, there is also the option when starting engine sound 2, to shut off the normal engine sound automatically - and vice versa. Thus it is easy possible to change between two different engine sounds.

However, functions as reversing sound/light or brake sound/light are not directly controlled by driving sound 2. These functions continue to be controlled through the throttle channel at the normal engine sound.

## Functions of the SFR-1-D

Additionally to the driving sound, the SFR-1-D offers more features, which can be controlled by the remote control.

Overview of all the functions:

<b>Additional sounds</b>	<ul style="list-style-type: none"> <li>• Trigger additional sounds 1 - 30</li> </ul>
<b>Outputs / Lighting functions</b>	<ul style="list-style-type: none"> <li>• Switching the outputs 1 - 16</li> <li>• Output sequence 1 - 8</li> <li>• Light switch +/-</li> <li>• Parking light</li> <li>• Low beam headlight</li> <li>• High beam headlight / headlight flasher</li> <li>• Front fog light</li> <li>• Rear fog light</li> <li>• Indicator left</li> <li>• Indicator right</li> <li>• Hazard lights</li> <li>• Driving Backwards</li> <li>• Brake light</li> <li>• Locomotive: Driving light</li> <li>• Ship: At anchor</li> <li>• Ship: In operation</li> <li>• Ship: Aground</li> <li>• Ship: Restricted in ability to manoeuvre</li> <li>• Ship: Unable to manoeuvre</li> </ul>

	<ul style="list-style-type: none"> <li>• Ship: Constrained by draught</li> <li>• Ship: Towing</li> <li>• Ship: Assisting</li> <li>• Ship: Fishing</li> <li>• Smoke generator</li> <li>• BB gun</li> </ul>
<b>Speed controller</b>	<ul style="list-style-type: none"> <li>• Change of direction</li> <li>• Throttle curve 2</li> <li>• Load regulation on / off</li> <li>• Mass inertia light / medium / heavy / off</li> <li>• Start setup</li> </ul>
<b>Other</b>	<ul style="list-style-type: none"> <li>• No function</li> <li>• Engine sound on/off</li> <li>• Engine sound 2 on/off</li> <li>• Random sound enable</li> <li>• Volume + and –</li> <li>• Mute</li> <li>• Play with the accelerator</li> <li>• Engine sound rpm change</li> <li>• Disable reversing sound</li> <li>• Software-Reset (rebooting the module)</li> <li>• Multi function 1-4</li> <li>• Function sequences 1 - 8</li> </ul>
<b>Motor M3 and M4</b>	<ul style="list-style-type: none"> <li>• Motor M3 left / right</li> <li>• Motor M4 left / right</li> </ul>
<b>WAV-Player</b>	<ul style="list-style-type: none"> <li>• Play / Stop</li> <li>• Pause</li> <li>• Track fwd</li> <li>• Track rev</li> <li>• Random</li> </ul>
<b>Servo functions</b>	<ul style="list-style-type: none"> <li>• Servo position 1 - 4</li> <li>• Servo sequence</li> </ul>

All functions can be triggered by the proportional channels #2 - #8, the Nautic-mode and the EKMFA-mode. The assignment in the Sound-Teacher is very flexible.

## Additional sounds 1 - 30

On top of the engine sound, the SFR-1-D can play up to 30 additional sounds. Typical sounds are e.g. horns, hydraulic and pneumatic noises, warning horns, shooting noises, Songs, radio calls, and so on. There are nearly no limits set to your imaginations.

To play an additional sound, it must be started over a start impuls. This can be done by using the proportional channels #2 - #8, the Nautic-mode or the EKMFA-mode.

Additional sounds 1 and 2 offer a special feature:

Each of these sounds consists of 3 single sound slots. When the additional sound 1 is started, the slot "**start**" is played first. Then the sound changes to the slot "**loop**" and plays this slot in an endless loop so long as the start signal for the additional sound 1 is still present. When the start signal for additional sound 1 disappears, the slot "**stop**" is played uniquely. Additional sound 2 works in the same way.

In this way, a sound like a ship horn with variable length (without a hard cut at the end), can be realized. Also for example a MG fire can be fitted with a great reverberation.

The start and stop slots are only options that can be used. You can let these slots also free.

For additional sounds 3-30 various play-back modes can be set up using the USM-RC Sound-Teacher. Thereby it is possible to fine-tune every additional sound to produce a perfect match to your particular mode.

The possible playback modes are now described. They differ also in that way, how the sound is started.

**Triggering with proportional channels #2 - #8 (as memory configured) or with EKMFA-mode:**

Mode	Function
Once / complete	When the sound is started, it is played exactly <u>once</u> , from start to finish, and then it stops. It is not possible to halt the sound prematurely; it is <u>always</u> played completely.
Once / immed. stop	When the sound is started, it is played exactly <u>once</u> , from start to finish, and then stops. However, if the sound is started again while it is already or still running, the sound is <u>stopped immediately</u> .
Loop / complete	When the sound is started, it is played again and again from start to finish in an <u>endless loop</u> . To switch the sound off again it must be virtually "started" again. The sound then runs from start to finish once more <u>completely</u> , and then it stops.
Loop / immed. stop	When the sound is started, it is played again and again from start to finish in an <u>endless loop</u> . To switch the sound off it must be virtually "started" again. The sound then <u>stops immediately</u> .

**Triggering with proportional channels #2 - #8 (as static configured), nautic-mode or switching-inputs:**

Mode	Function
Once / complete	When the sound is started, it is played exactly <u>once</u> , from start to finish, and then it stops. It is not possible to halt the sound prematurely; it is <u>always</u> played completely.
Once / immed. stop	When the sound is started, it is played exactly <u>once</u> , from start to finish, and then stops. However, if the input is switched off while it is still running, the sound is then <u>stopped immediately</u> .
Loop / complete	When the input is switched on, the sound is played again and again from start to finish in an <u>endless loop</u> . If the input is switched off again, the sound runs from start to finish once more <u>completely</u> , and then stops.
Loop / immed. stop	When the input is switched on, the sound is played again and again from start to finish in an <u>endless loop</u> . If the input is switched off again, the sound then <u>stops immediately</u> .

## Random sounds

Up to eight random sounds can be played with the SFR-1-D. The frequency of the sound play-back is determined by a random generator. The time spans (min/max) can be programmed by 1 – 250 s for every sound separately. In the same way the conditions (idling/drive - engine sound on/off) the sound should be played can be programmed for each of the 8 random sounds. For instance you can define that at a tank a randomized “chain squeaking” is played, but only during the drive and not in the idling.

Because the 8 random sounds run completely independent from each other, it can happen that two or three of the random sounds are played simultaneously. This can be blocked by activating the option "Don't play 2 random sounds at the same time".

In your Sound-Teacher you can also determine whether the random sounds should generally be enabled or you can activate/deactivate random sounds with your RC by setting the function "Random sound enable" for a position.

## WAV-Player

The WAV-Player of the SFR-1-D can be imagined as a kind of “MP3 player“. The difference is that the module plays WAV files instead of MP3 files.

The WAV-Player is primarily intended to play songs. But of course other sounds can be played, too.

In the Sound-Teacher, up to 30 tracks can be stored for the WAV-Player.

The WAV-Player is controlled by five functions:

- Play / Stop
- Pause
- Track forward
- Track reverse
- Random

These five functions can be done by using the proportional channels #2 - #6, the Nautic-mode or the EKMFA-mode.

### **Function “Play / Stop“:**

If this function is activated, the WAV-Player will start playback of the first track. If this function is activated again, the playback will be stopped. The playback of a track starts always from the beginning of the track.

If a track is played to the end, the player will jump to the next track. With the option “Stop play after each track“ you can choose, if the next track will be started automatically, or if the playback just stops.

After track 30 the internal counter will jump back to track 1.

By the way, the sound module always remembers the current track number. The next time the power supply is switched on, this track number "will be loaded" again. If any changes are made to the SD card via the Sound-Teacher, the track counter will be reset to track number one.

**Function „Pause“:**

If you activate the function "Pause", the playback of the current track pauses. Another activation of this function starts the playback at the same position again.

**Function "Track fwd":**

With this function, the player will jump to the next available track. It does not matter, if there are any gaps in the track list.

Was previously the random function enabled, a new, random track will be played.

**Function "Track rev":**

This function is normally used to go to the previous track. If this function is triggered while the current track is played for more than five seconds, the WAV-Player will not jump to the previous track; however it will go to the beginning of the current track.

Was previously the random function enabled, a new, random track will be played.

**Function „Random“:**

With this function a sound from a tracklist is randomly chosen and played. If you activate the function „Random“ while a track is still playing, this title stops and a new one starts.

**Functional assignment at proportional channels #1 - #8**

The proportional channel #1 and #2 are responsible for the speed recognition of M1 and M2.


The remaining 6 channels can be used with different functions.

Channel #3 - #8 are split into area "A, B, N, C and D". These five areas represent the positions of a joy-stick.

Area N is neutral and the center of the joy-stick.

The same principle is valid for a horizontal joy-stick. Area A is left and area D right.

The area range can be adjusted, by changing the four thresholds directly in the Sound-Teacher diagram.

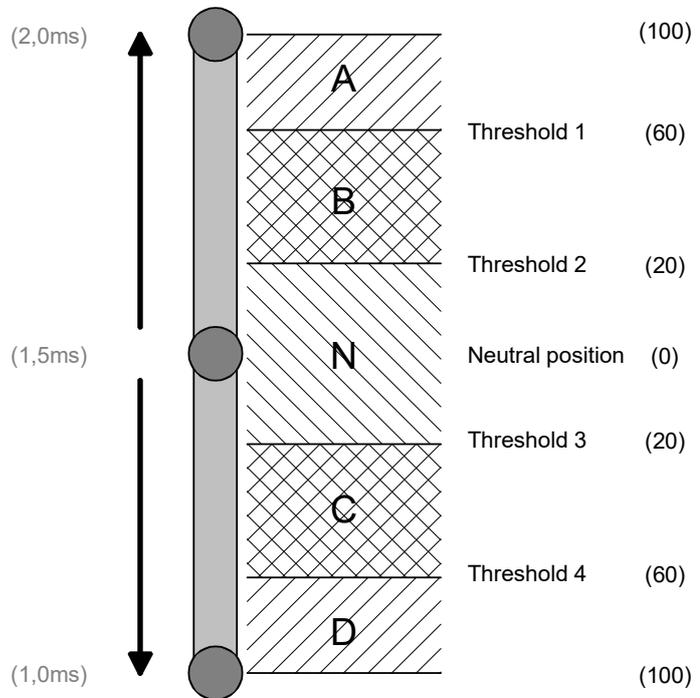

**Assignment of channels #2 - #8:**

Area	Functions		
	in position (>0,5s)	short in position (0,5-2,0s)	long in position (>2,0s)
<b>A</b>	function on (static)	function on/off (memory)	function on/off (memory)
<b>B</b>	function on (static)	function on/off (memory)	function on/off (memory)
<b>C</b>	function on (static)	function on/off (memory)	function on/off (memory)
<b>D</b>	function on (static)	function on/off (memory)	function on/off (memory)

Theoretically it is possible to use 12 functions at one proportional channel. But in practical terms this doesn't make sense. Avoid using an area with static and memory function at the same time.

Difference between static and memory function:

<b>Static</b>	<b>Memory</b>
<p>If a function is defined as static, it will be switched on <u>as long as</u> the joy-stick is in the corresponding area. If you leave the area, the function will be switched off again.</p>	<p>If a function is defined as memory and you move the joy-stick for the specified time (short or long) in the corresponding area, it will be switched on. If you leave the area, the function <u>remains</u> switched on (it is saved). It remains on, until the the joy-stick is moved in the corresponding area <u>again</u>. Exceptional are additional sounds with the setting "once" in "Additional sound". Despite a memory setting in "Configuration" the sound is played only once.</p>

You can read on page 24, which functions can be assigned to the 4 areas A, B, C and D.

### **Proportional channel #3**

In the standard setting, channel #3 is used for proportional steering of M3. However, it is possible do deactivate the steering function and use the channel as a „normal“ proportional channel.

### **Proportional channel #4**

In the standard setting, channel #4 is used for proportional steering of M4. It is possible do deactivate the steering function and use channel #4 as a „normal“ proportional channel.

### **Proportional channel #5**

Channel #5 can be used to trigger functions via EKMFA mode (see page 33) and Nautic/Multiswitch (see page 33).

### **Proportional channel #6**

Can be used for a second Nautic/Multiswitch.

### **Proportional channel #8**

Sum signals, such as S-BUS, SUMD and i-BUS (see page 34) are received via channel #8. This channel is also used for the bluetooth controller BTC-1.

A "normal" assignment (function triggering over the areas A, B, C and D) of the channels # 2 - # 8 are of course also possible.

### **Neutral position of channel #1 - #8**

In general, remote control manufacturer do not define a standard neutral position, therefore the neutral positions for the channels #1 - #8 are set up with the teaching function, see page 15.

**Hint:**

With the diagnosis function and the data cable K-USB-2 the neutral position of each channel can be checked. For more information, see page 91.

## Stick simulation via keys or switches

To use the functions of the proportional channels #3 - #8 conveniently, you can simulate the different potentiometer positions of a stick, through a simple keystroke. If you press the key S1, a joy-stick position is simulated for position A.

Often the available joy-sticks are already taken by other functions, but mostly the remote control has still other free channels. This schematic can be used for the channels to activate additional functions.

You need only six resistors and four switches for each channel (or two reversing switches with middle position). The small circuit can be easily built on a strip board.

With the indicated resistors values, this schematic works with all standard remote controls. If needed, you can also configure the thresholds of the five areas in the Sound-Teacher.

How and where this schematic is connected in the remote control, is unfortunately differs according to the radio type.


In some (Robbe/Futaba) remote controls an additional 68k ohm resistor is necessary, which has to be placed in the "S"- wire.

**Hint:**

Here again, we recommend using the diagnosis to check the construction.

You can buy this circuit as fully constructed module from us:

[SMS-R](#) (for Robbe) and [SMS-G](#) (for Graupner and all other manufacturers).

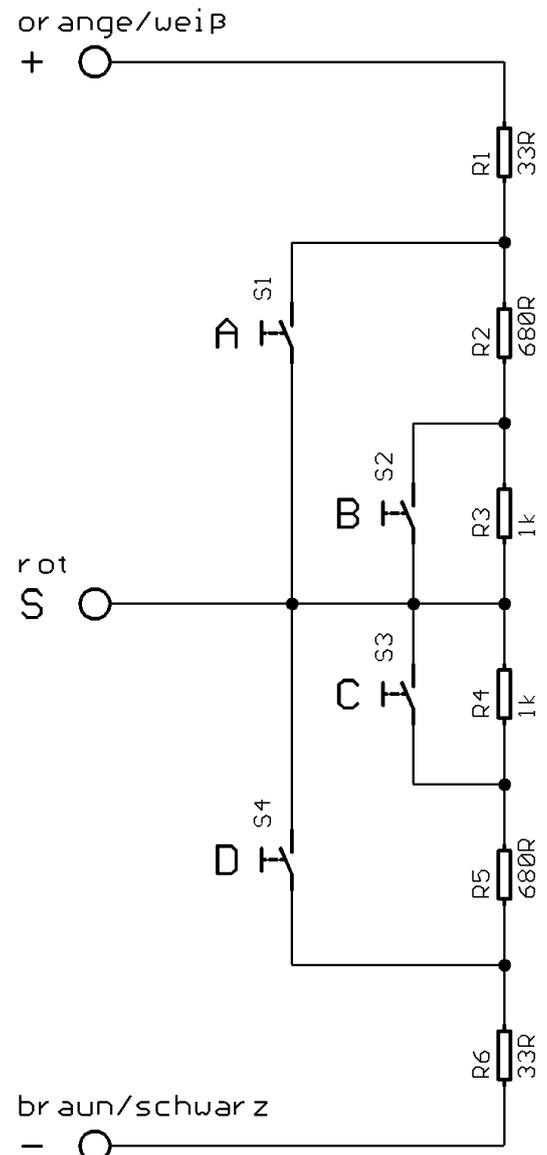

## One-channel multi-function selection (EKMFA)

To use the EKMFA mode it must be activated in the Sound-Teacher.

With the “One-channel multi-function selection” (EKMFA) you can control up to 30 functions of the SFR-1-D with only one proportional channel (channel #3).

You can assign in the Sound-Teacher the functions you would like to trigger with the EKMFA-mode (see page 68).

To trigger a particular sound or function, the transmitter switch or joy-stick must be moved from position N to position A or D for a certain number.

The last „function“ is always stored, enabling you to repeat the last sound or the last function as many times as you wish, without counting once more. Simply hold the joy-stick for one second in the position **B**, or **C** to repeat the last sound.

In order to switch the 16 outputs directly, they must be configured in the Sound-Teacher as “**static**“, “**flashing**“ or “**pulse**“. An output that is configured e.g. as reversing or brake light, cannot be switched on.

## Nautic mode / multiswitch mode

To use the nautic/multiswitch mode it must be activated in the Sound-Teacher under „Nautic 1“ or “Nautic 2“.

The nautic/multiswitch mode is probably the most convenient method of operating the SFR-1-D.

The SFR-1-D supports following switch modules (and modules compatible with them):

- BEIER-Electronic NMS-16-R, NMS-16-G and NMS-24-G
- BEIER-Electronic EMS-16-R, EMS-16-G and EMS-24-G
- BEIER-Electronic MSC-8-C, MSC-10-C and MSC-8-C-LCD
- Graupner Nautic-Expert Modul (Nr. 4108) and Multikanal
- Robbe Multi-Switch Module (Nr. 8084, 8101, 8413, F1511)
- Mergen/CP 12-Kanal and 16-Kanal Multiswitch

You can install up to two switch modules in your transmitter to control functions. With available space they can be built directly into the remote control or into an external housing (available in our shop).

Proportional channel #5 (X2/5) and/or channel #6 (X2/6) are connected to the receiver channel with servo patch cables.

Some of the latest remote controls include a “**software nautic module**”, such as Multikanal (multichannel) by Graupner. In most of these cases, all switches are transferred by one channel and no additional hardware switch module is necessary. Please refer to the operating instructions supplied with your transmitter for further details.

To each switch position different functions can be assigned in the Sound-Teacher (see page 67). If the memory function is active, the function is switched on or off when the switch is operated, and remains in that state until the switch is in the same position a second time.

With correctly received data from the switch module, the blue LED on the SFR-1-D always flashes at regular intervals.  
Exception: At EMS modules, the LED flashes only as long as a switch is triggered.

If the blue LED is not flashing regularly, or in case the nautic switches do not work at all, please check the settings at your transmitter. If you are unsure about this, please read the operating instructions supplied with your transmitter, as they generally provide information on the settings required for Nautic modules (e.g. servo travel at maximum).

In our BEIER-Electronic forum (FAQ), you will find a step by step guide in German for troubleshooting:  
Hilfe, mein Nautic-/Multiswitchmodul funktioniert nicht  
<https://www.beier-electronic.de/modellbau/forum/viewtopic.php?f=8&t=744>

If you are using a Jeti Duplex 2.4GHz, the “output period” of the receiver must be set on “byTransmitter” by the Jeti-Box. Other important setting: ATV High Limit: 2,20 ms, ATV Low Limit: 0,80 ms.

## Sum signals S-BUS, SUMD/SUMD3 and i-BUS

With the SFR-1-D it is possible to evaluate the sum signals „S-BUS“, „SUMD/SUMD3“ and „i-BUS“ of the receiver. **Up to 16 proportional channels can be transmitted via only one connection from the receiver to the SFR-1-D.** In order to use sum signals, the receiver must be suitable for sum signals. In the radio an activation might be necessary.

Using the sum signal up to 16 fully functional proportional channels, instead of 6, can be used to control functions.

The sum signal output of the receiver is connected to „**Prop #8**“ (X2/8) at the SFR-1-D.

The blue LED flashes at regular intervals with correct sum signals.

Using the Sound-Teacher all 16 channels of the sum signal can be assigned to one of the 16 proportional channels of the SFR-1-D.

It is important to use Prop #1 at the SFR-1-D for the throttle channel and Prop #2 for the steering channel of the transmitter.

### Digital switches at sum signal SUMD3

With sum signal "SUMD3" some remote controls (for example Graupner mz-16, mz-32) can transmit up to 64 digital switches. Each digital switch can be assigned with a function of the SFR-1-D (see page 65). Thus, these digital switches are ideal for controlling the various functions of the SFR-1-D.

Each digital switch can be set on the transmitter, in the "On/Off", "Pulse" and "Flash" modes.

For the following functions of the SFR-1-D the mode "**Pulse**" must be selected:

- Light switch + and Lightswitch -
- All WAV-Player functions (play, pause, track rev / fwd, random)
- Indicator left and indicator right
- All additional sounds, in mode „once“

The default 0.5 s can be retained in the transmitter as pulse time. The pulse time can also be reduced to 0.1 s, which speeds up the transmission a bit.

For all other functions of the SFR-1-D the mode "**On/Off**" should be selected.

### Switching outputs

The SFR-1-D has 16 outputs to connect consumer units such as LEDs, lamps, relays, smoke generators etc. Different switching functions and output types can be selected by using the Sound-Teacher (see page 71).

The SFR-1-D is always switching the negative pole to each output and thus to the connected load (e.g. LED, lamp, relay). The loads plus pole is connected directly to the supply voltage, or to the black and white cables of the output blocks (collected plus pole).

The intensity (PWM-control) of each output can be configured with the Sound-Teacher by steps of 2%, between 2% and 100%.

If relays or other inductive loads (e.g. motors) should be connected to the switching outputs, free-wheeling diodes must (e.g. 1N4007) be used.

Following output types are possible:

- Output static on
- Output flashing
- Output as pulse
- Output flickering (sound dependend)
- Daytime running light
- Parking light
- Low beam headlight
- High beam headlight
- Front fog light
- Rear fog light
- Brake light
- Reversing light
- Indicator left
- Indicator right
- Bending light left
- Bending light right
- Combined headlight
- Combined rear light
- Combined American rear light left
- Combined American rear light right
- In motion on
- In stationary on
- In stationary and motion on
- At accelerating on
- At driving speed on
- Locomotive: Driving light forward
- Locomotive: Driving light backward
- Ship: All-round light red top
- Ship: All-round light red middle
- Ship: All-round light red bottom
- Ship: All-round light green top
- Ship: All-round light white middle
- Ship: All-round light white botom
- Ship: 1. Masthead light
- Ship: 2. Masthead light
- Ship: Anchor light
- Ship: Side light
- Ship: Stern light
- Ship: Towing light
- Smoke generator
- Military vehicle: Black out headlamp
- Military vehicle: Disguise rear light
- Military vehicle: Disguise brake light
- Military vehicle: Guidance cross
- Temperature controlled

Following outputs must be activated with the „light name“ in the selection of functions and not with the output number: parking light, low/high beam light, front/rear fog light, indicator left/right and all „combined“ lights.

For example: the parking light is connected at output 1. To activate the light (via prop channel, nautic/multiswitch or light switch) the function „parking light“ and not „output 1“ must be selected.

### **Output “Static“ on**

An output with this setup can be switched on using a sound, a proportional channel, a nautic switch or the EKMFA-mode.

The output is always switched on as long as a sound is played, with which the output is activated in the Sound-Teacher or the output is switched on with one of the free allocable functions.

### **Output “Flashing“ on**

An output with this setup can be switched on using a sound, a proportional channel, a nautic switch or the EKMFA-mode.

The output flashes as long as a sound is played, with which the output is activated in the Sound-Teacher or the output is switched on with one of the free allocable functions.

The flashing frequency can be set separately for each output in the Sound-Teacher. The value for the flashing frequency is entered in field “**Option 1**“. Values within the range 1 to 255 can be set: 1 corresponds to the fastest flashing frequency (50 Hz) and 255 the slowest (0.196 Hz).

The flashing frequency can be calculated as following:  $f = 1 / (\text{value} \times 0.02)$ .

### **Output as “Pulse“**

An output with this setup can be switched on using a sound, a proportional channel, a nautic switch, the EKMFA-mode or a switching-input.

If the output is activated, it will be switched on for a limited period of time and then goes off again. A typical application is a short muzzle flash from a canone.

The pulse duration can be adjusted in the Sound-Teacher. The value for the pulse duration is entered in field “**Option 1**“. Values within the range 1 to 255 can be set: 1 corresponds to the shortest pulse duration (0.1 s) and 255 to the longest pulse duration (25.5 s).

The pulse duration can be calculated by multiplying the entered value with 0.1 s. A value of 5 means for example a pulse duration of 0.5 s.

### **Output “Flickering“ on**

An output with this setup can only be switched on using a sound. When this function is selected the outputs flicker at the same rhythm as the sound that is played currently.

This can be used to generate very impressive light effects, such as a simulation of fire or a welding torch.

The Sound-Teacher allows you to adjust the sensitivity of the flicker effect separately for each of the outputs. A value between 1 and 255 can be entered in the field "**Option 1**". The higher the value the higher the sound volume must be to activate the flicker effect.

### **Output „Daytime running light“**

The output for the daytime running light will be switched on, if the parking light and the low beam headlight are not switched on. When the parking light or low beam headlight are turned on, the brightness changes to the value of "**Option 1**". If this value is 0, the daytime running light is switched off when the parking light or low beam headlight are switched on. When the indicators are activated, the brightness of the daytime running light is switched to the value of "**Option 2**".

### **“Parking light“, “Low beam headlight“, “High beam headlight“, “Front fog light“ and “Rear fog light“ outputs**

The outputs for these lights are switched on as soon as the corresponding function is switched on. The function can be switched on using a proportional channel, a nautic switch or the EKMFA-mode.

Of course, you do not have to keep to this order. That means for example if you don't need a rear fog light, you can connect something else to the output.

The lights can be switches with the programmable light switch under "Configuration", "Outputs" and "Light switch" (see page 74).

### **Output “Reversing light”**

The output for the reverse driving light is always switched on when the vehicle runs backwards.

### **Output “Brake light“**

The brake light is always shortly turned on when the driving speed is reduced substantial. The sensitiveness can be configured in the Sound-Teacher (see page 72).

### **Outputs “Indicator left“ and “Indicator right“**

The outputs for the indicators can be switched on using proportional channel #2, a nautic switch or the EKMFA-mode.

If “American indicator mode” is selected, the indicator lights will come on, as soon as the parking light is switched on. The intensity for the “indicator parking light” can be adjusted in "**Option 1**" (e.g. 10 %).

If **hazard lights** are switched on, both indicators will start flashing at the same time.

At Configuration → Outputs → Output options additional settings can be made.

### **Outputs "Bending light left" and "Bending light right"**

These outputs can be turned on at cornering. There are 2 ways in which the bending lights can be turned on:

1. By steering on proportional channel #2 (X2/2)
2. By the indicator signal
3. By driving backwards

For more information about these two options, please look on the page 72. The bending lights can optionally also be front fog lights and can then also be switched by the function "Front fog light". The switching on and off of the bending lights is not immediate, but with a dimming function.

### **Output „Combined headlight“**

Using the combined headlight, **“parking light“**, **“low beam headlight“** and **“high beam headlight“** can be switched using just one output.

The Intensity for each of the 3 lights can be adjusted separately:

The intensity of the parking light is entered under **“intensity“**(e.g. 10 %).

The intensity of the low beam headlight is entered under **“Option 1“**(e.g. 30 %).

The intensity of the high beam headlight is entered under **“Option 2“**(z.B. 60 %).

However, it should be noted that these 3 intensities are added, if more than one light is switched on. Summing up, you should avoid a value that is over 100 %.

### **Output “Combined back light“**

Using the combined rearlight, **“parking light“**, **“brake light“** and **“rear fog light“** can be switched using just one output.

The Intensity for each of the three lights can be adjusted separately:

The intensity of the parking light is entered under **“Intensity“**(e.g. 10 %).

The intensity of the brake light is entered under **“Option 1“**(e.g. 30 %).

The intensity of the rear fog light is entered under **“Option 2“**(z.B. 60 %).

However, it should be noted that these three intensities are added, if more than one light is switched on. Summing up, you should avoid a value that is over 100 %.

### **Output „Combined American rear light left/right“**

This setting switches three light functions, namely „parking light“, “brake light” and “indicator right” respectively “indicator left” via only one output.

For each of this light functions you can set the intensity separately.

The intensity for “Parking light” is set at “Intensity” for example 10 %.

The intensity for “Brake light” is set at “Option 1” for example 100 %.

The intensity for “Indicator light” is set at “Option 2” for example 50 %.

In contrast to other combined lights, the intensities are not summarised!

### **Output „Locomotive – driving light forward/backward“**

These two output types are triggered via the function "Locomotive - Driving light". If the locomotive is moving forwards, the output "Locomotive - Driving light forward" is activated. If the locomotive runs backwards, the output "Locomotive - Driving light

backward" is activated. In stand always the last switched output remains switched on.

#### **Output "In motion on"**

This output is always switched on when the model is in motion, whether it is moving forwards or in reverse.

#### **Output "In stationary on"**

This output is always switched on when the model is stationary.

#### **Output „Stationary/Motion“**

With this function the output is always active, regardless of whether the model is moving or not. The value "Intensity" defines the light intensity during standing. "Option 1" defines the intensity when the model is in motion (0 - 100 %). The change between both light intensities is executed smoothly.

#### **Output "At accelerating on"**

This output is always switched on briefly as soon as the model accelerates from standing.

#### **Output "At driving speed on"**

This output is switched on when the model exceeds a defined running speed level. This level is entered under "Option 1".

#### **Output "Smoke generator - heater" and „Smoke generator - fan“**

These output types are for connecting a proportional smoke generator. Depending on the state (engine start, idle, accelerating and running speed) of the model, the output is controlled with varying intensity. Thus, smoke emissions (per fan) are produced to suit the particular situation.

With the output type "fan" a trailing can be set (see page 72).

The smoke emissions can be adjusted using the 3 parameters "Brightness", "Option 1" and "Option 2":

- At "**Brightness**" the intensity of the smoke emissions during engine start and acceleration can be set (e.g. 100 %).
- At "**Option 1**" the intensity of the smoke emissions while standing (e.g. 20 %) can be adjusted.
- At "**Option 2**" the maximum smoke intensity at **full running speed** (e.g. 90 %) can be defined. The corresponding smoke intensity at each speed level between start and full running speed is calculated automatically.

The output is activated via the the function "Smoke generator on" or automatically when turning on the driving sound (see page 72).

#### **Outputs for military vehicles: „Black out headlamp“, „Disguise rear light“, „Disguise brake light“ und „Guidance cross“**

These outputs can only be switches with the programmable light switch (see page 74) using the functions "light switch +" and "light switch -".

### Output „Temperature controlled“

If the motor output stage requires some cooling with an additional fan, the fan can be controlled via the existing temperature sensor. In Configuration → Outputs → Outputs you can define from which temperature the fan should be switched on ("Option 2") and at which temperature the fan should be switched off again ("Option 1").

### Navigation lights for ships

With these outputs the lights of ships can be authentically simulated. The lights are controlled using this logic-table:

	Output	All-round light red top	All-round light red middle	All-round light red bottom	All-round light green top	All-round light white middle	All-round light white bottom	1. Masthead light	2. Masthead light	Anchor light	Side light	Stern light	Towing light
Function													
At anchor										☀			
Aground		☀		☀						☀			
In operation								☀			☀	☀	
Restricted in ability to manoeuvre		☀		☀		☀		☀			☀	☀	
Unable to manoeuvre		☀		☀							☀	☀	
Constrained by draught		☀	☀	☀				☀			☀	☀	
Towing								☀	☀		☀	☀	☀
Assisting								☀	☀		☀	☀	
Fishing					☀		☀	☀			☀	☀	

☀ = output is active

☀ = output is only active, if the ship is in operation

This table is fixed stored in the firmware and can not be changed!

#### Example:

If the function "In operation" is active, the outputs which are configured as "1. Masthead", "Side light" and "Stern light" are switched on.

If you want to use light functions, the outputs must be configured (which light is connected to which output) and secondly the functions must be allocated to the control elements (e.g. nautic switch) of the transmitter. You should use "Memory" functions for this.

Some of the available functions are mutually exclusive. For example, a ship cannot be "At anchor" and be "In operation" at the same time.

The relationship between light functions and outputs (see table), are fixed and can not be changed!

The condition "In operation" can either be manually switched on with the function "Ship: In operation" (e.g. by using a Nautic switch), or automatically with the throttle channel on proportional channel #1.

If you want to use the automatic detection of "In operation" or "At anchor", you will have to switch them on in the configuration of the Sound-Teacher (see page 72). If the throttle stick is then not in neutral position (i.e. the ship operates), it will be switched to the condition "In operation". If the ship is stopped (throttle stick in neutral), the condition "In operation" will be switched off after an adjustable time and usually it will be switched over to the condition "At anchor". However, if in this moment there is still another condition active, like e.g. "Restricted in ability to manoeuvre" or "Towing", the condition will remain active and it will only be switched over to "at anchor" until the other condition is switched off.

If the automatic detection of "In operation" or "At anchor" is active, these conditions cannot be switched with the functions "Ship: In operation" and "Ship: At anchor".

Additional informations can be found in the [internet](#).

## Additional outputs

There are three additional outputs with fix functions:

### Output for BB gun (X14/1 und X14/2)

The output is intended for a so-called "BB gun". These BB guns are known from the tanks of Heng Long and Torro / Taigen and shoot small plastic balls. However, other loads can also be connected to this output. The output is switched using the "BB Gun" function.

### Output for smoke generator (X14/3 und X14/4)

A smoke generator can be connected to this output. Heater and fan are controlled via a common connection. If a smoke generator with separate connections for heating and fan is used, the heating can be connected to this output and the fan connection is made to one of the 16 switching outputs.

A smoke generator with up to 3 A can be connected to this output, which is higher than the other outputs. However, it is essential to check the max. current consumption! The output is activated with the "Smoke generator on" function.

### Output for Xenon flasher (X15/3 – X15/5)

A xenon flasher can be connected here. The flash always fires as soon as the "cannon shot" function is activated.

## Input „cannon shot“

At output X15/1 and X15/2 a „cannon shot“ can be activated. If X15/1 and X15/2 are connected with a switch contact, a cannon shot is started. A cannon shot has three parts:

- Additional sound „Cannon shot“
- Xenon flasher at X15
- IR shot with the battle unit at X16

A cannon shot can also be started independently of this input. Using the "cannon shot" function, this is also possible via a prop. channel, nautic / multiswitch switch, etc.

## Output sequences

You can assign any number of outputs in up to eight sequence groups.

In the Sound-Teacher up to 36 steps can be programmed for each of the eight sequences (see page 76). For every step, you can program which output is switched on and the intensity of the outputs.

Moreover, the duration of every step until it goes on to the next one can be configured.

Is an output sequence enabled, the sequence always takes precedence over the normal function (eg, indicators, parking lights, etc.) of the output. The normal function of the output is switched off during the active sequence.

With these output sequences, the most amazing light effects can be generated.

Examples:

- Rotating lights
- Moving lights
- Modern police flashlights
- Beacon lights for airplanes
- Switching on flickering of fluorescent lamps
- Any flickering lights and flash lights

Only one output sequence can be active at one time. A sequence stops as soon as a new one is activated.

## Servo outputs

The SFR-1-D offers four servo outputs (X5/1 - X5/4).

The servo outputs deliver usual pulses from 1,000 - 2,000 ms, so you can connect standard servos or speed-controllers.

The power supply for these servo outputs is the integrated BEC of the SFR-1-D.

There are two different ways to control the servo outputs:

1. Driving to fixed positions
2. Direct, proportional control via a prop. channel
3. Running through a programmed sequence

### **Driving to fixed positions:**

For each servo, up to five positions can be specified in the Sound-Teacher (see page 79), which can be approached via the freely assignable functions of the sound module. The positions have the following names:

- Home position
- Position #1
- Position #2
- Position #3
- Position #4

### **Direct, proportional control via a prop. Channel:**

Any desired prop. Channel can be assigned in the Sound-Teacher, which is to be used for the "direct servo control". The servo then behaves as if it were connected directly to the receiver. However, this makes it easy to play a sound as soon as the servo moves.

### **Running a programmed sequence:**

A flow sequence can be programmed for each servo output in the Sound-Teacher. Conceivable applications are e.g. a recoil system for a tank or an easy windshield wiper for a truck.

A servo sequence can be triggered with the functions "Servo 1 sequence", "Servo 2 sequence" or with a sound (e.g. a cannon shot). A detailed description of the servo sequence can be found on page 82.

A servo output can only be controlled either to a fix positions or as a sequence. Both versions are not possible at one servo output.

The servo movement can also trigger a sound. The additional sounds "Sound from servo 1-4" are responsible for this. It also distinguishes between left and right movement. So you can play for every direction of running a different sound.

If you don't want sounds while moving the servos, just leave these sound-slots empty.

## Function sequences

All functions that can be triggered with the sound module (see page 24) can be compiled to a special function sequence with defined order and time for each step.

More information can be found in this manual starting on page 84.

## Battle unit

A battle unit can be used to organize tank battles with infrared rays.

A battle system consists of an IR transmitter and an IR receiver. The connection is at X16. The plug is compatible with the battle units from Heng Long and Torro/Taigen.

### **Setting of battle unit:**

To activate the battle unit in your Sound Teacher see page 54.

Two different systems are supported:

- Torro/Taigen
- Heng Long

The systems are not compatible with each other, due to different transfer protocols.

### **How to shoot:**

An infrared shot is activated with the function „Additional sound“ – „Cannon shot“.

It is also possible to activate an infrared shot using input X15/2. A gun recoil unit with a switch for this function can be connected to this input as well.

### **Sounds for hits and destruction of the tank:**

Different sounds can be played when the tank is hit or destroyed. For this, the additional sound slots "Battle Unit - hit" and "Battle Unit - destroyed" need to be filled with a sound.

After 5 hits the tank is "destroyed" and the driving sound is switched off.

## Voltage monitoring

The connected supply voltage at X1/A+ and X1/A- is measured permanently. If the voltage drops below an adjustable value for longer than 10 seconds, different actions can be triggered:

- Playback of a warning sound at empty battery (e.g. „Please load battery“)
- Playback of a warning sound at undervoltage (e.g. „Attention undervoltage“)
- Switch off the sound module
- Switch off all outputs

Some battery types (e.g. LiPo-batteries) should not be subjected to deep discharge, because this can damage the battery! With the help of the integrated voltage monitoring, it is now possible to warn the user.

There are two thresholds in the Sound-Teacher:

- Threshold for charging battery
- Threshold for undervoltage

The thresholds of the voltage monitoring are freely adjustable and lies between 4,5 and 14,0 V.

Here is a list with usual values for different battery types:

Battery typ	Battery voltage	Threshold for charging battery	Threshold for voltage monitoring
Nickel-cadmium and nickel-metallhydrid	6,0 V (5 cells)	5,2 V	5,0 V
	7,2 V (6 cells)	6,2 V	6,0 V
	8,4 V (7 cells)	7,2 V	7,0 V
	9,6 V (8 cells)	8,2 V	8,0 V
	10,8 V (9 cells)	9,2 V	9,0 V
	12,0 V (10 cells)	10,2 V	10,0 V
	13,2 V (10 cells)	11,2 V	11,0 V
	14,4 V (12 cells)	12,2 V	12,0 V
	15,6 V (13 cells)	13,2 V	13,0 V
	16,8 V (14 cells)	14,2 V	14,0 V
Lead battery	6,0 V (3 cells)	5,2 V	5,0 V
	12,0 V (6 cells)	10,4 V	10,0 V
Lithium-Ionen	7,2 V (2 cells)	5,2 V	5,0 V
	10,8 V (3 cells)	7,7 V	7,5 V
Lithium-polymer (Lipo)	7,4 V (2 cells)	6,6 V	6,4 V
	11,1 V (3 cells)	9,9 V	9,6 V
	14,8 V (4 cells)	13,2 V	12,8 V
Lithium – iron phosphate (LiFe)	6,6 V (2 cells)	5,0 V	4,5 V
	9,9 V (3 cells)	7,5 V	6,6 V
	13,2 V (4 cells)	10,0 V	8,8 V
	16,5 V (5 cells)	12,5 V	11,0 V

These values are only guidelines, the best is to read the user manual of the battery, to find out the exact deep-discharge voltage.

## Current monitoring

The current is monitored of all 16 switching-outputs. In case of a detected overcurrent all outputs are switched off in order to protect them from damage.

Nevertheless, the outputs are not completely short circuit proof! Therefore you have to avoid short circuits at the outputs!

If an overcurrent is detected, the additional sound „Sound at overcurrent“ is played (if the slot is not empty) and the red LED on the sound module is also permanently switched on.

## LEDs on the SFR-1-D

There are three LEDs on the sound module to show different conditions.

### Green LED

The green LED always lights up while the supply voltage is connected to X1/A+ and X1/A-.

### Red and blue LED


These two LEDs shows different conditions and errors.

Status:

Error code	Status / Error	LED green	LED red	LED blue	Actions
1	No SD-card plugged in No data on the SD-card Unable to read SD-card	on	Fast flashing	on	No SD card plugged in, defect SD card or file →
3 - 11	File read or write error	on	Slow flashing	off	Use a new SD card, formatting SD card (FAT 32), transfer project file with Sound-Teacher
12	Error at amplifier	on	12 x slow flashing	off	Get into contact with BEIER-Electronic
15	Overcurrent at switching outputs	on	on	off	Control of connections and sum current of all outputs
16	Undervoltage	on	aus	Slow flashing	Control of battery voltage, charge battery
17	Overtemperature	on	Slow flashing	off	Control and improvement of air circulation and cooling
18	Overcurrent at motor M1 – M2	on	Fast flashing	off	Control of motor and motor connection
19	Overcurrent at motor M3 – M4	on	Fast flashing	off	Control of motor and motor connection
	Throttle channel has not been in neutral yet	Slow flashing			Put throttle stick to middle position (neutral)
	Teaching/setup active	Fast flashing			Setup function is active in order to learn all neutral positions
	Teaching/setup active, no signal at throttle channel	Fast flashing	on		Turn on transmitter/remote control, check connection cable at throttle channel
	Nautic/Multiswitch or sum signal correctly received			Fast flashing	-

## PC software „SFR-1-D Sound-Teacher“

With our software „SFR-1-D Sound-Teacher“ the module can be configured and sound files can be transferred to the SD-card.

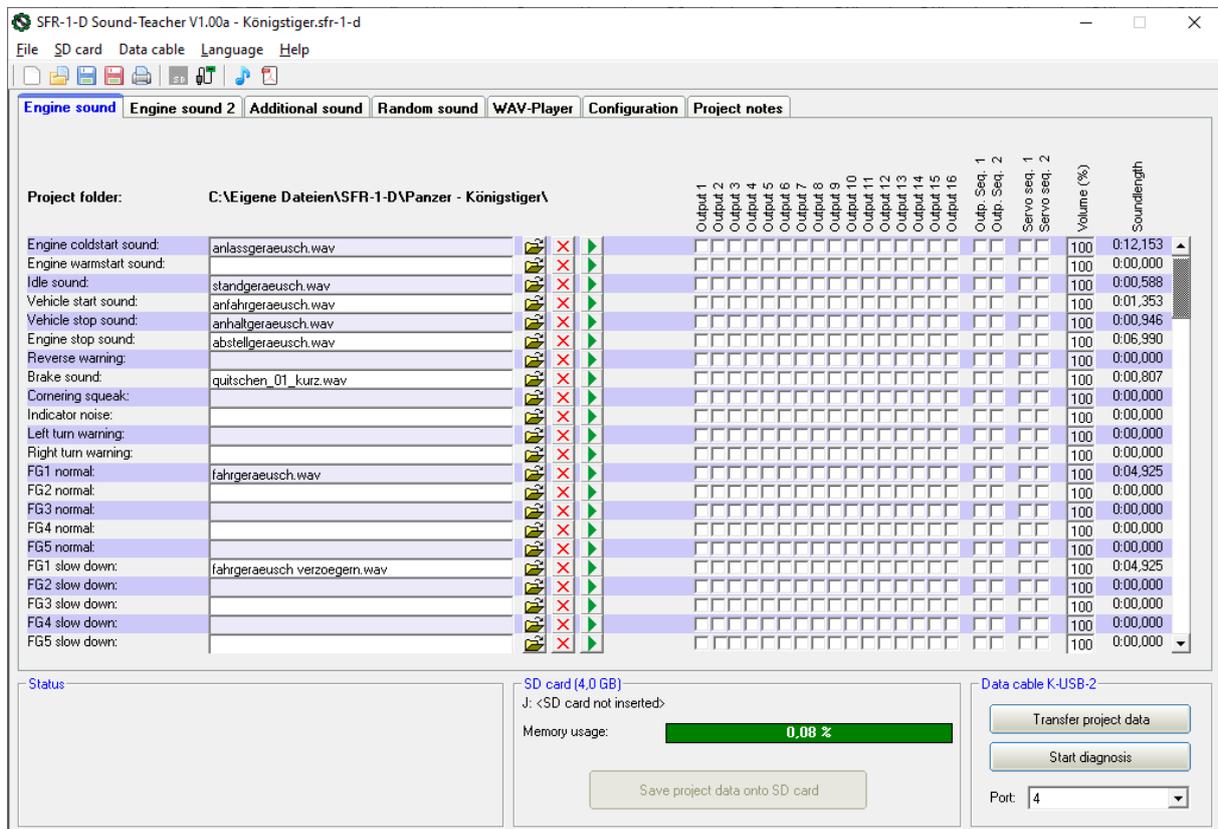


### System requirements

- Windows compatible PC
- Windows 2000, NT, XP, Vista, Windows 7, Windows 8 or Windows 10
- about 20 MB of free HD space
- SD-cardreader or a free USB interface (1.0, 1.1, 2.0 or 3.0)
- DVD-ROM drive

### Software installation

In most cases the “SFR-Installer” starts automatically when you insert the DVD-ROM. If this does not occur, please start the file „SFR-Installer.exe” which is in the main folder on the DVD-ROM.

To install the Sound-Teacher, click on the „SFR-1-D Sound-Teacher” button and follow the further instructions on the screen.

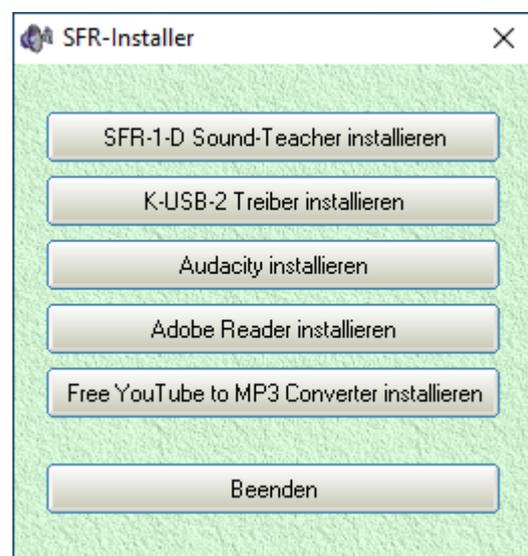

### **Starting the Sound-Teacher**

During the installation of the Sound-Teacher an entry is added to the start menu, which can be used to start the program. Click on the “Start” button at the bottom left-hand corner of the screen then on “Programs”, on to “SFR-1-D Sound-Teacher” and finally click on “SFR-1-D Sound-Teacher”. The program should now start.

If you chose to place an icon on the desktop during the installation procedure you can start the program by double-clicking on that icon.

When the program starts, it automatically opens the project on which you last worked.

### **Brief instructions for loading new sounds onto SD-card**

Please follow the instructions below, for transferring a new sound onto SD card:

1. Insert the SD card into a cardreader, which is connected to the PC.
2. Start the SFR-1-D Sound-Teacher.
3. Chose the SD card in the menu “**SD card**”.
4. Klick in the menu “**File**” on “**Open project**”.
5. Now select the desired sound project (.sfr-1-d file) e.g. from the “SFR-1-D Sounds” folder on the DVD-ROM, and click on the button “**Open**”.
6. If required, the configuration of the project can be changed.
7. Press the button “**Save project data onto SD card**”.

## Using software „SFR-1-D Sound-Teacher“

### Menue


<b>File</b>	<b>Create new project</b>	Creates a new project
	<b>Open project</b>	Opens an existing project
	<b>Save project</b>	Saves the current project
	<b>Save project as</b>	Saves a copy of the current project with a new name
	<b>Print function assignment of the project</b>	Prints an overview of the function assignments of all inputs and outputs
	<b>Upload project data via datacable</b>	Uploads the complete project data via datacable to the sound module
	<b>Check automatically for updates</b>	On every start of the Sound-Teacher, it will be checked if a new version is available
	<b>Check now manually for updates</b>	Checks if a new version is available
	<b>Download sounds from the internet</b>	Downloads new sounds from the internet
	<b>Open Sound-Center</b>	Opens the BEIER-Electronic Sound-Center, a sound data base from our cutomers
<b>SD card</b>	<b>Diagnosis via SD card</b>	Shows saved diagnostic data of the SFR-1-D stored on the SD card
	<b>Formating SD card</b>	Formates (erases) the SD card
	<b>D: to Z:</b>	Choses the SD card
<b>Data cable</b>	<b>Transfer speed</b>	Change of data transmission speed
	<b>Upload project data with data cable</b>	Transfer of project data to SD card by data cable
	<b>Diagnosis via datacable</b>	Shows live diagnostic data of the SFR-1-D with the datacable
	<b>Control SFR-1-D functions with data cable</b>	Functions can be triggered with the data cyble without radio
<b>Language</b>	<b>German</b>	Switches to German language
	<b>English</b>	Switches to English language
	<b>French</b>	Switches to French language
<b>Help</b>	<b>Operating manual</b>	Opens this manual (PDF)
	<b>Forum: SFR-1-D Support</b>	Opens the BEIER-Electronic forum at: SFR-1-D
	<b>Forum: FAQ</b>	Opens the BEIER-Electronic Forum at: FAQ
	<b>Facebook</b>	Opens the Facebook page from BEIER-Electronic
	<b>Sound-Simulation</b>	You can check e. g. the drive sound with the sound simulation without uploading data into the sound module
	<b>Info</b>	Shows informations about the software

## Configuring sounds

A lot of different sounds can be saved in the sound slots of the SFR-1-D. The sounds are divided into five different parts:

- Engine sound
- Engine sound 2
- Additional sounds
- Random sounds
- WAV-Player

Click with the mouse on the corresponding tab to configure a sound.

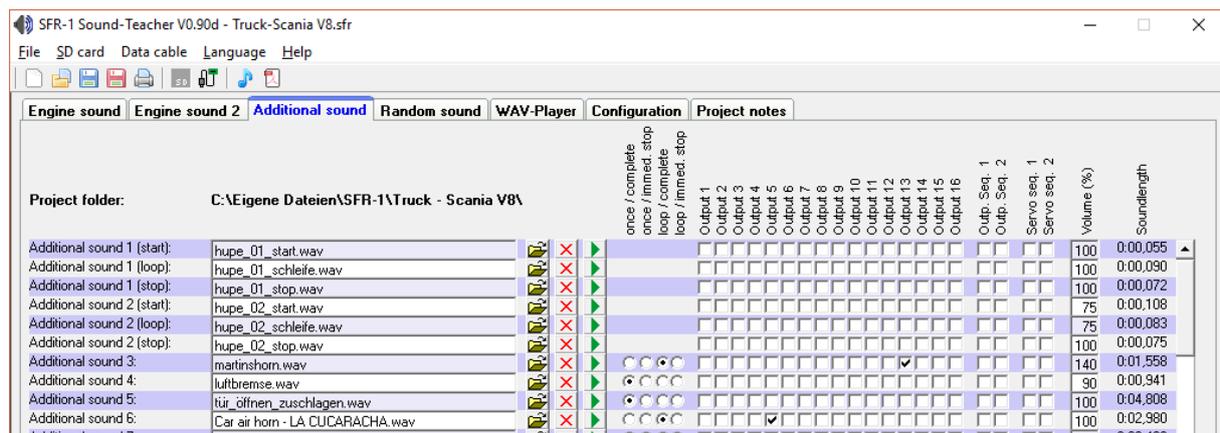

<b>Project folder</b>	Indicates the folder where the sound project is to be saved.
<b>Slot name</b>	Indicates the name of this slot, i.e. what sort of sound can be saved here (e.g. engine start sound).
<b>File</b>	File name of the WAV file which is saved in this slot.
	This button is used to load a new sound file into the slot.
	Erases the file from the slot.
	Plays back the file via the PC's integral loudspeaker.
<b>Playback mode</b>	At this point you can select the different play-back modes
<b>Outputs/Sequences</b>	Determines which outputs or output sequences are used when particular sounds are played back.
<b>Volume</b>	The volume of every sound can be changed here.
<b>Soundlength</b>	Shows length of the sound.

## Opening of sound files

The folder „Sounds“ on the DVD contains general examples of soundfiles.

The folder „SFR-1-D Sounds“ contains drive sounds for a lot of different vehicles.


With a click on the button, the Windows “file open dialog” opens, in which you can select the wanted sound file on your hard disk.

### All WAV-files with following properties can be opened:

- 22,050 kHz or 44,100 kHz
- 8 Bit or 16 Bit
- Mono or Stereo

The Sound-Teacher always converts the soundfile into the format 44,1 kHz, 16 Bit, mono. To get a good sound, the WAV file should be in this format.

If you want to open a file, which is not in the required format, a message appears. If you still want to use this file, you must convert it first using a suitable program (e.g. Audacity).

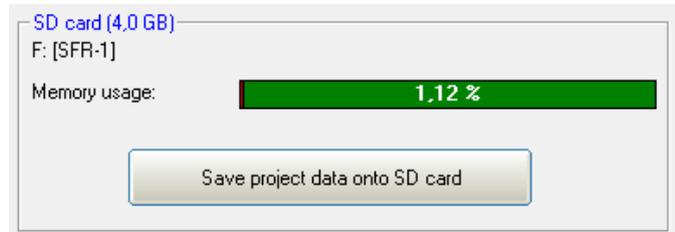

**Memory usage** indicates how much memory on the SD card is in use by the current project.

After finishing the selection of sounds and configurations, we recommend to save the complete project (**File → Save project**) on your hard drive. All settings of the sound slots and the complete configurations of the module are stored into one project file (\*.sfr).

Therefore the Sound-Teacher asks, when you are saving a project, to copy all files to the project directory.

### **Configuring the sound module**

Click on the “**configuration**” tab in order to carry out adjustments to the SFR-1-D.

The settings are divided up into different ranges:

- General
- Speed Controller
- Engine sound
- Random sound
- S-BUS / SUMD
- Proportional channels
- Nautic / multiswitch
- EKMFA mode
- Inputs
- Outputs
- Servo outputs
- Function sequences

If you change a value in your configuration, the project files must be transferred directly or via datacable to your SD card!

While saving a project, the sound settings of the slots and the configuration of the SFR-1-D are stored together in the project file.

## Configuration - General

The screenshot shows the 'Configuration' tab of the SFR-1-D software. It features several configuration panels:

- Module configuration:** Includes checkboxes for 'Servo outputs for digital servos (10 ms)' and 'Record diagnosis data on SD card', and a 'Startup function' dropdown.
- Volume:** Includes a 'Volume (%)' slider set to 100, 'Direct volume control' with a 'Prop #5' dropdown, and 'Dynamic engine sound volume' set to 20%.
- Battery voltage monitoring:** Includes 'Battery type' (LiPo 2S 7.4V), 'Repetition' settings, 'Threshold charge battery (V)' (6.6, 240 s), and 'Undervoltage threshold (V)' (6.4, 60 s). Checkboxes are present for 'At undervoltage: Turn sound off' and 'At undervoltage: Turn outputs off'.
- Multi function:** Four sections (Multi function 1-4) each with 'Function 1', 'Function 2', and 'Function 3' dropdown menus.
- Battle unit:** 'Battle unit type' dropdown set to 'Torro / Taigen'.
- WAV-Player:** 'Stop play after each track' checkbox.
- Bluetooth controller:** 'Activate Bluetooth on X2/8' checkbox and 'PIN' field set to 0000.

### SFR-1-D configuration

If digital servos are connected to the servo outputs, the speed of the pulse output on the servo outputs can be reduced from the standard 20 ms to 10 ms. Some digital servos work better with 10 ms than 20 ms.

For troubleshooting while the module is running, the diagnostic data (e.g. data the soundmodule gets from the receiver) can be saved on SD card. This data can be read out and displayed in the Sound-Teacher (see page 91).

Hint:

More comfortable is the live diagnosis function with the data cable K-USB-2.

### Warning!

**Only use this diagnosis function for troubleshooting and switch it off afterwards!**

**If the diagnosis function is activated, the sound playback may be faulty.**

### Volume

You can also configure the basic volume (10-100%) of the module here. This function is helpful if you don't use a volume control potentiometer. The volume can also be adjusted e.g. with a proportional channel configured with the functions "Volume +" and "Volume -".

Another option to change the volume with the transmitter is the "Direct volume control". One of the four proportional channels can be used for a stepless volume setting. You need a free slide or rotary control at your transmitter for that. However, this proportional channel can only be used for adjusting the volume and not for any other functions anymore!

To get a more realistic driving sound, a dynamic engine sound volume adjustment can be activated. The volume of the engine sound gets louder depending on the acceleration and speed and during cornering. Whenever the engine needs more

power, the volume lever rises. In standing position the volume is automatically by this percentage less! Therefore, we recommend selecting a low value at this setting.

#### Battery voltage monitoring

The type of battery used can be selected here. The thresholds for "charge battery" and "undervoltage" are adjusted for each battery type. If your battery type is not included, both values can also be set manually.

If the battery voltage is permanently below the respective threshold, the warning message is repeated over and over again within an adjustable time (10 - 250 s).

The corresponding warning sounds must be stored in the Sound-Teacher under "Additional sounds" (at the bottom). You will find sound templates on the DVD.

In addition, you can choose whether the sound output and / or the switching outputs should also be switched off in the event of undervoltage. The warning sound "Sound at undervoltage" is still played.

#### Multi function

Up to 3 functions can be assigned to each of the 4 multi functions. Using the multi function 3 functions can be activated at the same time, using only one position at the transmitter.

For instance: You would like to activate a searchlight and at the same time a servo sequence should be activated as well. This servo sequence controls a servo, which moves the searchlight. Without the multi function you would need 2 functions, triggered at the transmitter:

- a. Output x on
- b. Servo sequence x on

Using the multi function you can activate at the same time both, the output and the servo sequence by triggering only one function at the transmitter.

#### Battle unit

The type of battle unit can be chosen here. See page 45 for additional information.

#### WAV-Player

The WAV-Player setting can be configured here. You can choose whether the next track should start automatically after finishing the previous track or the playback should stop.

#### Bluetooth controller:

If you want to control the SFR-1-D via the Android app "[SFR-1 Controller](#)" with the Bluetooth module [BTC-1](#), this must be activated here. A 4-digit PIN protects the model from being controlled by others. Only if the same PIN is set in the app, the SFR-1-D can be controlled with it. The default PIN is: 0000

## Configuration – Speed Controller – Motor M1 + M2

### Dual mixer

If no mixer function is used, both motors M1 and M2 can be used completely separate. Prop #1 (X2/1) controls motor M1 and prop #2 (X2/2) motor M2, just like two separate speed controller.

For tracked vehicles and ships with two drive motors different dual mixer are available. Dual mixer combine the information of throttle channel #1 and steering channel #2 and control both motors consequently.

Dual mixer #1:	Standard dual mixer (mixing ratio 1:1)
Dual mixer #2:	Less steering than with dual mixer #1 (mixing ratio 1:0,75)
Dual mixer #3:	Less steering than with dual mixer #2 (mixing ratio 1:0,5)
Dual mixer #4:	Like dual mixer # 1, however, only 1 chain is activated at table turning

There are also 3 different variants possible for controlling the two motors via an electronic differential. Here, both motors are always controlled together via the throttle channel #1. The electronic differential sets the ratio as the speed is distributed to both motors. This variant is not suitable for tracked vehicles, because steering is not possible.

- At "Differential via throttle curves", throttle curve 1 sets the speed for motor M1. The throttle curve 2 sets the speed for motor M2.
- With „Differential via X2“ the speed distribution is controlled via prop #2. If #2 is neutral, both motors are running at the same speed. According to direction and level of #2, the speed of one motor is reduced proportionally. The value (10 – 100%) indicates the speed of the slower motor at full range of #2.
- At "Differential with fixed value", the speed ratio of the two motors is set via a fixed value. Motor M1 is always the faster motor. Motor M2 is the slower motor. For example, with a value of 50 %, motor M2 always runs half the speed of motor M1.

#### Channel reversion

In case a motor is running in the opposite direction (backwards instead of forwards) it can be inverted here.

With dual mixer it is also possible to invert the steering while driving backwards.

#### Load regulation

With activated load regulation one of the different regulation intensities (light, medium and heavy) can be set here.

#### Inertia

To simulate a very heavy vehicle the option mass inertia can be activated here. Acceleration and deceleration are slowed down for a realistic driving behaviour. Keep in mind: the vehicle also has a longer stopping distance!

With a proportional channel or a nautic/multiswitch and the function "Inertia light, medium, heavy and off" different intensities of inertia can be set while driving.

#### Hardness of handbrake

Here you can determine how strong (off, soft, medium, hard) the handbrake is.

The handbrake can be active only while parking/standing. Without this option, the handbrake hits as soon as the throttle is in neutral position and the vehicle is still rolling.

#### Recoil when cannon shot

If the "Cannon shot" function is triggered, a recoil of the model can be simulated. For this purpose, motors M1 and M2 are briefly driven backwards and then immediately forwards again. There are 4 levels (off, light, medium, heavy) to choose from. However, the recoil is only performed when the model is stationary.

Caution: Since the mechanics, the gearbox, the motors and the speed controllers are very stressed during the recoil, the strength of the recoil should not be set too high!

### Throttle curve 1 and 2


Using the curve, the proportion between throttle signal and driving behaviour can be set in the diagram. Both driving directions (backwards and forwards) have 10 values (at 10 %, 20 %, 30 %, 40 %, 50 %, 60 %, 70 %, 80 %, 90 % and 100 % of throttle signal) to adjust the driving behaviour.

For example a very sensitive acceleration behaviour for driving slowly or a limited maximum speed can be set.


With „reset“ the curve returns to its initial values.

The throttle curve 2 can be activated with a function while driving. This enables for example to use throttle curve 1 for normal driving and throttle curve 2 for maneuvering with very sensitive acceleration behaviour.

Example for normal driving:

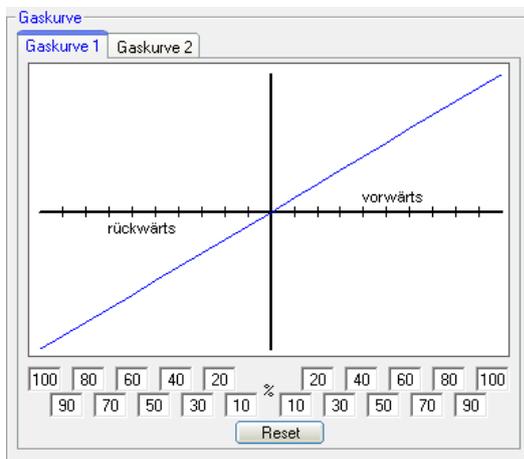

Example for maneuvering:

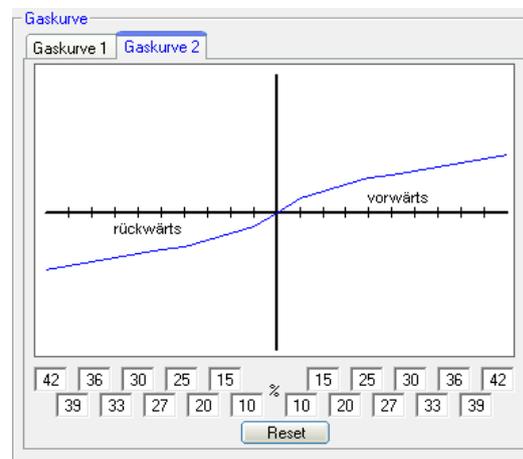

## Configuration – Speed Controller – Motor M3 + M4

The screenshot shows a software configuration window for a speed controller. At the top, there are several tabs: 'Engine sound', 'Engine sound 2', 'Additional sound', 'Random sound', 'WAV-Player', 'Configuration' (which is selected), and 'Project notes'. Below these are sub-tabs for 'General', 'Speed controller', 'Engine sound', 'Random sounds', 'S-BUS/SUMD', 'Proportional channels', 'Nautic/Multiswitch', 'EKMFA', 'Control pad', 'Outputs', 'Servo outputs', and 'Function sequences'. The main area is divided into two sections: 'Motor M3' and 'Motor M4'.  
 For Motor M3:  
 - Label: 'Cannon up/down'  
 - Control method: 'Control motor output via functions 'left' / 'right'' (selected with a radio button)  
 - Speed: 70%  
 - Alternative control: 'Control motor output via prop. channel' (not selected)  
 - Speed from channel: a dropdown menu showing a dash '-'  
 For Motor M4:  
 - Label: 'Turn towed'  
 - Control method: 'Control motor output via functions 'left' / 'right'' (not selected)  
 - Speed: 100%  
 - Alternative control: 'Control motor output via prop. channel' (selected with a radio button)  
 - Speed from channel: a dropdown menu showing 'Prop #4'

Different settings for auxiliary drives can be configured here. M3 and M4 can be labeled with an own name.

Two options are available to control M3 and M4:

### Control motor via function „left / right“

With this function, the motor has a fix speed level between 10 and 100 %. With the functions „Motor M3/M4 left/right“ the motor is accelerated (left or right) to the set speed level. Hence, the motor has 3 conditions: turning left / stop / turning right.

With this setting no complete prop. channel is used. It is also possible to activate the motors with a nautic/multiswitch or the bluetooth app SFR-1-D controller. However, it is not possible to control the motor speed proportional and steplessly.

### Control motor via one proportional channel

With this setting the speed of motor M3 and M4 can be controlled proportional and stepless with any SFR-1-D prop. channel.

In additional sound a sound for M3 and M4 can be set. The sound is played automatically as long as the motor is turning.

## Configuration – Engine Sound – Engine Sound

The screenshot displays the configuration window for the 'Engine sound' module. The 'Engine sound options' section is active, showing several settings:

- Average of M1 and M2
- Threshold for slow down: 4
- Threshold for speed up: 4
- Fast switching
- Threshold for brake noise: 15
- Threshold cornering squeak: 70
- Turn warning sound up to speed: 100%
- Turn on engine sound automatically by motion
- And turn off after: 10 sec. in stationary
- Driving is only possible when the engine sound is on
- Time for warmstart: 20
- Rpm change when triggering function: -30%
- Engine sound rpm change: -30%

The 'Speed steps / gears' section shows:

- Gears forward: 3
- Gears backward: 1
- Zero point deadband: 5
- Stationary/motion/gear hysteresis: 5

A graph on the right illustrates the engine sound level (Y-axis, 60% to 300%) across different gear steps (FG1, FG2, FG3) for backward and forward directions. The sound level is 100% at 0% speed and increases to 200% at 100% speed for each gear step.

### Engine sound options

With no setting the engine sound of the faster motor is played. Optionally the average of both motors can be used for the engine sound.

Thresholds for slow down and speed up:

These thresholds set how strong the speed must be changed so that the normal driving sound is changed to deceleration or acceleration.

If you activate “fast switching”, the module immediately switches when the speed changes. This is particularly useful for long sounds in the driving sound slots. If the module is required to simulate a slow-revving engine (e.g. single-cylinder motor), fast switching should be deactivated. In this case vehicle starting and stopping sounds are not played, as well.

Brake noise:

The brake sound threshold determines how strongly the vehicle must be decelerated before the brake sound is played. Values between 1 and 30 are possible. The higher the threshold, the stronger the deceleration must be in order to activate the brake noise.

Cornering squeak:

As soon as the vehicle is turning, the cornering squeak is played. The higher the value is, the more the steering must be to trigger the cornering squeak. Values between 20 and 127 are possible.

The threshold for the turn warning sound determines up to which driving speed, the turn warning sound should be played.

Automatic driving sound activation:

As an option you can select an automatic driving sound activation (see page 22). The engine sound always switches on automatically, as soon as you move the

throttle stick shortly while standing. After an adjustable time the engine sound turns off automatically.

Driving is only possible when the engine sound is on:

If this option is activated, the model can only be driven if the engine sound has been switched on before.

Time for warmstart:

If both sounds "Engine coldstart sound" and "Engine warmstart sound" are used, the time can be specified which determines how long the driving sound had to be turned off in order to play the coldstart sound instead of the warmstart sound after a new start.

Speed change when triggering function "Engine sound rpm change":

Here you can setup the change of the rpm for idle or driving sound between a range of -50% and +50%. Minus values make the sound slower and positive values faster. With this setting you change the speed of the actual sound (idle or driving sound). It initiates no change between idle and driving sound. This function is quite useful for example if you want to change the speed of a hydraulic pump of a construction machine.

Speed steps/gears

Gears forward/backward:

Here you can choose how many different driving sounds or gears, the engine sound should have.

When option "Play change sound parallel to engine sound" is activated, the driving sound changes immediately from the old to the new engine sound and the change sound is played simultaneously during this change. If this option is not activated, the old engine sound stops, the change-sound is played and after that the new engine sound starts.

As an additional option, it is possible to skip gearshift and downshift at stopping. If this option is activated, the engine sound will directly jump to FG1 when you stop the model.

Zero point deadband threshold:

When the vehicle is standing, i.e. the drive motors are not running, but the sound module is not generating the idle sound. If it occasionally plays the driving sound instead, then this value should be raised slightly.

On the other hand, if the idle sound continues to play even though the vehicle is no longer stationary, then this value can be reduced slightly.

Stationary/motion/gear hysteresis:

When the vehicle is moving very slowly and the sound constantly alternates between idle and running sound, then this value should be raised slightly.

Also if the engine sound alternates steadily between two speed steps/gears while driving, this value should be raised slightly, as well.

Driving sound diagram:

The diagram shows graphically which driving sound/gear is played at the corresponding speed. In addition it is possible to set the driving sound directly in the diagram (see page 88).

## Configuration - Engine Sound - Engine Sound 2



Different parameters for engine sound 2 can be configured in this section.

Speed via proportional channels:

Proportional channels #1 - #8 can be used as source/recognition for speed.

Zero point:

The neutral position of the throttle stick can be set between 1.00 - 2.00 ms. Most transmitter and speed controller have its zero point at 1.50 ms.

Zero point deadband:

For the throttle control an area can be defined with this deadband, where the stationary sound for engine sound 2 should be played. This area ranges between 1 and 30.

Maximum sound speed:

The sound speed at full power can be set between 60% and 300%.

Activate the option "When starting engine sound 1 or 2, turn off the other", when you never want to use both engine sounds at the same time. If you are running your model with engine sound 1 and you activate engine sound 2, the first engine sound is automatically turned off. If the first engine sound is activated again, the second engine sound goes off automatically.

Additionally you can choose whether changing sounds between the two engine sounds, like starting and stopping sounds should be played.

With the option "Turn on engine sound automatically by motion" it can be determined, that the second driving sound automatically turns on as soon as the throttle control for the engine sound 2 is out of neutral position. This is useful, for example, if you want to realize a tank turret rotation. Otherwise, you need to activate engine sound 2 first with the function "Engine sound 2 on/off".

## Configuration - Random sounds

	Time (sec.)		Stat. Motion		Engine sound	
	min.	max.			off	on
Random sound 1: (hydraulik_1.wav)	5	20	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Random sound 2: (hydraulik_2.wav)	50	100	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Random sound 3: (luftbremse_1.wav...)	60	180	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Random sound 4: (luftbremse_2.wav...)	30	200	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Random sound 5:	1	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Random sound 6:	1	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Random sound 7:	1	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Random sound 8:	1	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Random sound always enabled  
 Random sound only enabled, when function 'Random sound enable' is active  
 Don't play 2 random sounds at the same time

### Random sounds

If you want to play random sounds (see page 28), you can set the time in which interval a random sounds should be triggered. The time ranges between 1 and 999 seconds.

With the checkboxes it is also possible to define conditions when random sounds should be activated, i.e. whether the random sounds are played only when the model is stationary and / or moving, or whether the engine sound must be on and / or off.

If a random sound should be played, at least one checkbox at each side of the „&“ symbol must be activated.

You can also select whether random sounds generally should be played or only when the function "Random sound enable" is activated, for example by a proportional channel.

If the option "Don't play 2 random sounds at the same time" is activated, only one random sound can be played, otherwise 2 or more random sound could be played simultaneously.

## Configuration - S-BUS / SUMD

Engine sound		Engine sound 2		Additional sound		Random sound		WAV-Player		Configuration		Project notes																																																																																																																																																																																	
General		Speed controller		Engine sound		Random sounds		S-BUS/SUMD		Proportional channels		Nautic/Multiswitch																																																																																																																																																																																	
<b>S-BUS / SUMD</b>																																																																																																																																																																																													
<input type="checkbox"/> Activate S-BUS at X2/8 <input checked="" type="checkbox"/> Activate SUMD at X2/8 <input type="checkbox"/> Activate i-BUS at X2/8																																																																																																																																																																																													
<table border="0"> <tr> <td>Prop #1:</td> <td>S-BUS / SUMD Ch. 1</td> <td>DS 1:</td> <td>Engine sound on/off</td> <td>DS 23:</td> <td>-</td> <td>DS 45:</td> <td>-</td> </tr> <tr> <td>Prop #2:</td> <td>S-BUS / SUMD Ch. 2</td> <td>DS 2:</td> <td>Volume +</td> <td>DS 24:</td> <td>-</td> <td>DS 46:</td> <td>-</td> </tr> <tr> <td>Prop #3:</td> <td>S-BUS / SUMD Ch. 3</td> <td>DS 3:</td> <td>Volume -</td> <td>DS 25:</td> <td>Additional sound 1 (hupe_01_schl)</td> <td>DS 47:</td> <td>-</td> </tr> <tr> <td>Prop #4:</td> <td>S-BUS / SUMD Ch. 4</td> <td>DS 4:</td> <td>Parking light</td> <td>DS 26:</td> <td>Additional sound 2 (hupe_02_schl)</td> <td>DS 48:</td> <td>-</td> </tr> <tr> <td>Prop #5:</td> <td>S-BUS / SUMD Ch. 7</td> <td>DS 5:</td> <td>Low beam headlight</td> <td>DS 27:</td> <td>Additional sound 3 (martinshorn.wa)</td> <td>DS 49:</td> <td>WAV-Player: Play/Stop</td> </tr> <tr> <td>Prop #6:</td> <td>S-BUS / SUMD Ch. 8</td> <td>DS 6:</td> <td>High beam headlight</td> <td>DS 28:</td> <td>Additional sound 6 (Car air horn - L)</td> <td>DS 50:</td> <td>WAV-Player: Pause</td> </tr> <tr> <td>Prop #7:</td> <td>-</td> <td>DS 7:</td> <td>Front fog light</td> <td>DS 29:</td> <td>Additional sound 7 (hupe_04.wav)</td> <td>DS 51:</td> <td>WAV-Player: Track rev</td> </tr> <tr> <td>Prop #8:</td> <td>-</td> <td>DS 8:</td> <td>Rear fog light</td> <td>DS 30:</td> <td>Additional sound 8 (hupe_05.wav)</td> <td>DS 52:</td> <td>WAV-Player: Track fwd</td> </tr> <tr> <td>Prop #9:</td> <td>-</td> <td>DS 9:</td> <td>Indicator left</td> <td>DS 31:</td> <td>-</td> <td>DS 53:</td> <td>WAV-Player: Random</td> </tr> <tr> <td>Prop #10:</td> <td>-</td> <td>DS 10:</td> <td>Indicator right</td> <td>DS 32:</td> <td>-</td> <td>DS 54:</td> <td>-</td> </tr> <tr> <td>Prop #11:</td> <td>-</td> <td>DS 11:</td> <td>Hazard lights</td> <td>DS 33:</td> <td>Output sequence 1</td> <td>DS 55:</td> <td>-</td> </tr> <tr> <td>Prop #12:</td> <td>-</td> <td>DS 12:</td> <td>Output 8 (Innenbeleuchtung)</td> <td>DS 34:</td> <td>Output sequence 2</td> <td>DS 56:</td> <td>Servo 1 Position 1</td> </tr> <tr> <td>Prop #13:</td> <td>S-BUS / SUMD Ch. 14</td> <td>DS 13:</td> <td>Output 14 (Rundumleuchte)</td> <td>DS 35:</td> <td>Output sequence 3</td> <td>DS 57:</td> <td>Servo 1 Position 2</td> </tr> <tr> <td>Prop #14:</td> <td>S-BUS / SUMD Ch. 15</td> <td>DS 14:</td> <td>-</td> <td>DS 36:</td> <td>Output sequence 4</td> <td>DS 58:</td> <td>Servo 2 Position 1</td> </tr> <tr> <td>Prop #15:</td> <td>S-BUS / SUMD Ch. 16</td> <td>DS 15:</td> <td>-</td> <td>DS 37:</td> <td>Function sequence 1</td> <td>DS 59:</td> <td>Servo 2 Position 2</td> </tr> <tr> <td>Prop #16:</td> <td>-</td> <td>DS 16:</td> <td>-</td> <td>DS 38:</td> <td>Function sequence 2</td> <td>DS 60:</td> <td>-</td> </tr> <tr> <td></td> <td></td> <td>DS 17:</td> <td>Cannon shot</td> <td>DS 39:</td> <td>Multi function 1</td> <td>DS 61:</td> <td>-</td> </tr> <tr> <td></td> <td></td> <td>DS 18:</td> <td>Motor M4 left (Turm drehen)</td> <td>DS 40:</td> <td>Multi function 2</td> <td>DS 62:</td> <td>-</td> </tr> <tr> <td></td> <td></td> <td>DS 19:</td> <td>Motor M4 right (Turm drehen)</td> <td>DS 41:</td> <td>-</td> <td>DS 63:</td> <td>-</td> </tr> <tr> <td></td> <td></td> <td>DS 20:</td> <td>Freewheel</td> <td>DS 42:</td> <td>-</td> <td>DS 64:</td> <td>-</td> </tr> <tr> <td></td> <td></td> <td>DS 21:</td> <td>-</td> <td>DS 43:</td> <td>-</td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td>DS 22:</td> <td>-</td> <td>DS 44:</td> <td>-</td> <td></td> <td></td> </tr> </table>														Prop #1:	S-BUS / SUMD Ch. 1	DS 1:	Engine sound on/off	DS 23:	-	DS 45:	-	Prop #2:	S-BUS / SUMD Ch. 2	DS 2:	Volume +	DS 24:	-	DS 46:	-	Prop #3:	S-BUS / SUMD Ch. 3	DS 3:	Volume -	DS 25:	Additional sound 1 (hupe_01_schl)	DS 47:	-	Prop #4:	S-BUS / SUMD Ch. 4	DS 4:	Parking light	DS 26:	Additional sound 2 (hupe_02_schl)	DS 48:	-	Prop #5:	S-BUS / SUMD Ch. 7	DS 5:	Low beam headlight	DS 27:	Additional sound 3 (martinshorn.wa)	DS 49:	WAV-Player: Play/Stop	Prop #6:	S-BUS / SUMD Ch. 8	DS 6:	High beam headlight	DS 28:	Additional sound 6 (Car air horn - L)	DS 50:	WAV-Player: Pause	Prop #7:	-	DS 7:	Front fog light	DS 29:	Additional sound 7 (hupe_04.wav)	DS 51:	WAV-Player: Track rev	Prop #8:	-	DS 8:	Rear fog light	DS 30:	Additional sound 8 (hupe_05.wav)	DS 52:	WAV-Player: Track fwd	Prop #9:	-	DS 9:	Indicator left	DS 31:	-	DS 53:	WAV-Player: Random	Prop #10:	-	DS 10:	Indicator right	DS 32:	-	DS 54:	-	Prop #11:	-	DS 11:	Hazard lights	DS 33:	Output sequence 1	DS 55:	-	Prop #12:	-	DS 12:	Output 8 (Innenbeleuchtung)	DS 34:	Output sequence 2	DS 56:	Servo 1 Position 1	Prop #13:	S-BUS / SUMD Ch. 14	DS 13:	Output 14 (Rundumleuchte)	DS 35:	Output sequence 3	DS 57:	Servo 1 Position 2	Prop #14:	S-BUS / SUMD Ch. 15	DS 14:	-	DS 36:	Output sequence 4	DS 58:	Servo 2 Position 1	Prop #15:	S-BUS / SUMD Ch. 16	DS 15:	-	DS 37:	Function sequence 1	DS 59:	Servo 2 Position 2	Prop #16:	-	DS 16:	-	DS 38:	Function sequence 2	DS 60:	-			DS 17:	Cannon shot	DS 39:	Multi function 1	DS 61:	-			DS 18:	Motor M4 left (Turm drehen)	DS 40:	Multi function 2	DS 62:	-			DS 19:	Motor M4 right (Turm drehen)	DS 41:	-	DS 63:	-			DS 20:	Freewheel	DS 42:	-	DS 64:	-			DS 21:	-	DS 43:	-					DS 22:	-	DS 44:	-		
Prop #1:	S-BUS / SUMD Ch. 1	DS 1:	Engine sound on/off	DS 23:	-	DS 45:	-																																																																																																																																																																																						
Prop #2:	S-BUS / SUMD Ch. 2	DS 2:	Volume +	DS 24:	-	DS 46:	-																																																																																																																																																																																						
Prop #3:	S-BUS / SUMD Ch. 3	DS 3:	Volume -	DS 25:	Additional sound 1 (hupe_01_schl)	DS 47:	-																																																																																																																																																																																						
Prop #4:	S-BUS / SUMD Ch. 4	DS 4:	Parking light	DS 26:	Additional sound 2 (hupe_02_schl)	DS 48:	-																																																																																																																																																																																						
Prop #5:	S-BUS / SUMD Ch. 7	DS 5:	Low beam headlight	DS 27:	Additional sound 3 (martinshorn.wa)	DS 49:	WAV-Player: Play/Stop																																																																																																																																																																																						
Prop #6:	S-BUS / SUMD Ch. 8	DS 6:	High beam headlight	DS 28:	Additional sound 6 (Car air horn - L)	DS 50:	WAV-Player: Pause																																																																																																																																																																																						
Prop #7:	-	DS 7:	Front fog light	DS 29:	Additional sound 7 (hupe_04.wav)	DS 51:	WAV-Player: Track rev																																																																																																																																																																																						
Prop #8:	-	DS 8:	Rear fog light	DS 30:	Additional sound 8 (hupe_05.wav)	DS 52:	WAV-Player: Track fwd																																																																																																																																																																																						
Prop #9:	-	DS 9:	Indicator left	DS 31:	-	DS 53:	WAV-Player: Random																																																																																																																																																																																						
Prop #10:	-	DS 10:	Indicator right	DS 32:	-	DS 54:	-																																																																																																																																																																																						
Prop #11:	-	DS 11:	Hazard lights	DS 33:	Output sequence 1	DS 55:	-																																																																																																																																																																																						
Prop #12:	-	DS 12:	Output 8 (Innenbeleuchtung)	DS 34:	Output sequence 2	DS 56:	Servo 1 Position 1																																																																																																																																																																																						
Prop #13:	S-BUS / SUMD Ch. 14	DS 13:	Output 14 (Rundumleuchte)	DS 35:	Output sequence 3	DS 57:	Servo 1 Position 2																																																																																																																																																																																						
Prop #14:	S-BUS / SUMD Ch. 15	DS 14:	-	DS 36:	Output sequence 4	DS 58:	Servo 2 Position 1																																																																																																																																																																																						
Prop #15:	S-BUS / SUMD Ch. 16	DS 15:	-	DS 37:	Function sequence 1	DS 59:	Servo 2 Position 2																																																																																																																																																																																						
Prop #16:	-	DS 16:	-	DS 38:	Function sequence 2	DS 60:	-																																																																																																																																																																																						
		DS 17:	Cannon shot	DS 39:	Multi function 1	DS 61:	-																																																																																																																																																																																						
		DS 18:	Motor M4 left (Turm drehen)	DS 40:	Multi function 2	DS 62:	-																																																																																																																																																																																						
		DS 19:	Motor M4 right (Turm drehen)	DS 41:	-	DS 63:	-																																																																																																																																																																																						
		DS 20:	Freewheel	DS 42:	-	DS 64:	-																																																																																																																																																																																						
		DS 21:	-	DS 43:	-																																																																																																																																																																																								
		DS 22:	-	DS 44:	-																																																																																																																																																																																								
<input type="button" value="Reset"/> <span style="float: right;"><input type="button" value="Delete assignments"/></span>																																																																																																																																																																																													


### S-BUS / SUMD

If sum signals should be used, they must be activated here. The sum signal channel of the receiver is connected to proportional channel #8 (X2/8) of the SFR-1-D. The proportional channels of the SFR-1-D can be assigned to the sum signal channels (see also page 34).

### Configuration - S-BUS / SUMD - Digital switches (only for Graupner SUMD3)

For the 64 digital switches of the sum signal SUMD3, the desired functions can be assigned here. Please follow the instructions on page 35.

## Configuration - Proportional channels

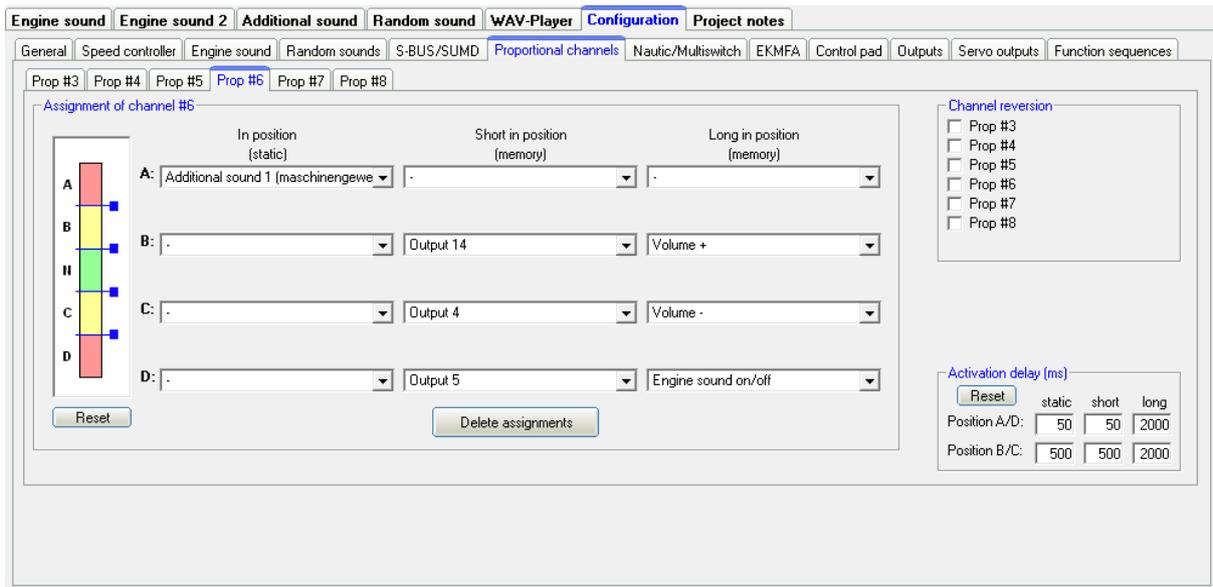

### Assignments and thresholds for proportional channel #3 - #8

For proportional channel #3 - #8, the ranges A, B, C and D can be assigned to various functions of the SFR-1-D.

The left picture shows five ranges of a channel. You can define the thresholds for each range manually (see page 30) by moving the blue sliders up and down. The number on top shows the value of each threshold.

The reset button restores the threshold standard values.

### Channel reversion

The directions of the proportional channels can also be inverted.


### Activation delay

Certain times can be set that determine how long the stick or switch must be in the positions A/D and B/C in order to activate the corresponding functions. Times between 10 and 2500 ms are possible.

However, the values defined here are always valid for all proportional channels. It is not possible to define delays for one channel separately.

The reset button will restore standard values.

## Configuration - Nautic/Multiswitch

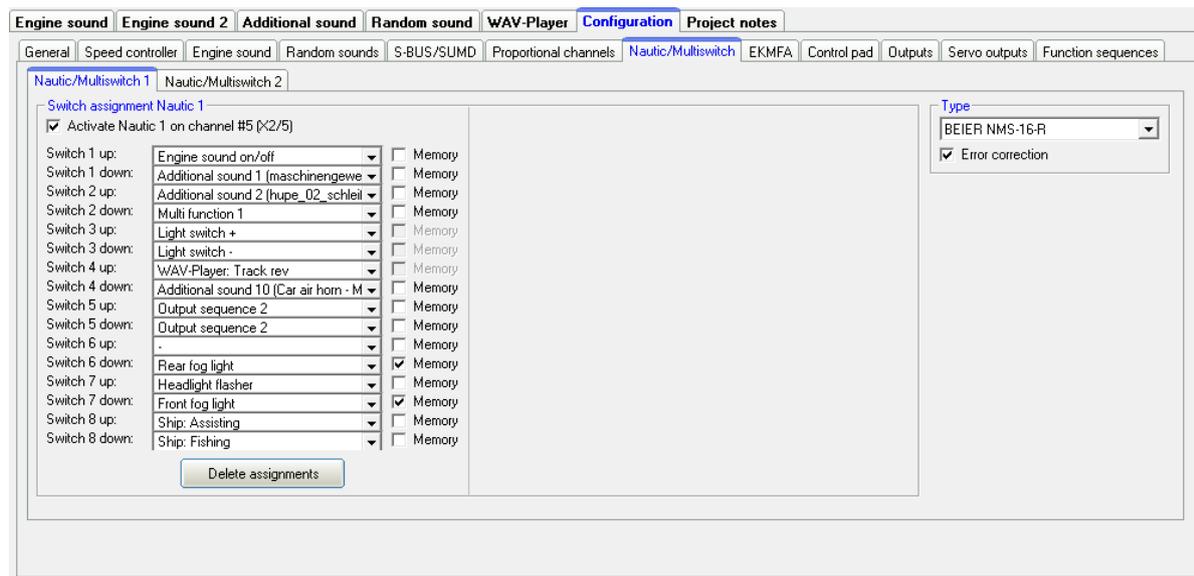

If you want to use the nautic mode 1 or 2, you will first have to activate it here and connect the SFR-1-D prop. channel #5 (X2/5) or #6 (X2/6) to the receiver channel.

### Switch assignment

Every switch position can be assigned to a function (see page 24).

Depending on the function, a memory setting for the corresponding switch can be activated.

### Type

Select the type of your radio control system and your nautic switch module here.

### Error correction

If problems occur in receiving the nautic signal, you can activate error correction, as this may lead to a more reliable transmission of the nautic switch data. However, activating error correction slows down the transmission slightly (approx. +200 ms). Especially with some 2.4 GHz transmitters it is advisable to switch error correction on, as under certain circumstances incorrect switch positions are occasionally transmitted, and this could trigger undesired actions.

### Manual settings

Opting for manual settings enables you to set values for the transmission protocol of the nautic mode manually. These values should only be altered as instructed. Normally it is not necessary to set the values manually.

## Configuration - EKMFA

The screenshot shows the 'Configuration' tab for EKMFA mode. It includes a navigation bar with tabs for 'Engine sound', 'Engine sound 2', 'Additional sound', 'Random sound', 'WAV-Player', 'Configuration', and 'Project notes'. Below this is a sub-menu with 'General', 'Speed controller', 'Engine sound', 'Random sounds', 'S-BUS/SUMD', 'Proportional channels', 'Nautic/Multiswitch', 'EKMFA', 'Control pad', 'Outputs', 'Servo outputs', and 'Function sequences'. The main area is titled 'Assignment EKMFA' and contains a checked checkbox 'Activate EKMFA on channel #5 (2/5)'. It features two columns of dropdown menus for assigning functions to 15 positions in A and D. A 'Delete assignments' button is located below the first column. To the right, the 'Activation delay (ms)' section has input fields for 'Position A/D' (set to 1000) and 'Position B/C' (set to 500), with a 'Reset' button.

Position	Assignment
1 x in position A:	Additional sound 1 (hupe_01_schleil)
2 x in position A:	Additional sound 2 (hupe_02_schleil)
3 x in position A:	Additional sound 3 (martinshorn.wav)
4 x in position A:	Additional sound 4 (luftbremse.wav)
5 x in position A:	Additional sound 5 (tuir_oeffnen_zusc)
6 x in position A:	Additional sound 6 (Car air horn - LA)
7 x in position A:	Additional sound 7 (hupe_04.wav)
8 x in position A:	Additional sound 8 (hupe_05.wav)
9 x in position A:	Additional sound 9
10 x in position A:	Additional sound 10
11 x in position A:	Additional sound 11
12 x in position A:	-
13 x in position A:	-
14 x in position A:	-
15 x in position A:	-

Position	Assignment
1 x in position D:	Ship: Towing
2 x in position D:	Light switch -
3 x in position D:	Parking light
4 x in position D:	Low beam headlight
5 x in position D:	High beam headlight
6 x in position D:	-
7 x in position D:	Output 10
8 x in position D:	Output sequence 1
9 x in position D:	Volume +
10 x in position D:	WAV-Player: Play/Stop
11 x in position D:	Servo 1 Position 1
12 x in position D:	Servo 1 Position 2
13 x in position D:	Servo 2 Position 1
14 x in position D:	Servo 2 Position 4
15 x in position D:	-

If you want to use EMKFA mode, you have to activate it first.

The used functions for EKMFA mode (see page 33) can be configured here.


Of course, you don't have to assign every position (2 x 15 positions).

### Activation delay

Certain times can be set that determine how long the joystick or switch must be in the positions A/D and B/C in order to activate the corresponding functions. Times between 10 and 2500 ms are possible.

The reset button will restore the standard values.

## Configuration – Control Panel

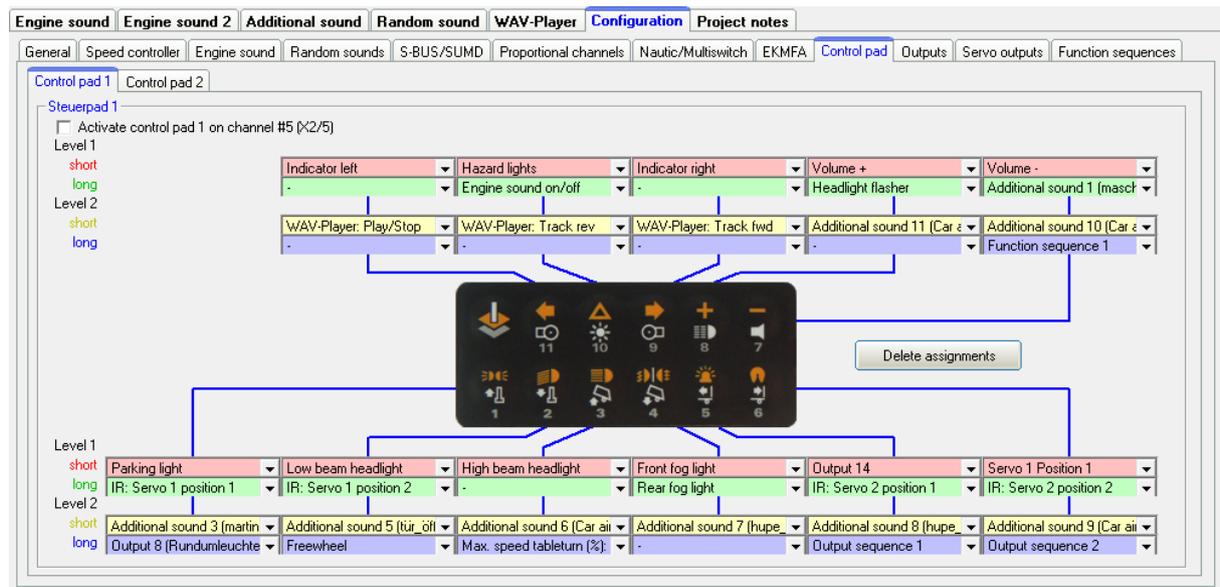

The SFR-1-D can also evaluate the control pads [Light and Sound](#) from the company Kraftwerk. The control pad channel is connected from the receiver output to channel # 5 (X2/5) or channel # 6 (X2/6) of the SFR-1-D.

The control pad can trigger up to 44 functions:

- 11 keys on level 1, short key press
- 11 keys on level 1, long key press
- 11 keys on level 2, short key press
- 11 keys on level 2, long key press

All push buttons can be assigned on both levels, with the desired functions.

Switching from level 1 to level 2 is done by the leftmost button (shift) in the top row. Pressing this shift button switches to level 2. The next time you press one of the buttons 1 - 11, the assigned function will be triggered by level 2. At the same time, when the function is triggered, the level is automatically switched back to level 1 again.

If you switch to level 2 and then no button is pressed within 10 seconds, the pad also automatically returns to level 1 again.

**Teach-in the control pad:**


Before first use, the SFR-1-D must be taught-in on the control pad and the transmitter. This works as follows:

1. Connect throttle channel, steering channel and all other proportional channels you want to use to your receiver.
2. All channels must be in neutral position. Turn on receiver and SFR-1-D.
3. Activate the setup, with the blue „Setup“ button on the SFR-1-D board, until the green LED flashes fast. The blue LED flashes once.
4. Now briefly press the "Shift" key (top row, leftmost) on the control pad.
5. Then briefly press button No. 7 (top row, rightmost) on the control pad. The blue LED lights up now.
6. Now press the blue Setup button again until the green LED stops blinking.
7. The teach-in process is finished.

Afterwards it is recommended to check the evaluation of the buttons of the control pad in the diagnosis (see page 91). With Prop #5 or Prop #6, pressing the button will now also show the button numbers.

If the button numbers displayed in the diagnostics do not match the buttons pressed, you may need to change the "Transmit Power" of the control pad (see control pad manual). After adjusting the "Transmit power", the teach-in process must be repeated!

## Configuration - Outputs

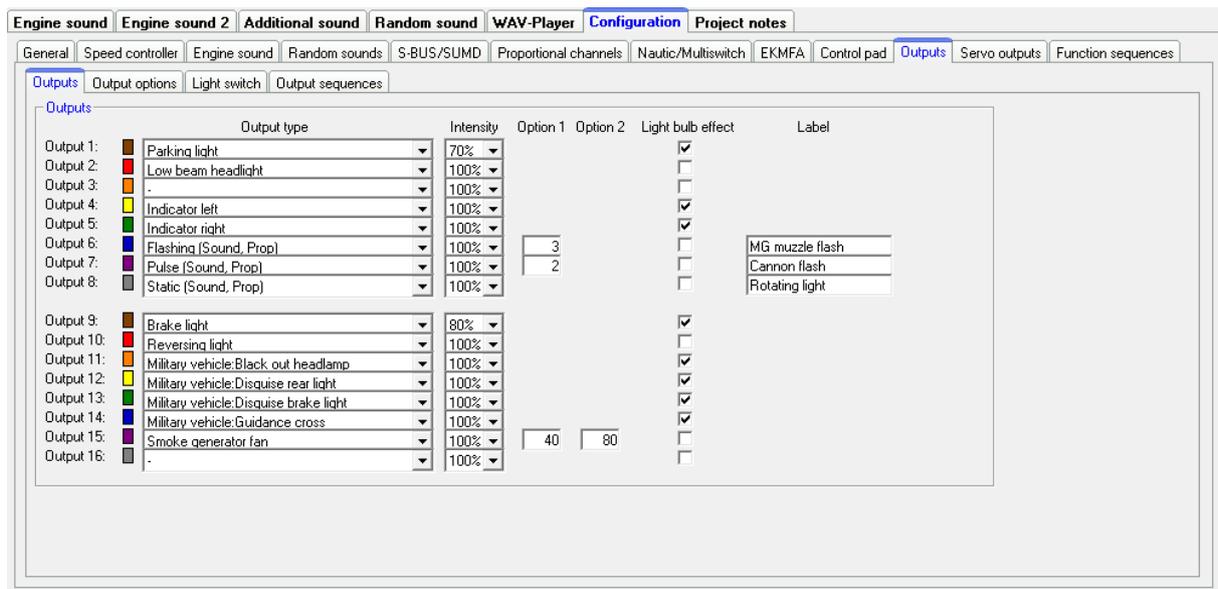

The colored small boxes next to each output indicate the color of the flat ribbon cable that is connected to each output at the SFR-1-D.

### Output type

You can assign 16 switching-outputs to various output types/characteristics (see page 35).

### Intensity

The intensity can be set in 2%-steps for every output.

### Option 1 and option 2

For some output types different values can be set. For more details, see the description of outputs starting on page 35.

### Light bulb effect

Optionally, a light bulb effect can be activated for each output. This behaves an LED when switching on and off, then like a light bulb (softer on and off).

### Labeling

For certain output types (static, flashing, pulse and flickering) own labels can be given for the outputs. This makes it easier to "find" these outputs in the selection of functions.

## Configuration - Outputs - Output options

If the function “Light flickering when starting” is activated, all 16 outputs will flicker while the starting noise (coldstart or warmstart) is played.

The light bulb effect can be set in 3 levels: Light, medium and strong.

### Brake lights:

If the selection „Brake light always on at stationary“ is activated, the brake light is always turned on whenever the model is standing.

An adjustable afterglow of the brake light can also be activated.

If "Emergency brake while heavy braking" is activated the brake light flashes at a frequency of 3Hz during heavy braking. The duration for the flashing is defined in "Brake light remains on for: X seconds". If in addition the option “Hazard warning lights automatically on after emergency brake light” the hazard lights turn automatically on after heavy braking. The lights remain on, as long as they are switched off manually or the vehicle starts moving.

The brake light threshold determines how strong the vehicle must be decelerated before the brake light is activated. The higher the threshold, the stronger the deceleration must be in order to activate the brake light.

The emergency brake light threshold determines how strong the vehicle must be decelerated before the emergency brake light is activated. The higher the threshold, the stronger the deceleration must be in order to activate the emergency brake light.

If the selection „Hazard light automatically on when reversing“ is activated, the two indicator lights are on, once the model is reversing.

It can also be specified that indicators will turn off automatically after a certain number of flashes.

#### Indicator lights:

The indicator can also (e.g. like in a real car) be switched off with the steering channel prop. #2. The lights flash until the steering channel returns to neutral position.

The indicator light threshold determines how strong the vehicle must turn until the indicator light is activated. The higher the threshold, the stronger the vehicle must turn in order to activate the indicator light.

If the „American indicator mode“ is activated, the indicators always light when the parking light is on.

The flashing rate for the indicators can be set, as well. The values for „on“ and „off“, multiplied by 10 ms, is the duration of the light and dark phases of the indicator.

#### Bending lights:

If the option "Bendings light also work when the light is off" is not selected, then either the parking light or the low beam headlight must be on for bending light to work.

With the option "Bending light via steering on prop. channel #2" the bending lights are automatically switched on while the vehicle is turning. The right bending light is activated as long as the area "A" of prop. channel #2 is reached and is switched off, if the area "A" is left. The left bending light is switched on, if the area "D" is reached and is switched off again, when the area "D" is left.

The switching thresholds can be set below. Values between 5 and 100 are possible.

The option "Bending light via indicators" activates the bending light, as long as the corresponding indicator is active. Both variants can be combined.

When driving backwards both bending lights can be activated automatically.

The bending lights can also be used as fog lights.

#### Daytime running light:

The daytime running light can be controlled with the light switch.

Optional, the daytime running light can only be activated when also the driving sound is on. The reversing light can optionally also only be switched on when driving.

If the option "low beam with xenon HID turn-on effect" is activated, the typical xenon effect (short flash followed by dimming up) appears when turning on the low beam headlight.

If desired, parking light and low beam headlight can always be switched on automatically as soon as the engine sound is on. If this option is activated, however, the parking light and low beam headlight can not be switched on or off, using the functions "Parking light " or " Low beam headlight "!

The ship light functions can be configured to detect automatically the condition of "in operation" or "at anchor" using the throttle channel #1. The condition "in operation" is automatically switched off, if the throttle channel is in neutral for a defined time. After the time has expired (1 – 255 s), it will be switched for example from "in operation" to "at anchor".

The smoke generator can be activated automatically with the engine sound 1 or engine sound 2. If this option is not used, the smoke generator needs to be switched on/off separately with the function "smoke generator on".

Three parameters can be used for the configuration of a smoke generator at output X14:

- Smoke at engine cold/warm start and vehicle start:  
This setting defines the smoke intensity while turning on the engine and during a first acceleration.
- Smoke at idle position:  
The value sets the smoke intensity in idle position.
- Smoke at full speed:  
Sets the smoke intensity at a maximum speed. Between idle position and full speed, the smoke intensity is adjusted proportionally.

For the output type "smoke generator fan" a trailing between 0 and 255 seconds can be set. This helps to keep the hose free of condensation.

## **Configuration - Outputs - Light switch**

The screenshot shows the 'Light switch' configuration window. It features a grid with 11 rows (Step: 0 to Step: 6) and 11 columns representing different light functions. The functions are: Daytime running light, Parking light, Low beam headlight, High beam headlight, Front fog light, Rear fog light, Reversing light possible, Brake light possible, Indicator possible, Black out headlamp, Guidance cross, Disguise rear light, and Disguise brake light. A 'Reset' button is located at the bottom right of the grid. To the right of the grid, there are two dropdown menus: 'Steps +' set to 6 and 'Steps -' set to 0.

Step	Daytime running light	Parking light	Low beam headlight	High beam headlight	Front fog light	Rear fog light	Reversing light possible	Brake light possible	Indicator possible	Black out headlamp	Guidance cross	Disguise rear light	Disguise brake light
Step: 6		•	•			•	•	•	•				
Step: 5		•	•			•	•	•	•				
Step: 4		•	•	•			•	•	•				
Step: 3		•	•				•	•	•				
Step: 2		•					•	•	•				
Step: 1	•						•	•	•				
Step: 0							•	•	•				

With the light switch various lights can be controlled with the function "light switch +" and "light switch -".

The light switch has in total 11 steps, which can be individually programmed. The steps are divided in 6 positive and 4 negative steps. The number of steps that should

be used, can be selected as well as the active lights in each step. An active output is indicated with a "★" in the table.

For **"reversing light possible", "brake light possible" and "indicator light possible"** a „★“ does not mean that the lights are always switched on. Only when the corresponding function is triggered, the lights will be activated.

In the standard setting for step -1 to -4 (blackout lighting for military vehicles) reversing, brake and indicator lights are for example completely switched off.

All other lights are actually switched on if there is a „★“ at the step.

After turning on the sound module the light switch is automatically in step 0. With the reset button all settings are reset to standard.

## Configuration - Outputs -Sequences

Engine sound Engine sound 2 Additional sound Random sound WAV-Player Configuration Project notes

General Speed controller Engine sound Random sounds S-BUS/SUMD Proportional channels Nautic/Multiswitch EKMF A Control pad Outputs Servo outputs Function sequences

Outputs Output options Light switch Output sequences

Sequence 1 Sequence 2 Sequence 3 Sequence 4 Sequence 5 Sequence 6 Sequence 7 Sequence 8

Output sequence 1

Step	Duration	Output 4	Output 8	Output 13
01	0,30 s	100%	0%	0%
02	0,30 s	0%	100%	0%
03	0,30 s	0%	0%	100%

Total steps:   
 Loop start:   
 Loop end:   
 Stop immediately

Outputs in sequence 1:  
 1  2  3  
 4  5  6  
 7  8  9  
 10  11  12  
 13  14  15  
 16

Delete assignments

Engine sound Engine sound 2 Additional sound Random sound WAV-Player Configuration Project notes

General Speed controller Engine sound Random sounds S-BUS/SUMD Proportional channels Nautic/Multiswitch EKMF A Control pad Outputs Servo outputs Function sequences

Outputs Output options Light switch Output sequences

Sequence 1 Sequence 2 Sequence 3 Sequence 4 Sequence 5 Sequence 6 Sequence 7 Sequence 8

Output sequence 2

Step	Duration	Output 10
01	1,00 s	4%
02	0,10 s	50%
03	0,50 s	4%
04	0,20 s	70%
05	0,40 s	4%
06	0,10 s	100%
07	0,05 s	80%
08	0,05 s	60%
09	0,05 s	40%
10	0,05 s	20%

Total steps:   
 Loop start:   
 Loop end:   
 Stop immediately

Outputs in sequence 2:  
 1  2  3  
 4  5  6  
 7  8  9  
 10  11  12  
 13  14  15  
 16

Delete assignments

With the SFR-1-D up to 16 outputs can be combined and activated in a defined sequence (duration and intensity). This can be parallel or in a row. In total 8 output sequences can be programmed, each with 36 steps.

The sequence is always executed with priority to other output functions. All other outputs are deactivated as long as the output sequence is running.

On the right side the outputs that should be used for the sequence can be selected and they appear automatically in the step-table.

### Total steps

For each sequence, the number of steps can be set here. In each case, up to 36 steps are possible.

If you activate the sequence, the steps will start with step 1 and run sequentially.

In each step you can set for each output the desired intensity. For this purpose, click with the mouse on the value that you want to change and select in the drop-down box the new value (0% - 100%).

Likewise the duration for each step can be specified between 0,01s and 24,6s.

#### Loop start and loop end

Similar to the three-stage additional sounds, the complete sequence can be divided into three sections:

1. Start sequence
2. Loop
3. Stop sequence

In the table, these three sections are stored colored in red and green for easy identification.

First the start sequence (red) is shown when turning on the output sequence and then the loop (green) as long as the sequence is still active. If the sequence is turned off, still the stop sequence (red) will be shown at the end.

Loop start and loop end, can be set individually. If the three-stage option should not be used, the loop start must be set to one and loop end to the number of set steps in order to make the whole sequence run through.

#### Stop immediately

This option determines whether turning of the sequence will stop it immediately, or it will last up until the end of the loop.

If you click with the right mouse button into the table, additional functions are offered:

Delete step	Deletes the step on which you clicked with the right mouse button. All other steps are shifted one row upwards.
Insert step	Inserts a new step before the step, on which you clicked with the right mouse button. All other steps are shifted one row downwards.
Copy this output to other output	The complete sequence from an output can be copied with this command to another output.
Export sequence	Use this to save a complete sequence in a file (*.a_seq) on your hard disk.
Import sequence	This opens a saved sequence (*.a_seq) again.

You can see two simple examples for output sequences on the picture on the previous page.

#### Output sequence 1:

This sequence is a simple rotating light with three lamps/LEDs. In the first step only output 1 is switched on. In the second step output 1 goes off again, and output 2 is switched on. In the third step output 2 is switched off and output 3 is switched on.

After the third step, the sequence starts from the beginning and output 1 is switched on again. In this way, the light almost “turns” in a “circle”.


Output sequence 2:

This example shows a simple fluorescent lighting simulation. Here is only one output used, however, the lamp switches not only on and off but it simulates the typical start of a fluorescent lamp.

In step 1, the intensity is set to a small value (4%). This is supposed to represent the preliminary annealing of the tube. In step 2 the lamp tries to ignite, so it becomes shortly brighter (50%), but it does not make it yet and it becomes darker in step 3 again (4%). In step 4 is another ignition attempt (70%) which does not succeed. Therefore, the intensity in step 5 is set back to 5%. Only in step 6 succeeds the "tube" to ignite. The beginning and the end of the loop are now set exactly to this step 6. Thus, the sequence now plays only this step 6 (lamp on) as long as the sequence is turned on. Only when the sequence is turned off, the steps 7 to 10 are reached and the lamp goes off in several stages (80% → 60% → 40% → 20% → 0%).

These are just simple examples. Of course you can also expand such sequences much further to achieve even incredible effect.

## Configuration - Servo outputs - Servos 1 + 2 and Servo 3 + 4

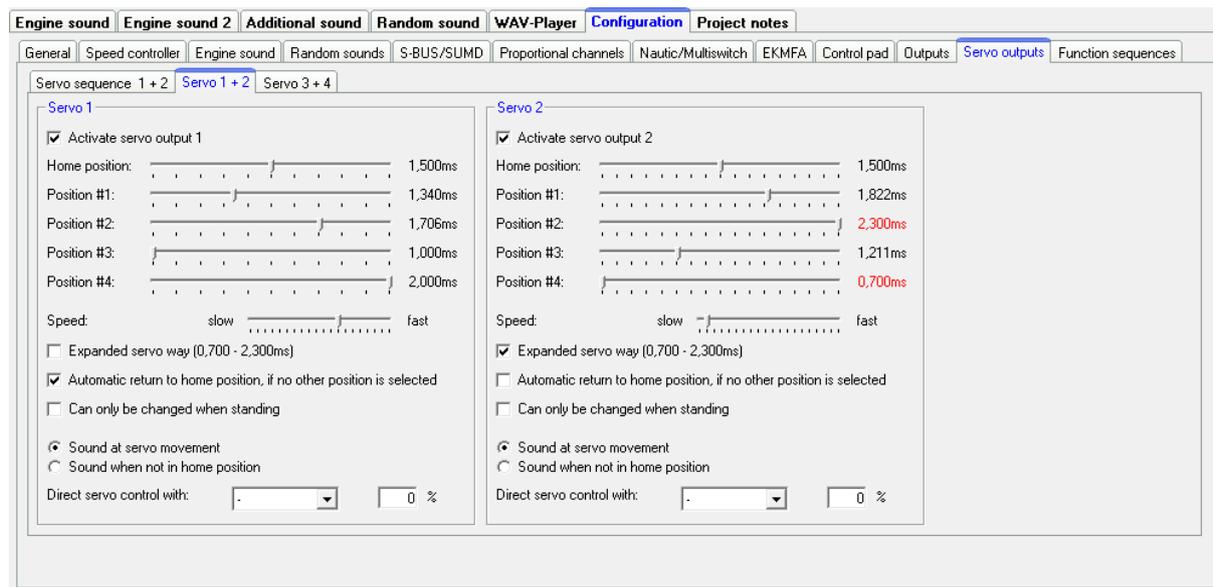

Here you can configure the four servo outputs of the SFR-1-D (see page 44). If you want to use the servo outputs, you have to activate them here.

### Home position

The servo goes always to the home position after turning on the SFR-1-D.

### Positions #1 - #4

These positions can be approached by functions (for example the proportional inputs #2 - #6, nautic/multiswitches or the EKMFA mode).

To move the positions, click with the mouse on the slider and move the pointer to the desired position.

### Speed

The speed, with which the servo is moved, can be adjusted in 20 steps. It should be noted that each servo by itself has certain inertia. So even at maximum speed, a certain amount of time is needed to reach the selected position.

### Expanded servo way

The usual length for a standard servo pulse is 1.000 to 2.000ms. Sometimes it is desirable to expand this area so that the travel is a bit increased. If this option is enabled, the servo positions can be set now between 0.700 - 2.300ms.

### **Caution!**

**Not all servos are suitable for this enhanced servo range and may get damaged! Therefore, use this function only with special care.**

### Go automatically to home position if no other position is selected

If this option is activated, the servo will go automatically in home position if currently no position #1 - #4 is selected.

If this option is not activated, the servo will not go back to home position during deactivation, but stays in the current position. This means, any position can be allocated to the servo. For this, the speed should be set relatively slow.

#### Change only while standing

With this setting, a servo movement is only possible as long as the vehicle is not moving. An accidentally sequence activation while driving can be prevented.

#### Sound at servo movement

If this option is activated, the additional sound for the servo will be played as long as the servo is moving.

#### Sound when not in home position

With this function the additional sound will always be played, if the servo is not in home position.

This version is very well suitable if you are using a speed controller with motor instead of a servo. In home position (1,500ms) the motor is switched off and no sound is played. For example, if position #1 is set to 1,800ms and you "select" this position, the motor will turn and you can play a corresponding sound.

#### Direct servo control

Both servo outputs can be controlled directly and stepless by one proportional channels. The prop signal from the receiver is passed on 1:1 to the servo. It is also possible to scale/limit the servoway between -100 % and +100 %. Negative values invert the running direction of the servo.


This is helpful for example to control a steerable axle. However, controlling a servo requires the complete proportional channel. No other function can be triggered with this proportional channel.

#### **Connection of a mini speed controller to a servo output**

To control motor movements and sounds of trailer supports, crane arm movements or tilt functions, a mini speed controller can be connected to a servo output.

The basic position indicates the state of the motor when the supply voltage is switched on. If the motor (which never occurs in practice) should turn in the neutral position, the slider must be moved to the left or right of 1.500 ms (motor off) in the basic position.


The values in ms along the lines behind the positions #1 - #4 indicate the maximum engine speed. At the value of 1,000 ms and 2,000 ms, the engine is running forward or backward at full throttle. At 1.500 ms the motor is off. The positions #1 - #4 can be used to set different maximum movement speeds and directions of rotation.

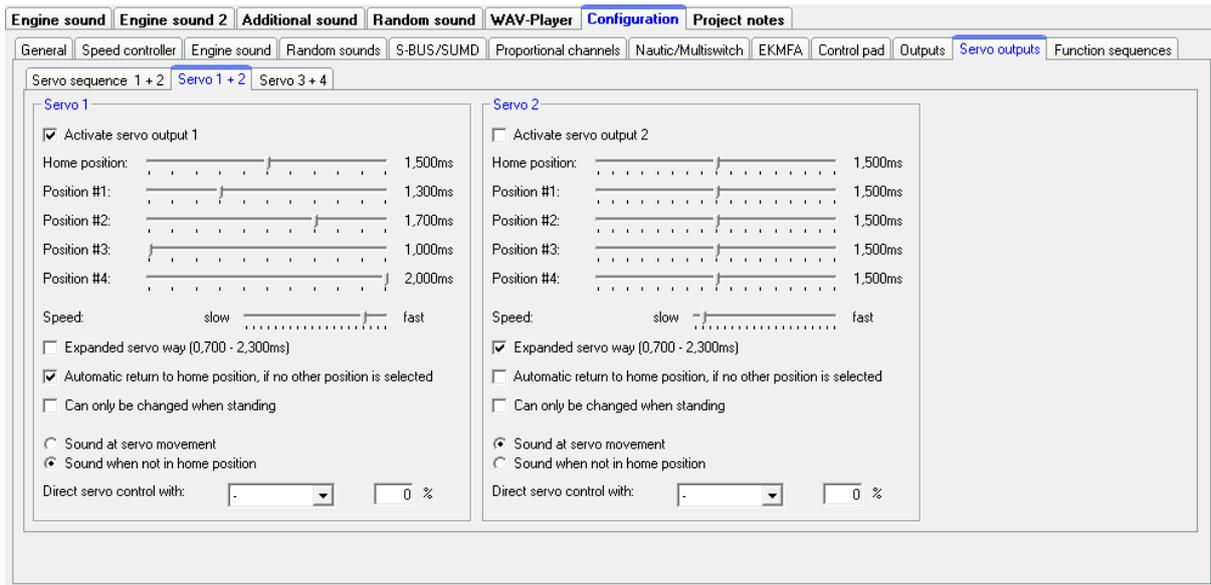

For #1 and #2, e.g. a crane arm will turn slowly to the right and left and at positions #3 and #4 quickly.

With "Speed" the acceleration (slow or fast) can be set from neutral (motor off) to the positions #1 - #4 (maximum rotation speed).

The motor can be operated proportionally with the direct servo control by a proportional channel.

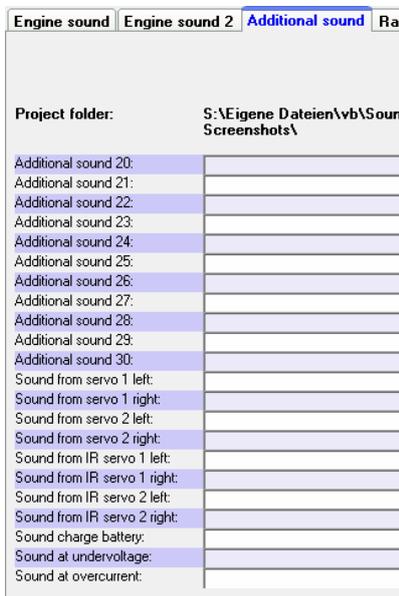


If the field "Sound when not in home position" is activated, the sound will be played as soon as the motor runs. The motor sound must be set in the sound slots under "Additional sounds" and „Sound from Servo 1 left“, „Sound from servo 1 right“, etc.

Finally the motor movement (forward/backward) must be started. This can be done via a proportional channel or a nautic/multiswitch. If the servo outputs are activated, they can be used in the function selection.

If the movement is activated/deactivated with a proportional channel, we recommended to use the function under "In position (static)".

## Configuration - Servo outputs - Servos sequence 1 + 2

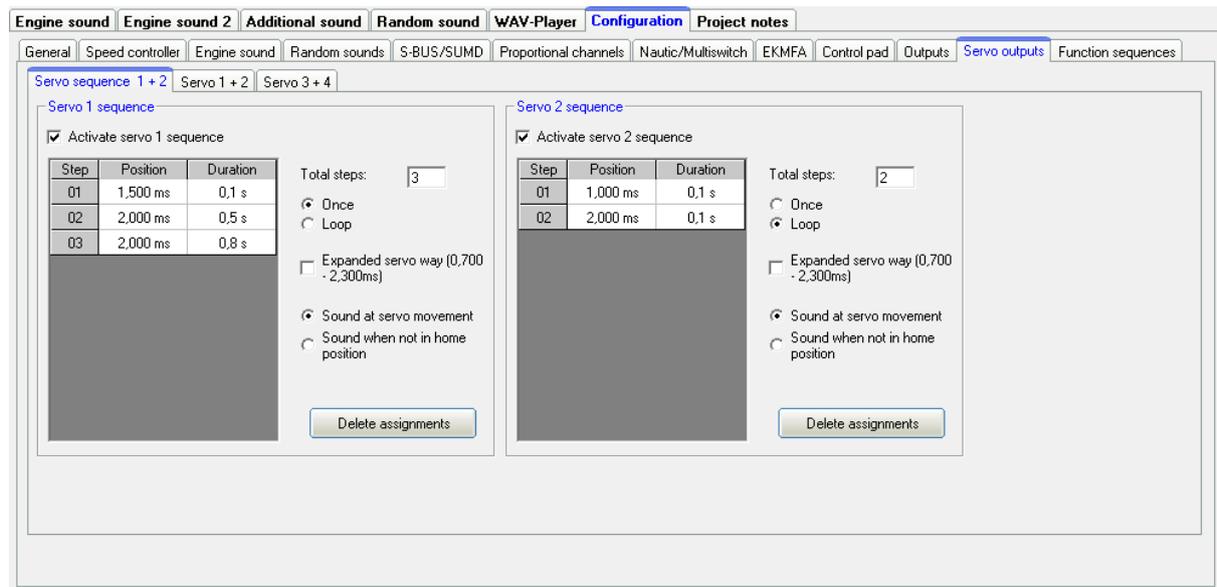

For both servo outputs you can program a time controlled flow sequences. A sequence may consist of up to 10 steps.

For every step a servo position (1,000 - 2,000ms) must be assigned, that indicates the starting position of the servo. Additionally the time must be defined for the servo movement from the current position to the next step/position. Both values give the speed of the servo movement.

The duration of the last step determines the time, the servo needs to move to the position of the first step.

The position of step 1 is the home position of the servo. Every sequence starts and ends from this position.

### Once/Loop

Here it can be configured whether the servo sequence is only run once after it has been started (like a recoil of a tank during a cannon shot) or if the sequence continues in a loop (like a windshield wiper), as long as the start of the sequence is still present.

### Expanded servo way

The normal pulse width for a standard servo is from 1.000 to 2.000 ms. Sometimes it is desirable to increase this area, and thus the travel distance too. When enabled, the servo positions can now be set between 0.700 - 2.300 ms.

### **Attention!**

**Not all servos are suitable for this enhanced servo range and may get damaged! Therefore, use this function only with special care.**

Sound at servo movement

With this option the sound (additional sound) for the servo is always played as long as the servo moves.

Sound when not in home position

With this option, the sound will be played when the servo is not in home position (position of step 1).

If you click with the right mouse button in the table, the following additional functions are provided:

Delete step	Deletes the step you have clicked on with the right mouse button. All other steps are shifted up one row.
Insert step	Inserts a new step <u>before</u> the step on which you have clicked with the right mouse button. All other steps are shifted down one row.
Export sequence	With this, a complete sequence can be stored in a file (*.s_seq) on a hard drive.
Import sequence	With this, previously exported sequences (*.s_seq) can be read in again.


Example of previous page, servo 1 sequence: Recoil system of a tank

The servo 1 sequence shows an example of a simple recoil system of a tank. In step 1, the servo is placed in home position 1.000 ms (tank barrel ahead). Now, if the cannon shot sound is triggered, the sequence for servo 1 can be activated on this sound slot. After that, the servo moves very quickly (0.1s) to the position of Step 2: 2.000 ms (tank barrel at the back). The duration of step 2 is 0.5 s. Since the position of step 3 is also 2.000 ms, the servo remains in this position for this time (tank barrel remains shortly at the back). After the expiry of 0.5s, the sequence is now in step 3. Since this is the last step the servo moves slowly in 0.8s back to the home position 1.000 ms (position 1, tank barrel ahead again).

Example of previous page, servo 2 sequence: Windshield wiper

The servo 2 sequence shows an example for a windshield wiper. In step 1, the servo is placed in the home position, which is 1.000 ms (wiper down). If the sequence is triggered by using the function "Servo 2 sequence", the servo moves in 1.0s to the position of step 2, which means 2.000 ms (wiper at the top). Since this is the last step, the servo will move back to the home position (position 1) in 1.0s, which means back to 1.000 ms (wiper down).

## Configuration - Function sequences

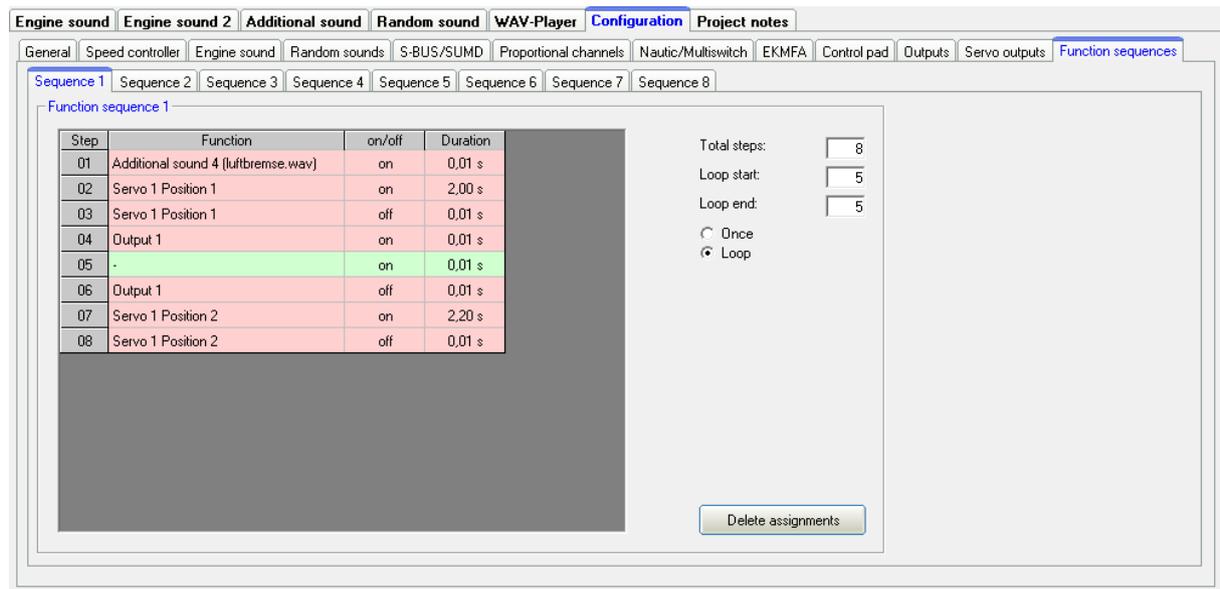

All functions of the SFR-1-D (see page 24) can be compiled to a timed sequence of up to 36 functions/steps.

For each step a function can be selected and switched on or off. In Duration the time can be defined until the next step is activated. The duration of one step can range from 0.01 to 600 seconds.

It is possible to run the complete sequence or only certain steps as a loop. If the option "Loop" is activated the Loop start and Loop stop can be defined. The loop is played as long as the signal for the complete function sequence is activated.

A function sequence will always run completely to the end. All functions that are not deactivated during the sequence remain switched on.

With the right mouse button following commands are available:

Delete step	Deletes the step. All other steps are shifted one row up. The total step quantity is reduced by this step.
Insert step	Inserts one additional step <u>before</u> the step clicked on. All other steps are shifted one row down.
Export sequence	The complete sequence can be saved in a file (*.s_seq) on your hard disk.
Import sequence	Sequence files (*.s_seq) from your hard disk can be imported.

## Project notes



In project notes you have space for remarks about your project and settings.

## Saving sounds and configurations on SD card

Please only use the SFR-1-D Sound-Teacher to program the SD card and do not copy any files to SD card "by hand". Please do not delete any files on the SD card.


The sound module must be disconnected from the supply voltage before inserting or pulling out the SD card!

1. Pull out the SD card from the slot of the SFR-1-D. The card should be handled with care in order to prevent damage because the side with the golden contacts is very sensitive to scratches.
2. Insert the SD card in the card reader, which is connected to the PC.
3. Now start the SFR-1-D Sound-Teacher and choose the desired project, the new sounds or setup the configuration.
4. Choose (if necessary) the drive letter of your SD card in the menu "SD card". If you have connected additional removable devices (such as SD cards or USB sticks) to your computer, please pay attention to choose the right device.
5. The Button „Save project data onto SD card“ is used to write all sounds and configurations onto SD card. This can take up to several minutes. The speed depends on the amount of data.
6. Now you can remove the SD card from the card reader and insert it carefully into the slot of the SFR-1-D. The golden contacts must face downwards.

## Transferring configurations with data cable K-USB-2

If you often want to change sounds and configurations in the Sound-Teacher, it will quickly become annoying inserting and pulling out the SD card between SFR-1-D and card reader. To avoid time consuming reconnecting, it is possible to transfer complete projects with the data cable K-USB-2.

In the menu „Data cable“ and „Upload project data via data cable“ or with the button „Transfer project data“ all sounds and settings are transferred onto the SD card.

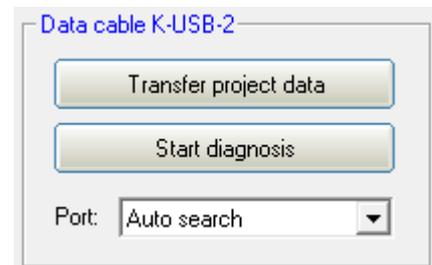

Transferring sounds with the data cable K-USB-2 takes a few minutes! A sound with a length of 10 seconds takes about 15 - 45 seconds (depending on the transmission speed) until it is transferred. Very long songs and large, new projects are only restrictively recommended to be transferred with the data cable.

### **Problems with the data cable**

If problems occur, the transfer speed can be reduced in the menu „Data cable“.

### **SFR-1-D can not be found with data cable**

If the SFR-1-D port can not be found with the data cable, check the port in the device manager. If there is a yellow warning sign a new hardware driver (Prolific) is required.

Windows:

With Windows 10 and later versions no additional hardware driver is required. For older operating systems the hardware driver can be downloaded on our website at the product page data cable [K-USB-2](#).

Linux:

In combination with Linux, the data cable can also be used with the software [Wine](#). No extra hardware driver is required, however a COM port must be set using following command in your terminal window:

```
sudo chmod 777 /dev/ttyACM0  
sudo ln -s /dev/ttyACM0 ~/.wine/dosdevices/com5
```

Mac OS:

The data cable is compatible with Mac OS in combination with the software [WineBottler](#). No extra hardware driver is required, however a COM port must be set using following command in your terminal window:

```
sudo ln -s /dev/cu.usbmodem9f31 ~/.wine/Files/dosdevices/com5
```

## Adjustments of driving sound with the driving sound diagram

With the driving sound diagram you can set:

- The neutral position of your joy sticks.
- The beginning and end thresholds including the corresponding sound for each driving sound (FG1 – FG5).

### Explanation of the Diagram

The diagram consists of two axes:

1. The horizontal axe (x - left to right) shows the driving speed of the model (respectively the position of the throttle stick).
2. The vertical axe (y - from down to up) shows the play-back speed of the driving sound. The range starts at 60% and goes up to 300 %. This percent refers to the play-back speed of the driving sounds (100 %) saved in the SFR-1-D slots. A higher play-back speed (e.g. 150 %) equals a higher engine speed.

### Explanation of the different coloured lines and quadrates in the diagram

#### Green line

The green line indicates the neutral position of the throttle stick. Using the blue setup button/function the neutral position of the throttle channel is set automatically. As long as the throttle channel is in the neutral position, the module idles and the SFR-1-D plays the idle noise.

#### Red lines

The red lines on the outside left and right represent the maximal driving speed (backwards and forwards). The other red lines with small red quadrates at the bottom indicate the driving speed at which the driving sound/gear should be changed.

The thresholds can be adjusted with the red quadrates. As soon as the driving speed reaches the speed at the red line, a change of the driving sound takes place. Depending on the number speed steps/gears the same amount of red lines will appear.

### Blue lines

The blue lines show the play-back speed (60 % - 300 %) of the driving sound correlating to the model speed. 100% represent the original play-back speed (the same speed as the original sound in the slot). At 300% the sound is played three times as fast as the original sound and the engine „sounds“ faster. At values smaller than 100% the sound is played more slowly.

On the right and on the left of each blue line is a blue quadrate where you can set the start and end play-back speed for each driving sound. At these quadrates you can set the different speeds with the left mouse button.

If the cursor is on one of the coloured quadrates further explanations of the value and the current value occurs below the diagram.

## **Approach of setting the driving sound**

### 1. Adjustment of neutral position:

To set the neutral position of the throttle channel execute the setup/ teching process, see page 15.

### 2. Adjustment of speed steps/gears:

Set the required speed steps/gears for backwards and forwards in the Sound-Teacher.

### 3. Adjustment of thresholds:

If more that one speed step/gear is used, additional red lines occur automatically in the driving sound diagram to set the thresholds for each sound (FG1-FG5).

### 4. Adjustment of start and end speed of the play-back speed of driving sounds:

The play-back speed of driving sounds can be adjusted by shifting the blue quadrates in the diagram. The sound can be adjusted to the driving speed of the model.

### 5. Control of driving sounds:

Check if all slots are occupied with the necessary driving sounds. For example if you like to have three gears for your driving sound you need to use FG1 - FG3 for your different sounds. Otherwise your sound module will get problems with finding the different sounds.

## Sound simulation


The sound simulation can be started with a click on “Sound simulation” in the menu “Help”.

You can play-back the driving sounds and the additional sounds 1 to 30 of your current project at your pc. This is an easy way to check your sounds and configurations without copying all files to SD card.


The driving sound can be switched on and off and even the driving speed can be simulated by the slider.

To trigger an additional sound, just click on the corresponding button. The additional sounds can also be triggered by the keyboard:

- Button F1 - F10 → Additional sound 1 - 10
- Button 1 - 0 → Additional sound 11 - 20

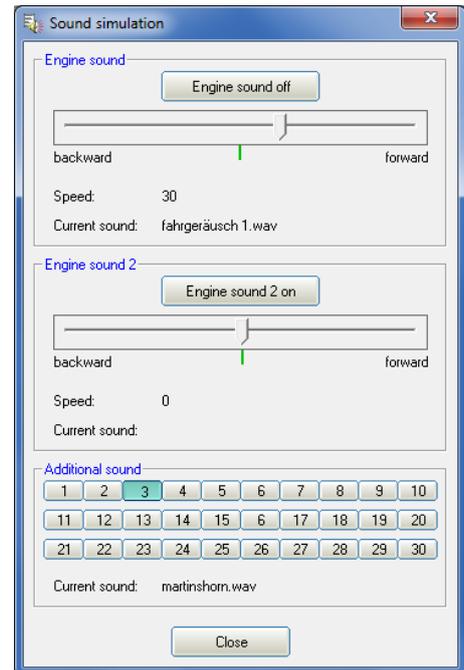

## Testing functions with help of data cable K-USB-2

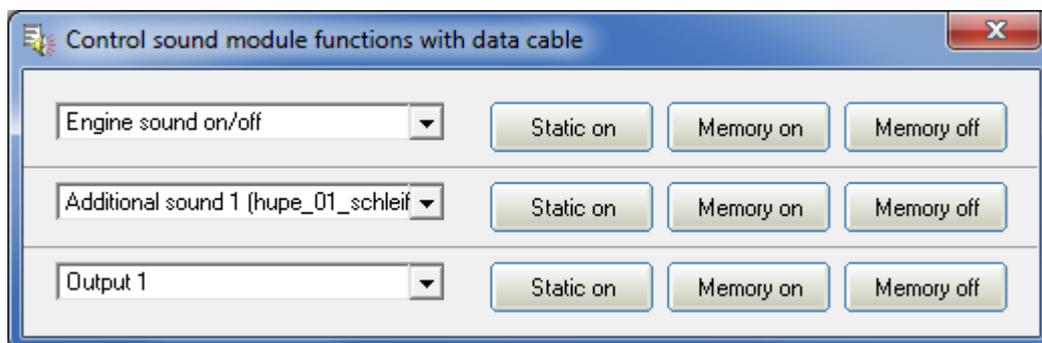

The function “Control SFR-1-D functions with data cable” can be found under menu “Data cable”. With the help of the data cable K-USB-2, all functions can be controlled directly from the PC and not only via the remote control. This can be very helpful for tests without transmitter.

As usual, the functions can be selected with drop boxes. It is possible to activate the functions static or in memory at the SFR-1-D.

Warning: As long as the diagnosis window is open, the "normal" function triggering (eg. prop. channels, Nautic, switching inputs) are deactivated!

## Diagnosis

A diagnosis function is integrated in the SFR-1-D to control different functions, values and features.

There are two different types of diagnosis:

1. Diagnosis with datacable (live)
2. Diagnosis with SD card (recorded)

The diagnosis window is divided into different areas: proportional channels, outputs, servo outputs, motor, nautic mode and others.

### Proportional channels

The first slot shows the received values of the 8 / 16 (with sum signals) proportional inputs/channels from the transmitter. The values range between 1.000 and 2.000 ms.

In neutral position the values of the next (middle) slot should be around 0.

In addition, a letter is displayed. This letter indicates in which of the 5 areas (A, B, N, C and D) the channel is located. This is very helpful for troubleshooting if some sounds or functions can not be switched correctly via the proportional channel.

A slight fluctuation of the values is quite normal and does not indicate a problem!

### Servo outputs

These values show the position of the servo. They range between 1.000 and 2.000 ms. The neutral position is 1.500.

### Motor

Some values of the motor output stage are shown here. They are intended primarily for internal audit purposes.

### Nautic mode

If the nautic mode is active, you can see the received nautic signals here by pressing on „read“. This is only necessary in a few cases, e.g. if you want to analyze a new switching module, or if errors occur at the transmitter side in nautic mode.

The screenshot shows the 'Diagnose' window with the following sections:

- Proportional channel:** A table with columns for channel number, value, and neutral position.
 

Ch. #	Value	Neutral
Ch. #1:	1.831 ms	659
Ch. #2:	1.320 ms	-359
Ch. #3:	1.515 ms	2 N
Ch. #4:	1.515 ms	2 N
Ch. #5:	0.000 ms	0
Ch. #6:	0.000 ms	0 N
Ch. #7:	0.000 ms	0 N
Ch. #8:	0.000 ms	0 N
Ch. #9:		
Ch. #10:		
Ch. #11:		
Ch. #12:		
Ch. #13:		
Ch. #14:		
Ch. #15:		
Ch. #16:		
- Engine:** Fields for Motor voltage (M1, M2, M3, M4), Set value, Value, PWM, Braking PWM, Current, Load regulation, and Hand brake.
- Outputs:** A grid of 16 servo outputs, each with a status indicator (green for active, grey for inactive).
- Servo outputs:** Specific values for Servo 1, 2, 3, and 4.
- Miscellaneous:** Various system parameters like Firmware, Error code, Temperature, Battery voltage, Battery threshold, Output current, Volume pot, Volume (software), Speed, Tab-Pos / Speed, Sound-Nr., and Hysteresis.
- Nautic mode:** A text area for received signals and a 'read' button.
- Recorded diagnosis on hard disk:** A progress bar and buttons for 'Start recording', 'Play recording', and 'Close'.

### Outputs

If one of the 16 outputs are switched on, it will be indicated with a green circle.

To check all 16 outputs one by one you can activate the box „Test“. This is helpful to control your wiring without using the transmitter. This diagnosis function works only with live diagnosis and a data cable.

### Miscellaneous

The values shown here are intended primarily for internal audit purposes.

### **Live-diagnosis with datacable**

The additional datacable K-USB-2 is needed for live-diagnosis. It is connected to X11. The brown cable points to the SD-card.

A live-diagnosis using the data cable is generally only useful when the SFR-1-D in the model is completely installed; wired and all necessary equipment is switched on (e.g. transmitter and receiver).

Approach for diagnosis using the datacable:

1. Switch on transmitter (and receiver).
2. Connect SFR-1-D to supply voltage.
3. Connect datacable to X11 and to your computer.
4. Start SFR-1-D Sound-Teacher.
5. Go to "Data cable" and click on "Diagnosis via datacable".
6. The diagnosis window opens.

Optionally, the live diagnosis can also be recorded on the hard disk of the PC and played back later.

**Record diagnosis with SD card**

You can also record diagnosis data from the SFR-1-D to the SD card. This data can be displayed with the Sound-Teacher on the computer.

Consider following points:

- The must be enabled first in the Sound-Teacher.
- Since the recording of diagnosis data stresses the processor, it might come to interrupts in the sound playback. So this function should only be used for troubleshooting and afterwards switched off.
- A maximum of 10 minutes can be recorded (1 separate record every 10 ms).
- Each time the supply voltage is switched on, the old diagnosis data is deleted and the recording starts again.

Approach for diagnosis using the SD card:

1. Activate "Record diagnosis data on SD card" in the Sound-Teacher „Configuration“ → „General“. Save and transfer the project data onto SD card.
2. Insert SD card in the SFR-1-D.
3. Switch on transmitter.
4. Connect SFR-1-D to supply voltage.
5. Now a maximum of 10 minutes can be recorded to SD card (red LED flickers slightly).
6. Activate and deactivate different functions. Document the function and time.
7. Disconnect SFR-1-D from power supply.
8. Remove SD card.
9. Start the Sound-Teacher.
10. Insert SD card to the cardreader of your computer.
11. Go to "Data cable" and click on "Diagnosis via SD card".
12. The diagnosis window opens.
13. With the slider at the bottom, the diagnosis data can be displayed at any time of the recording.

## Firmware update

The sound-Teacher writes the firmware file automatically while saving the project data onto SD card.

A firmware update of the SFR-1-D is always performed automatically when the Sound-Teacher version is different from the current version of the SFR-1-D firmware. The firmware update will be started after the supply voltage is switched on and it takes 10 seconds. The red and blue LEDs flashes during this period a few times alternating.

**Never disconnect the sound module from power supply while updating!**

A new firmware is mostly included if you are using a new version of the Sound-Teacher. If you are using a new version of the Sound-Teacher, take care that on the first turning on of your sound module, the firmware might be updated. Therefore the voltage should not be turned off for at least 10 seconds!

*This part of the manual has not yet been translated into English...*

## Neue Sounds am PC aufnehmen

Auf der mitgelieferten DVD-ROM befinden sich einige Beispielsounds, mit denen Sie erste Versuche mit dem Soundfahrtregler tätigen können. Irgendwann wollen Sie sicher auch eigene Sounds auf Ihren Soundfahrtregler spielen.

Das Internet bietet z.B. eine nahezu unendliche Anzahl von Sounddaten, welche Sie meist kostenlos herunterladen und anschließend auf Ihren Soundfahrtregler übertragen können.

Geben Sie einfach den gewünschten Sound in Verbindung mit dem Begriff „download“ in eine Suchmaschine (<http://www.google.de>) ein.

Die Internetseite <http://www.youtube.com> bietet eine große Datenbank an Videos, die oftmals verwertbares Soundmaterial beinhalten. Es wird allerdings ein weiteres Programm benötigt, um die Sounds aus den Videos auf dem PC speichern zu können. Auf der mitgelieferten DVD-ROM befindet sich dazu das Programm „**Free YouTube to MP3 Converter**“.

Zum Installieren der Software, starten Sie den „USM-Installer“, klicken auf „Free Youtube to MP3 Converter installieren“ und folgen den Anweisungen auf dem Bildschirm.

Wenn Probleme beim Herunterladen der Sounds auftreten, muss möglicherweise die Software aktualisiert werden oder das Herunterladen wird vom Urheber nicht geduldet.

In folgendem Beispiel wird erklärt, wie Sie mit dem Programm „**Free YouTube to MP3 Converter**“ einen Sound herunterladen.

1. Gehen Sie auf die Internetseite <http://www.youtube.com>
2. Geben Sie in der Suche einen passenden Suchbegriff ein.
3. Wenn Sie ein passendes Video gefunden haben, dann kopieren Sie die aktuelle Internetadresse Ihres Browsers in die Zwischenablage (Strg+C).
4. Starten Sie nun das Programm „**Free YouTube to MP3 Converter**“ und klicken Sie auf „Einfügen“.
5. Wenn das Einfügen erfolgreich war, kann unter „Optionen“ im Menü „Ausgabe“ das Zielverzeichnis eingestellt werden, in dem der Sound gespeichert werden soll.
6. Mit einem Klick auf „Herunterladen“ wird die Datei in das Zielverzeichnis gespeichert.
7. Warten Sie bis die Datei fertig heruntergeladen ist.

Bitte beachten Sie, dass wir nicht der Entwickler des Programms „**Free YouTube to MP3 Converter**“ sind, keinerlei Rechte daran besitzen und auch keinen weiteren Support für dieses Produkt anbieten können.

Eine weitere Möglichkeit ist das Aufnehmen von eigenen Sounds. Als Quelle können beispielsweise ein Kassettenrekorder, ein MP3-Player, eine CD/DVD, Videokamera oder ein Mikrofon dienen.

Auf der mitgelieferten DVD befindet sich eine Vollversion der Software „**Audacity**“. Zum Installieren der Software, starten Sie den „USM-Installer“, klicken auf „Audacity installieren“ und folgen den Anweisungen auf dem Bildschirm.

Es handelt sich hierbei um Freeware, die Sie uneingeschränkt nutzen können. Mit dem Programm sind ebenfalls umfangreiche Soundbearbeitungen möglich. Weitere Informationen zu dieser Software finden Sie auf der Herstellerseite:

<http://audacity.sourceforge.net/?lang=de>

Bitte beachten Sie, dass wir nicht der Entwickler der Software „**Audacity**“ sind, keinerlei Rechte daran besitzen und auch keinen weiteren Support für dieses Produkt anbieten können.

In folgendem Beispiel wird erklärt, wie Sie mit der Software „**Audacity**“ Sounds aufnehmen können.

1. Starten Sie das Programm „**Audacity**“
2. Wählen Sie ein Aufnahmegerät aus (Rechts neben dem Mikro  in der Werkzeugleiste „Aufnahmegeräte“).
3. Rechts oben im Bild neben dem Mikro, befindet sich der Lautstärkeregler für die Aufnahme.

Stellen Sie hier die Lautstärke so ein, dass die Aufnahme optimal ausgesteuert ist. Erfahrungsgemäß befindet sich dann der Schieberegler meist im oberen Drittel. Die Aussteuerungsanzeige sollte bei der Aufnahme nicht den Maximalwert erreichen. Der höchste Wert wird als blauer Strich angezeigt.

4. Bedienelemente:



Durch einen Klick auf die Aufnahmeschaltfläche (roter Punkt) wird die Aufnahme gestartet. Eine funktionierende Aufnahme erkennt man daran, dass die Aussteuerungsanzeige sich bewegt und eine blaue Kurve aufgezeichnet wird.

Für eine nicht funktionierende Aufnahme kann es mehrere Gründe geben.

- a. Manchmal hat Audacity Probleme, in Mono aufzuzeichnen. Wählen Sie deshalb als Input Channels „**2 (Stereo) Channels**“ aus.
- b. Überprüfen Sie, ob das Aufnahmegerät vorhanden und aktiviert ist. Unter Windows XP klicken Sie mit der Maus doppelt auf das Lautsprechersymbol rechts unten in der Taskleiste. Dadurch öffnet sich die „Wiedergabesteuerung“. Klicken Sie dort im Menü „**Optionen**“ auf „**Eigenschaften**“.

Wählen Sie nun „**Aufnahme**“ aus und aktivieren Sie das zu verwendende Gerät.

Unter Windows Vista / 7 müssen Sie mit der rechten Maustaste auf das Lautsprechersymbol klicken und „**Aufnahmegeräte**“ auswählen.

Anschließend klicken Sie mit rechts in das weiße Fenster und setzen

einen Haken bei „**Deaktivierte Geräte anzeigen**“. Wird das verwendete Aufnahmegerät nicht angezeigt, kann eventuell ein neuer Treiber der Soundkarte Abhilfe schaffen. Stellen Sie nun wie unter Punkt 2 das Aufnahmegerät ein.

- c. Wenn Sie einen Sound aufnehmen möchten, der gerade auf Ihrem PC abgespielt wird (z.B. aus dem Internet) müssen Sie als Aufnahmegerät „**Stereo Mix**“, „**Aufnahmesumme**“ oder „**Wave**“ auswählen. Diese Bezeichnung variiert je nach Hersteller der Soundkarte.
5. Kontrollieren Sie nun, ob die Lautstärkeeinstellung, die Sie unter Punkt 3. vorgenommen haben, korrekt war. Korrigieren Sie gegebenenfalls die Lautstärkeeinstellung, wie oben beschrieben.
  6. Durch einen Klick auf die Stoppschaltfläche (braunes Quadrat) wird die Aufnahme wieder gestoppt.
  7. Die Kurvenform des aufgenommenen Sounds ist blau dargestellt. Anhören können Sie sich den aufgenommenen Sound durch einen Klick auf die Wiedergabeschaltfläche (grünes Dreieck).

Der Sound kann nun noch durch die umfangreichen Funktionen der Software bearbeitet werden. Zusätzlich muss der Sound auch noch in das passende Format konvertiert werden. Die Konvertierung und Bearbeitung der Sounds wird auf den folgenden Seiten erklärt.


## Sounddateien konvertieren

Liegen die Sounddateien nicht im erforderlichen Format vor, müssen sie konvertiert werden, bevor sie vom Soundfahrtregler gelesen werden können.

Dazu kann jedes beliebige Soundbearbeitungsprogramm verwendet werden, welches die erforderlichen Funktionen bietet.


Anhand des Programms „**Audacity**“ wird nun kurz erklärt, wie eine Konvertierung einer vorhandenen Sounddatei erfolgt:

1. Starten Sie das Programm „**Audacity**“
2. Öffnen Sie die zu konvertierende Sounddatei.
3. Falls nun 2 Tonspuren zu sehen sind, handelt es sich um eine Stereospur. Diese Stereospur muss in Mono umgewandelt werden. Klicken Sie dazu im Menü „**Spuren**“ auf „**Stereospur in Mono umwandeln**“.
4. Stellen Sie ganz unten links die „**Projekt-Frequenz (hz)**“ ein. Wählen Sie dort 44100 aus.

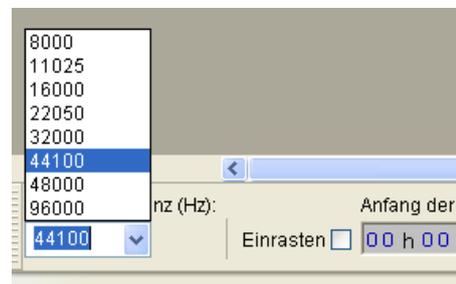

5. Speichern Sie nun die Datei unter einem neuen Namen ab:

- Klicken Sie dazu im Menü „**Datei**“ auf „**Exportieren...**“.
- Geben Sie an in welchem Ordner und unter welchem Namen die Datei gespeichert werden soll.
- Unter „**Dateityp**“ wählen Sie „**WAV (Microsoft) 16-bit PCM**“ aus.
- Bestätigen Sie nun Ihre Auswahl mit „**OK**“ und speichern Sie die Datei ab.

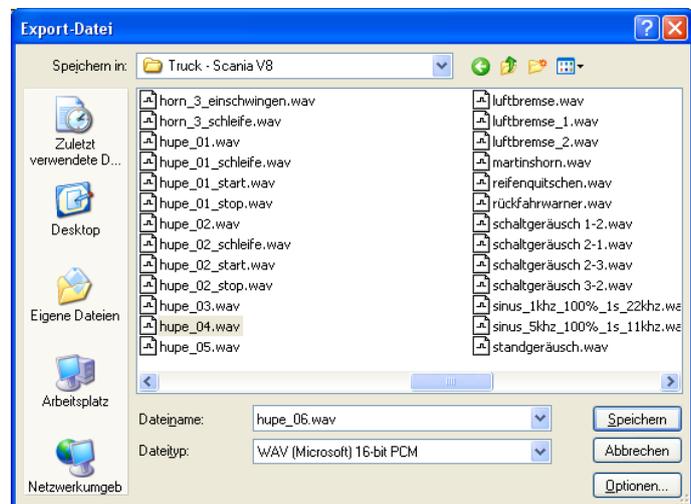


6. In dem Fenster „**Metadaten bearbeiten**“ bitte nichts in die Felder eintragen, bzw. vorhandene Werte löschen. Ansonsten können die WAV-Dateien nicht über die Sound-Simulation im Sound-Teacher abgespielt werden!
7. Nun kann die neu erstellte Datei mit Audacity weiter bearbeitet, oder direkt mit unserer Software „**SFR-1-D Sound-Teacher**“ geladen werden.

## Sounds am PC bearbeiten


### Sound „verstärken“

Damit der Sound vom Soundfahrtregler auch laut genug abgespielt wird, muss der Sound auch dementsprechend angesteuert werden. In der Praxis hat sich gezeigt, dass ein gewisses Übersteuern die Soundqualität nicht gleich sehr verschlechtert, aber dafür die Lautstärke natürlich anhebt.

Schlecht angesteuerter Sound:

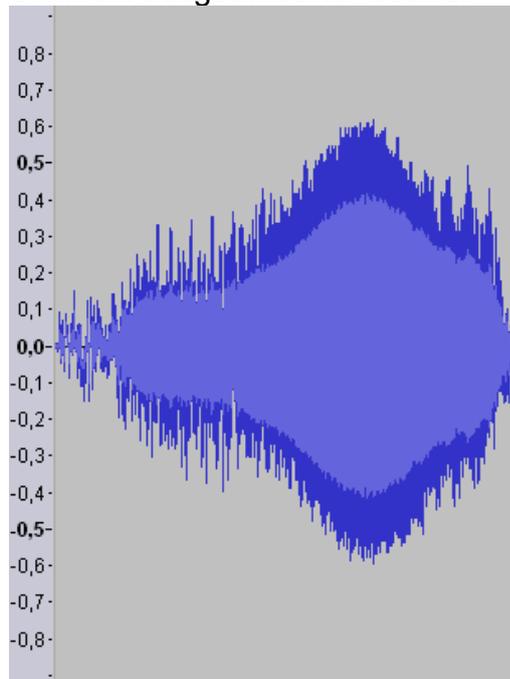

Gut angesteuerter Sound:

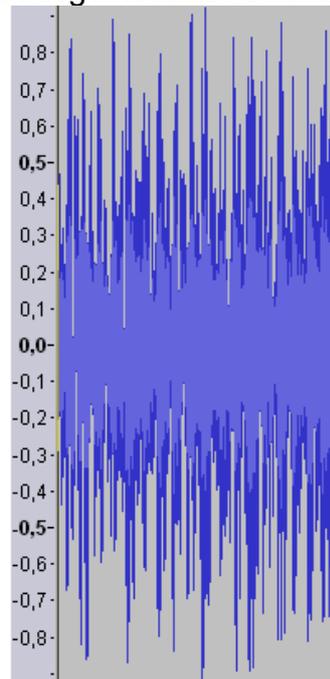

Auch der rechte Sound könnte noch weiter verstärkt werden, ohne die Tonqualität stark zu beeinflussen, da nur wenige Spitzen-Samples verloren gehen würden.

Um einen Sound mit Audacity zu verstärken gehen Sie wie folgt vor:

1. Wenn der Sound über seine gesamte Länge nicht gut angesteuert ist, sollte er zunächst „normalisiert“ werden. Wählen Sie im Menü „**Effekt**“ den Punkt „**Normalisieren...**“ aus und bestätigen Sie die Auswahl mit „**OK**“.
2. Wählen Sie im Menü „**Effekt**“ den Punkt „**Verstärken...**“ aus.
3. Aktivieren Sie das Feld „Übersteuerung erlauben“.
4. Die Verstärkung muss in „dB“ angegeben werden.
5. Die Einheit dB ist allerdings nicht linear. 3 dB entsprechen etwa einer Verstärkung um 40 % und 6 dB um 100 %.
6. Bestätigen Sie Ihre Auswahl mit „**OK**“.
7. Über die Tastenkombination „**Strg+Z**“ können Veränderungen auch leicht wieder rückgängig gemacht werden.


## Sound „zurechtschneiden“

Zum Erstellen von brauchbaren Geräuschen, ist es oft notwendig einzelne Teile aus der Tonspur auszuschneiden, oder zu entfernen. Dazu benötigt man:


1. Das Auswahlwerkzeug zum Markieren 
2. Das Zoomwerkzeug zum Vergrößern 

Vorgehensweise:

1. Suchen Sie sich aus der Tonspur, mit Hilfe des Zoomwerkzeugs einen Teil aus, den Sie verwenden möchten (Linksklick hineinzoomen, Rechtsklick herauszoomen)
2. Mit dem Scrollbalken am unteren Bildschirmrand können Sie sich durch die Tonspur bewegen.
3. Wählen Sie das Auswahlwerkzeug an und markieren Sie mit der linken Maustaste den Bereich, den Sie verwenden wollen.

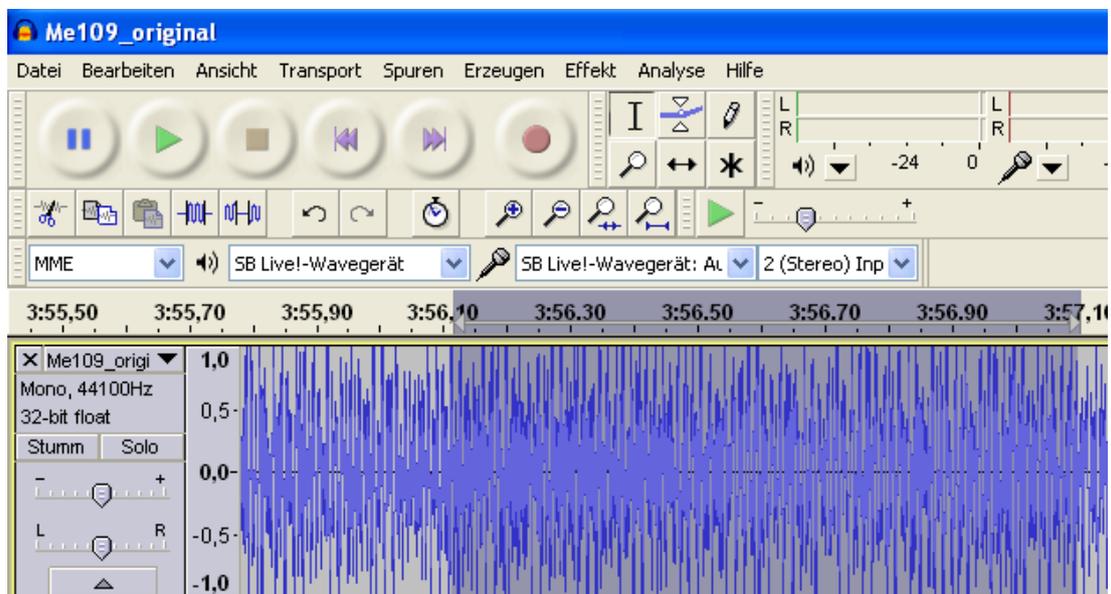

4. Nutzen Sie die Wiedergabeschaltfläche um die Auswahl zu überprüfen.
5. Korrekturen sind mit dem Auswahlwerkzeug möglich. Nutzen Sie dafür die weiße Hand, die am Rand des markieren Bereichs erscheint, sobald Sie die Maus dorthin bewegen.
6. Wählen Sie im Menü „**Bearbeiten**“ den Punkt „**Trimmen**“ aus um alle nicht markierten Teile des Sounds zu löschen.
7. Um den verbleibenden Ausschnitt links anzuordnen, gehen Sie im Menü „**Spuren**“ auf „**Spuren ausrichten**“ und wählen Sie „**An Null ausrichten**“ aus.

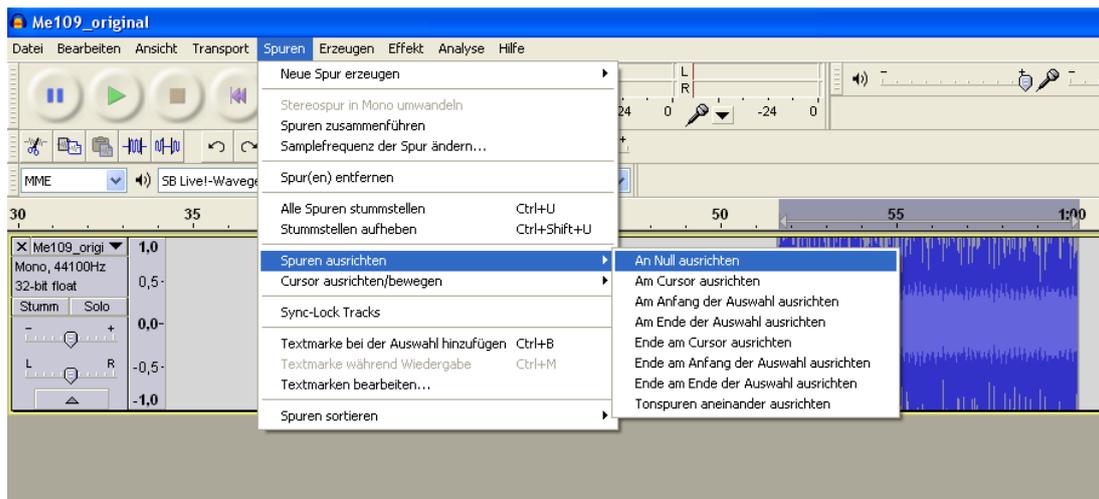


8. Wenn etwas gelöscht werden soll, nutzen Sie das Auswahlwerkzeug um den Teil zu markieren, der nicht mehr benötigt wird und klicken Sie im Menü „**Bearbeiten**“ auf „**Löschen**“.

### Einfaches Fahrgeräusch erstellen


Ein „ganz einfaches“ Fahrgeräusch besteht aus einem Anlassgeräusch, der Schleife des Stand-/Fahrgeräusches und einem Abstellgeräusch. Die Schleife wird also dann für das Stand- und das Fahrgeräusch verwendet.

Zunächst benötigt man eine verwertbare Aufnahme, die sowohl ein Anlassen, eine gleichmäßige Schleife für das Standgeräusch, sowie ein Abstellen enthält. Das nachfolgende Beispiel soll demonstrieren, wie man aus einer Aufnahme ein brauchbares Fahrgeräusch erstellt.


1. Öffnen Sie die Aufnahme und führen falls nötig eine „Verstärkung“ durch.
2. Konvertieren Sie den Sound wie auf Seite 98 beschrieben in ein geeignetes Format und speichern Sie sich diesen „Ursprungssound“ nun ab.
3. Schließen Sie den Ursprungssound und öffnen ihn gleich wieder. Damit werden die Einstellungen (z.B. die Samplerate) des Ursprungssounds, für das Projekt übernommen.
4. Hören Sie sich den Sound genau an und suchen Sie ein passendes **Anlassgeräusch**. Bedenken Sie dabei, dass das Anlassgeräusch später möglichst ohne Übergang in die Schleife des Standgeräusches übergehen sollte. Es ist auch empfehlenswert, sich den Endzeitpunkt der Markierung zu notieren. Von hier aus soll dann später die Schleife für das Standgeräusch beginnen. Unter dem Scrollbalken der Tonspur, sehen Sie 3 Fenster die Ihnen dabei behilflich sind. Diese Fenster zeigen ihnen, zu welcher Zeit die momentane Auswahl anfängt, wo diese endet, oder wie lang sie ist. Wählen Sie hier zunächst „**Ende**“ aus, klicken dann mit der rechten Maustaste auf das mittlere Fenster und stellen dort das Format wie im nebenstehenden Bild ein.

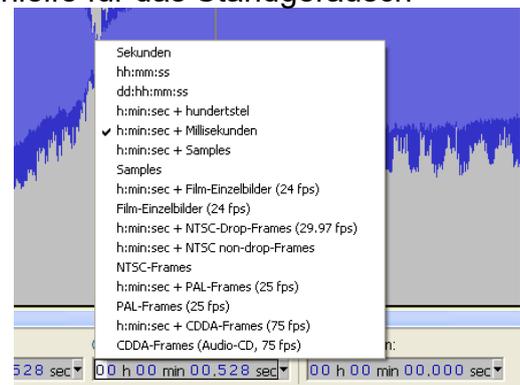

5. Im linken Fenster können Sie nun den Anfang der Markierung ablesen und im rechten Fenster das Ende. Notieren Sie sich das Ende.
6. Schneiden Sie sich dann ein passendes Anlassgeräusch aus.
7. Um das Anlassgeräusch zu verbessern, kann am Anfang ein „Einblenden“ erzeugt werden. Dazu markieren Sie beispielsweise die ersten 0,2 Sekunden der Tonspur und wählen im Menü „Effekt“ den Punkt „Einblenden“ aus.

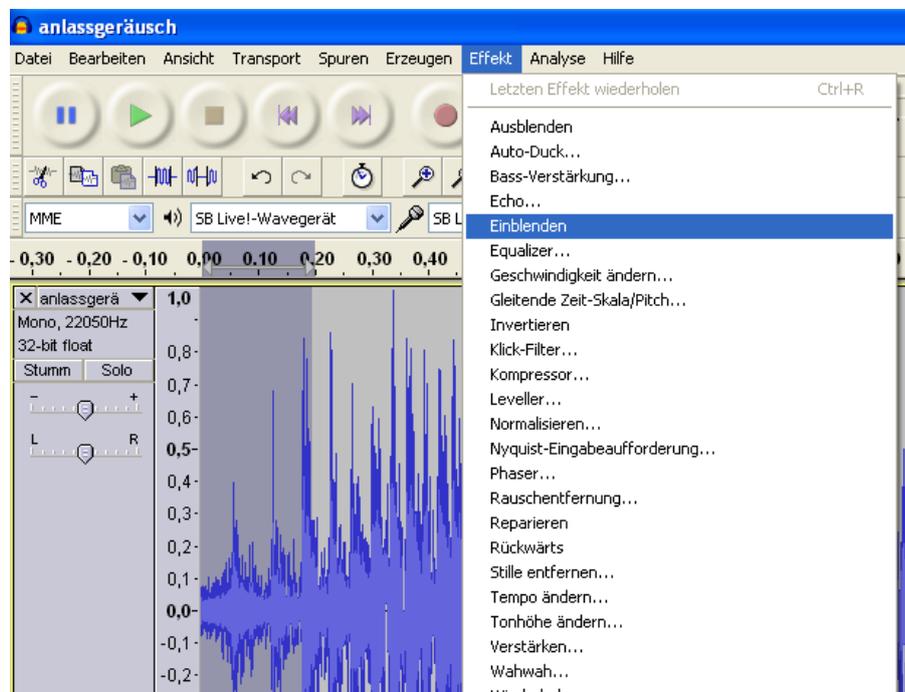

8. Beobachten Sie, wie sich der Signalverlauf verändert hat:

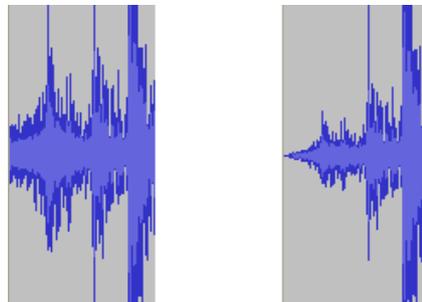


9. Exportieren Sie das fertige Anlassgeräusch und speichern Sie es im richtigen Format unter einem neuen Namen ab (z.B. „anlassgeräusch.wav“).
10. Öffnen Sie dann wieder den Ursprungssound und wählen dort eine passende Schleife für das **Standgeräusch** aus. Die Schleife sollte von dem Endzeitpunkt des Anlassgeräusches anfangen. Unter „Anfang der Auswahl“ sollte also der Endzeitpunkt des Anlassgeräusches stehen.




11. Erfahrungsgemäß sollte die Länge einer Schleife zwischen 2 und 6 Sekunden betragen.



12. Sie können sich die markierte Schleife als Endlosschleife anhören, indem Sie die Shift/Umschalttaste gedrückt halten und die grüne Wiedergabetaste drücken.
13. Die Schleife sollte ohne „Knacken“ und hörbare Unterschiede ineinander übergehen. Ist das nicht der Fall, so gibt es verschiedene „Tricks“ um die Schleife zu verbessern:
  - a. Speichern Sie die Schleife zunächst in einer neuen Datei ab (z.B. „standgeräusch.wav“).
  - b. Markieren Sie die ganze Schleife mit dem Auswahlwerkzeug und wählen Sie im Menü „**Bearbeiten**“ den Punkt „**Kopieren**“.
  - c. Klicken Sie dann rechts neben die Tonspur in den freien Bereich und wählen dann im Menü „**Bearbeiten**“ den Punkt „**Einfügen**“.

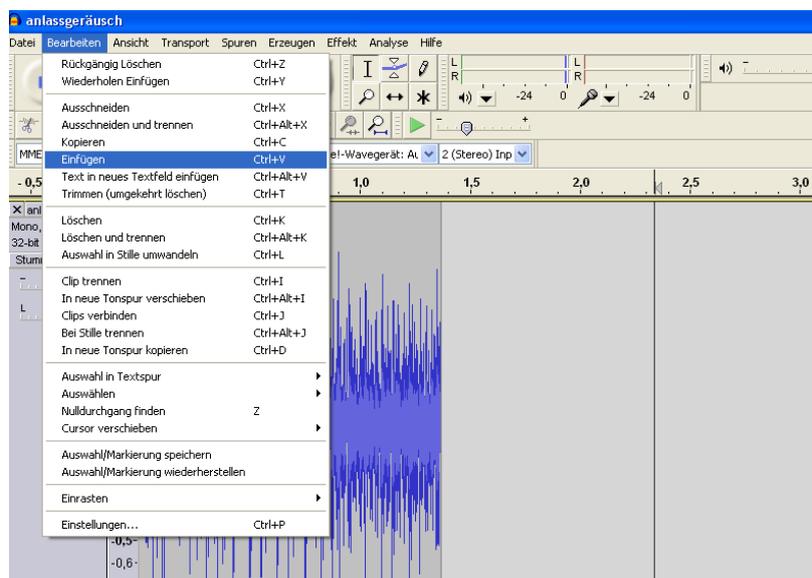

- d. Wählen Sie nun unter „**Effekt**“ den Punkt „**Rückwärts**“ aus.
- e. Als nächstes invertieren Sie die eingefügte Spur über „**Effekt**“ und „**Invertieren**“.
- f. Die eingefügte Spur muss jetzt mit der vorhandenen zusammengefügt werden.
- g. Verwenden Sie dazu das Verschiebewerkzeug  und schieben Sie die rechte Spur an die Linke. Mit einem Klick auf die schwarze Linie zwischen den Spuren, werden diese zusammengeführt.

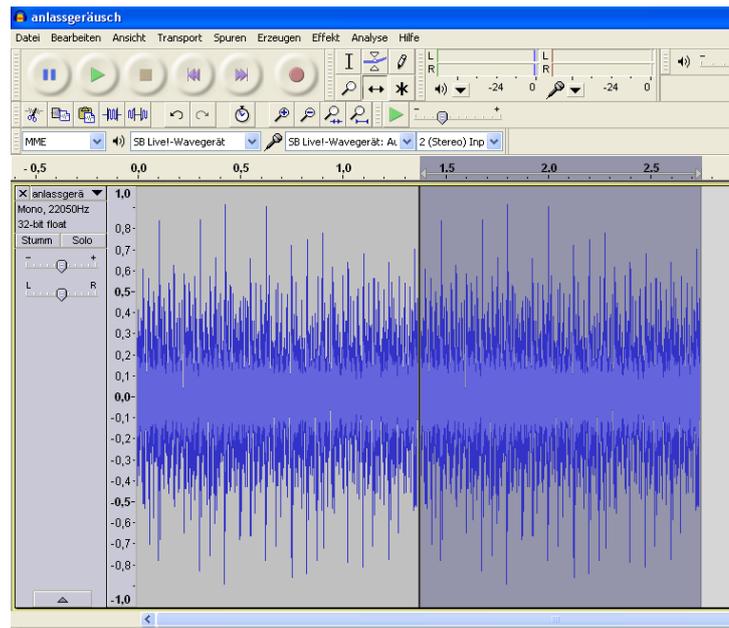


- h. Hören Sie sich die Schleife erneut an.
- i. Nutzen Sie das Zoomwerkzeug um „knackende Stellen“ zu finden und versuchen Sie mit Hilfe des Zeichenwerkzeugs  diese zu verbessern.
- j. Solche Stellen können durch ruckartige Übergänge in der Tonspur entstehen, oder wenn der Endpunkt und der Anfangspunkt einer Schleife weit auseinander liegen
- k. Typische Knackser sehen zum Beispiel so aus (Bild rechts stark eingezoomt):

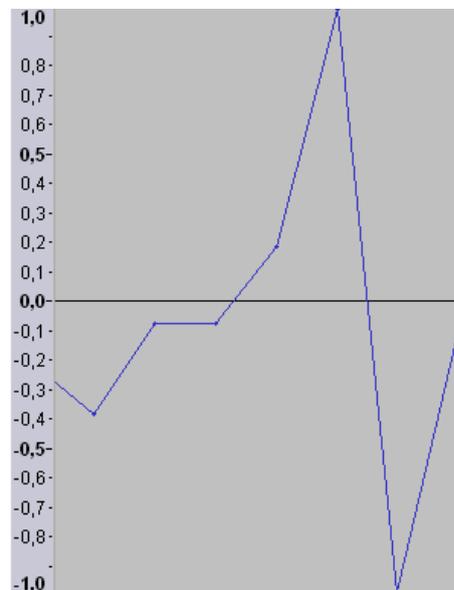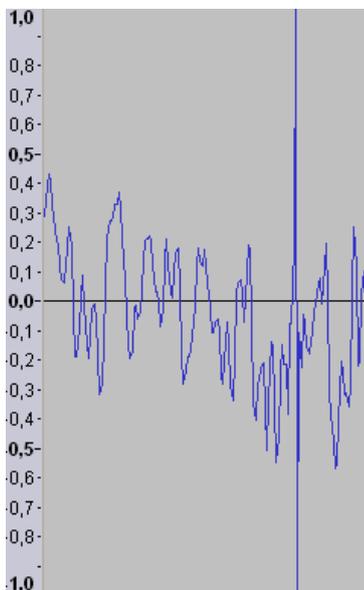


- l. Zoomen Sie soweit in die Tonspur, bis Sie die einzelnen Samples (Punkte auf der Linie im rechten Bild) sehen können.
- m. Jetzt können Sie mit dem Zeichenwerkzeug die Punkte in Richtung Nulllinie ziehen.


- n. Schauen Sie sich auch den Anfang und das Ende der Schleife an und versuchen Sie mit dem Zeichenwerkzeug den Übergang zu verbessern. Bei dem linken Bild befindet sich das letzte Sample der Schleife im oberen Bereich. Wenn die Schleife jetzt wieder von vorne startet, folgt direkt ein Sample im unteren Bereich. Solche Sprünge sollte man vermeiden und die Schleife wie im rechten Bild gestalten.

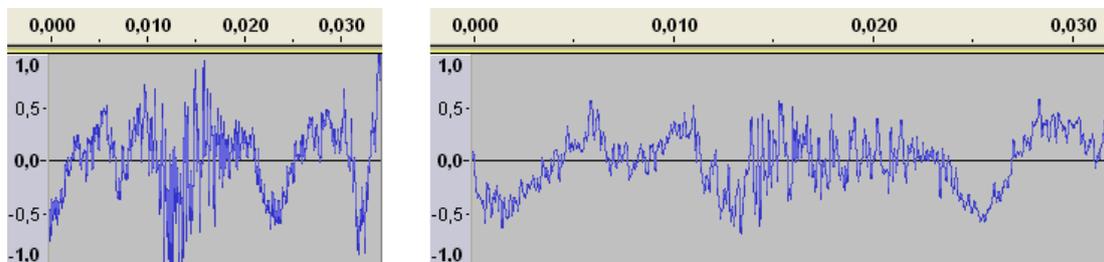


13. Wenn Sie nun Ihre Schleife und Ihr Anlassgeräusch fertig haben, ist es an der Zeit diese hintereinander abzuspielen und sich den Übergang anzuhören.  
 14. Öffnen Sie dazu Ihr Anlassgeräusch und importieren Sie Ihre Schleife indem Sie im Menü „Datei“ auf „Import“ gehen und dort auf „Audio...“ klicken. Wählen Sie jetzt Ihre Schleife aus und klicken Sie auf „Öffnen“.  
 15. Nun sind beide Tonspuren zu sehen.

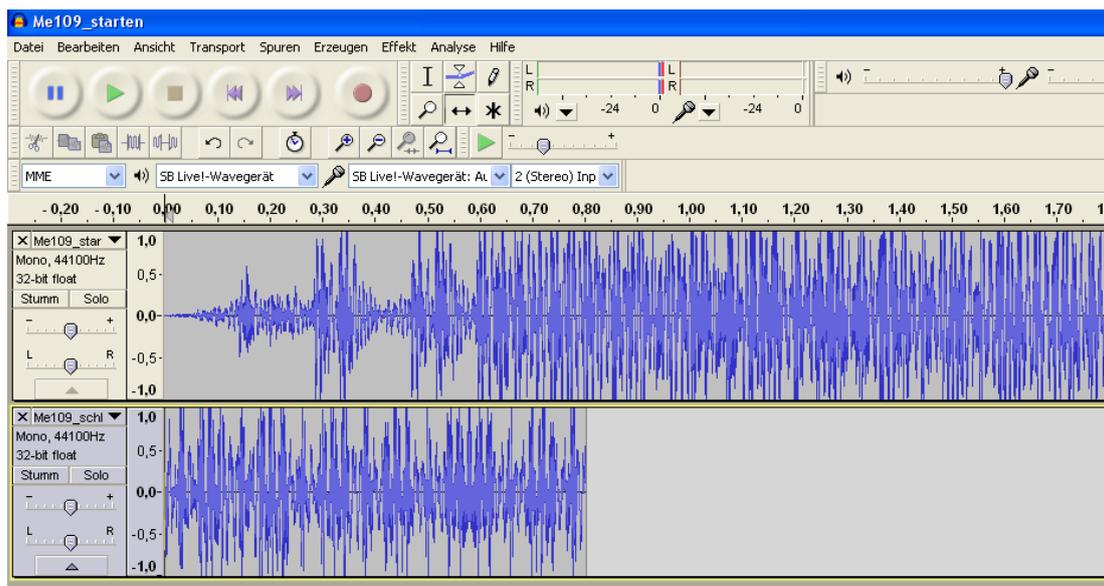


16. Zoomen Sie etwas raus und nutzen Sie das Verschiebewerkzeug um die Spuren hintereinander zu bringen. Die gelbe Linie signalisiert Ihnen, dass die Signale genau aneinander hängen.

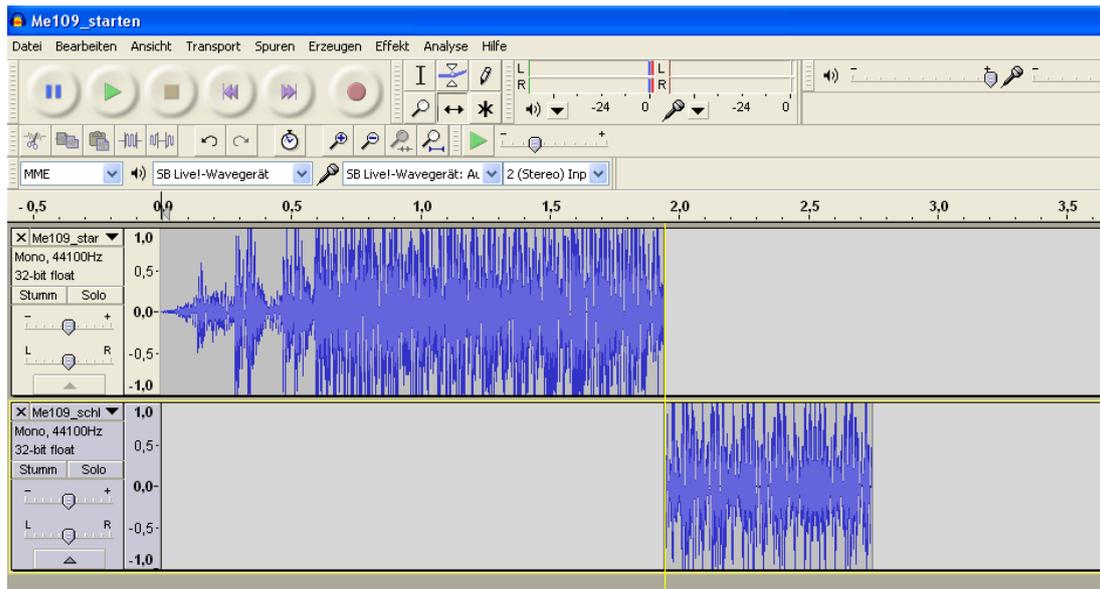

17. Mit einem Klick auf „**Projekt einpassen**“  haben Sie eine bessere Übersicht.
18. Klicken Sie mit dem Auswahlwerkzeug an den Anfang des ersten Geräuschs und verwenden Sie die Wiedergabetaste um sich den Sound anzuhören.
19. Sie können auch die Schleife noch ein zweites Mal einfügen (mit „**Datei**“ und „**Import**“) und hinter die erste anhängen um sich den Übergang anzuhören.
20. Wenn der Übergang von Anlassgeräusch auf die Schleife schlecht ist, gibt es auch hier Möglichkeiten dies zu verbessern:
  - a. Schauen Sie sich das Ende des Anlassgeräuschs und den Anfang der Schleife an. Überprüfen Sie, ob die Signale ohne „Sprünge“ ineinander übergehen und verbessern Sie dies gegebenenfalls (siehe Seite 104).
  - b. Öffnen Sie die Schleife, markieren die ersten 0,2 Sekunden und klicken auf „**Effekt**“ und „**Einblenden**“. Denken Sie daran, dass ihnen dabei die unteren 3 Fenster behilflich sein können.
  - c. Lassen Sie den gewählten Zeitraum markiert und klicken Sie im Menü „**Bearbeiten**“ auf „**Kopieren**“.
  - d. Schließen Sie dann die Schleife **ohne** zu speichern!
  - e. Öffnen Sie das Anlassgeräusch und gehen Sie im Menü „**Spuren**“ auf „**neue Spur erzeugen**“ und wählen dort „**Monospur**“ aus.
  - f. Klicken Sie mit dem Auswahlwerkzeug in die neue Spur und gehen Sie unter „**Bearbeiten**“ auf „**Einfügen**“.
  - g. Jetzt können Sie mit dem Verschiebewerkzeug den eingefügten Teil unter die letzten 0,2 Sekunden des Anlassgeräusches schieben.
  - h. Mit dem Markierungswerkzeug können Sie nun im Anlassgeräusch genau den gleichen Zeitraum markieren.
  - i. Im markierten Bereich des Anlassgeräuschs verwendet man nun den Effekt „**Ausblenden**“.
  - j. Jetzt importieren wir noch die Standgeräusch-Schleife, schieben diese an die richtige Stelle und hören uns die Überlagerung an.

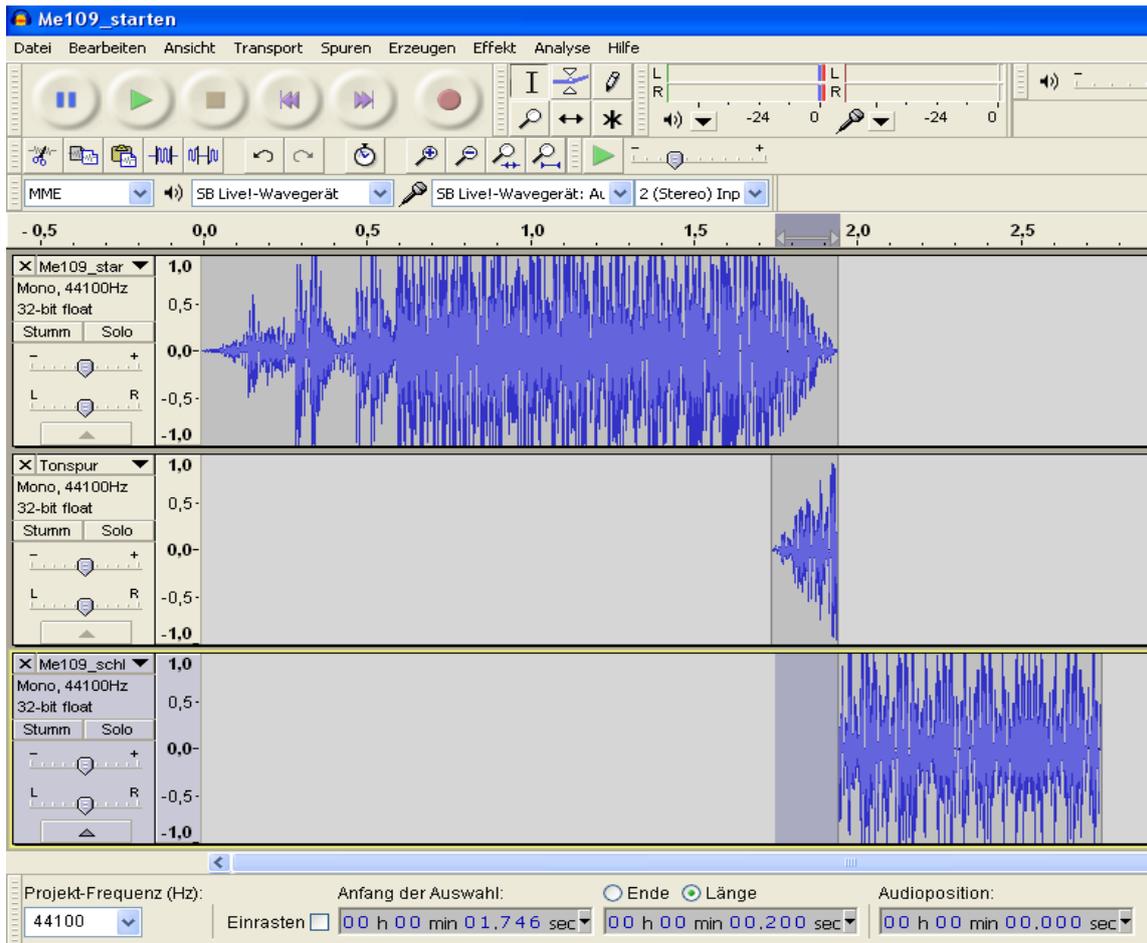

- k. Falls nun wieder ein leichtes „Knacksen“ auftritt, beseitigt man dies am Besten erst nach dem Zusammenfügen der Tonspuren.
  - l. Um Ihr neues Anlassgeräusch zusammenzuführen, entfernen Sie zunächst die Schleife und klicken Sie zweimal im Menü „**Spuren**“ auf „**Spuren zusammenführen**“ (so dass nur noch eine Spur zu sehen ist).
  - m. Vergessen Sie nicht, das neue Anlassgeräusch über „**exportieren**“ abzuspeichern.
  - n. Wenn Sie mit dem Ergebnis nicht zufrieden sind, können Sie auch einen anderen Teil der Schleife überlagern, oder Sie versuchen die Frequenz von Schleife und Anlassgeräusch etwas anzupassen. Dazu können Sie unter „**Effekt**“ den Punkt „**Tempo ändern...**“ ausprobieren.
21. Jetzt fehlt Ihnen noch ein passendes **Abstellgeräusch**. Gehen Sie dazu zu dem Ursprungssound zurück und suchen Sie sich eine Stelle aus, von der Ihr Abstellgeräusch anfangen soll. Achten Sie bei Ihrer Auswahl darauf, dass sich der Anfang des Abstellgeräusches möglichst der Schleife des Standgeräusches ähnelt.
  22. Schneiden Sie sich Ihre Auswahl aus und speichern Sie sie unter einem passenden Namen ab (z.B. „abstellgeräusch.wav“).
  23. Öffnen Sie jetzt Ihr Standgeräusch und importieren Sie das Abstellgeräusch.
  24. Schieben Sie das Abstellgeräusch hinter das Standgeräusch.

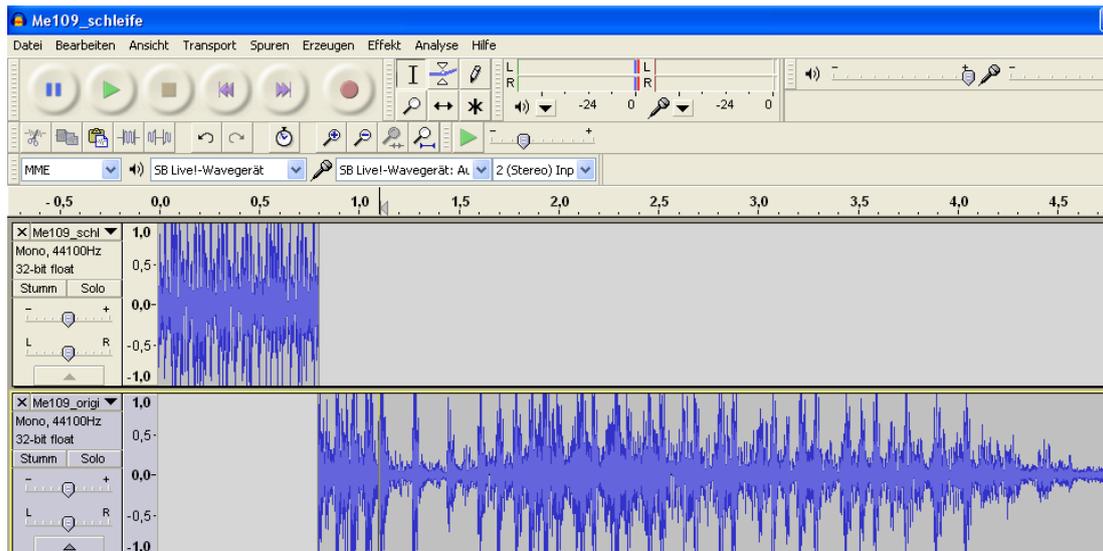


25. Erzeugen Sie zunächst ein „**Ausblenden**“ am Ende des Abstellgeräusches. Die zu wählende Länge ist abhängig vom Sound. Im Beispiel wären etwa 0,5s optimal.


26. Hören Sie sich dann den Übergang vom Standgeräusch zu Abstellgeräusch an.

27. Ist der Übergang schlecht, gibt es wieder Möglichkeiten diesen zu verbessern:

- Erzeugen Sie ein „**Ausblenden**“ am Ende des Standgeräusches von zum Beispiel 0,2 Sekunden, kopieren Sie diesen Teil und machen Sie das „Ausblenden“ rückgängig.
- Fügen Sie die Kopie in eine neue Monospur ein.
- Erzeugen Sie nun ein „**Einblenden**“ am Anfang des Abstellgeräusches, dass die gleiche Dauer besitzt wie das vorher erstellte „Ausblenden“.
- Kopieren Sie jetzt ebenfalls den eingblendeten Teil und machen dann die Änderung rückgängig.
- Fügen Sie die Kopie in eine neue Monospur ein und ordnen Sie die Spuren an wie im Bild.

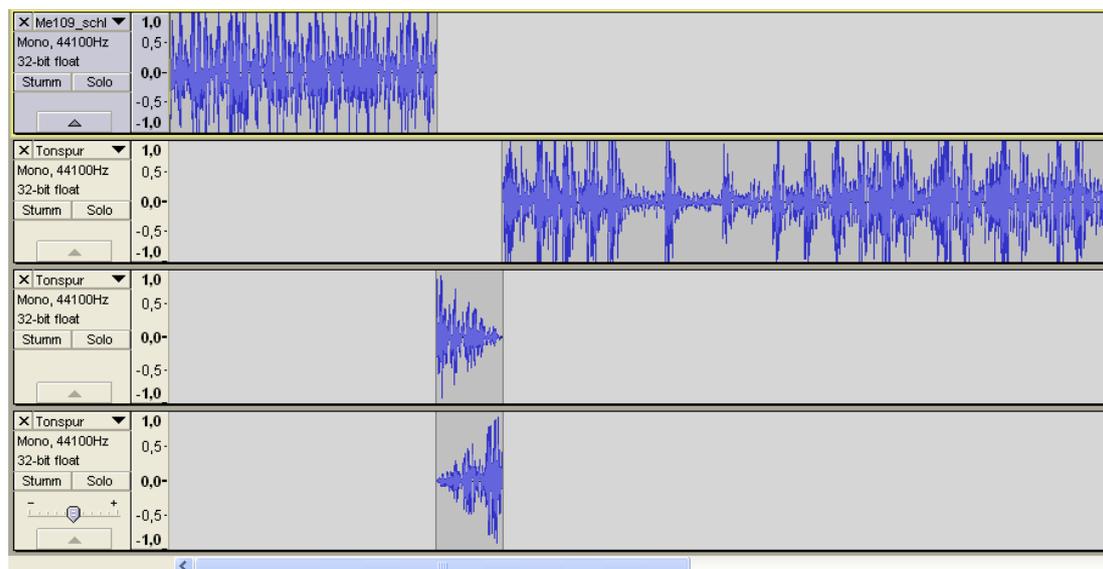


- f. Hören Sie sich nun das Geräusch an
- g. Wenn Sie zufrieden sind, können Sie nun Ihr fertiges Abstellgeräusch zusammenfügen. Dazu entfernen Sie zunächst das Standgeräusch.
- h. Klicken Sie dann zweimal im Menü „Spuren“ auf „Spuren zusammenführen“
- i. Falls Sie die Anordnung wie im letzten Bild beibehalten haben, müssen Sie jetzt nur noch den stummen Teil am Anfang der neuen Tonspur löschen und fertig ist Ihr Abstellgeräusch.

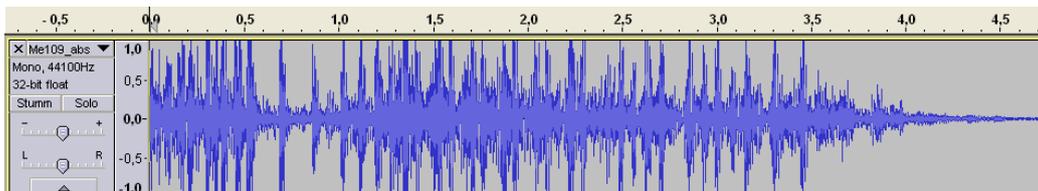

28. Hören Sie sich Ihr Werk an, indem Sie das Anlassgeräusch, das Standgeräusch und das Abstellen hintereinander abspielen.

29. Wenn Sie das Standgeräusch zweimal importieren, können Sie sich auch noch den Schleifenübergang anhören.

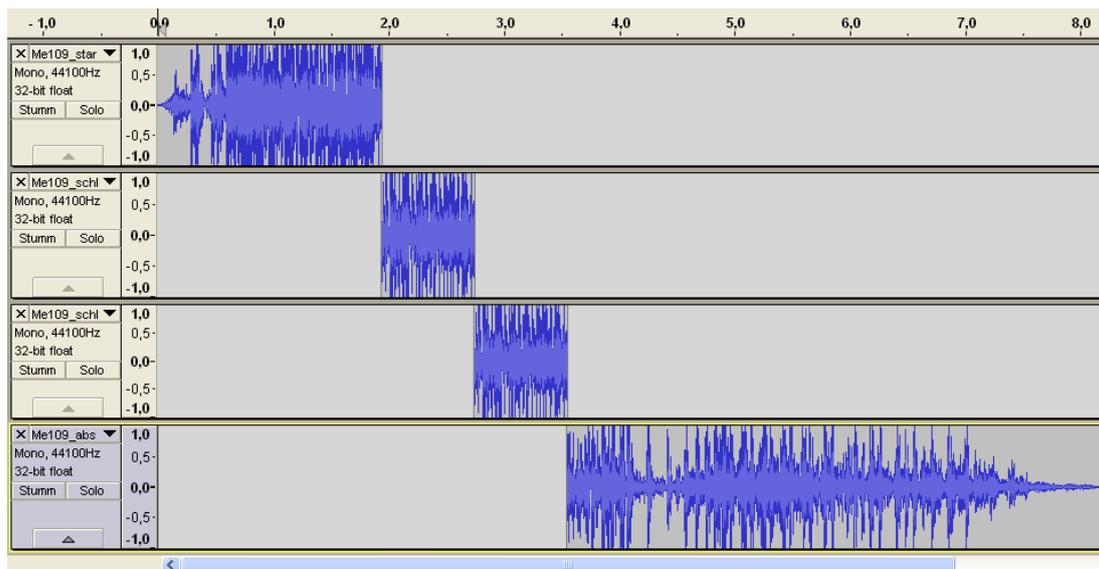

Wenn Sie nicht zufrieden sind, dann geben Sie nicht gleich auf und versuchen Sie die Problemstellen zu verbessern. Zu einer guten Soundbearbeitung braucht es viel Geduld und Erfahrung. Mit der Zeit werden Sie auch merken, dass sich manche Sounds schwerer bearbeiten lassen als andere.

Analog zu dieser Beschreibung können Sie jetzt auch versuchen umfangreichere Sounds zu bearbeiten. So was könnte wie folgt aussehen:  
 Anlassgeräusch → Standgeräusch (Schleife) → Anfahrgeräusch (Übergang von der Standgeräuschschleife zum Fahrgeräusch) → Fahrgeräusch (Schleife) → Anhaltegeräusch (Übergang von der Fahrgeräuschschleife zum Standgeräusch) → Abstellgeräusch.

Diese Beschreibung kann auch für Zusatzsounds verwendet werden. Zum Beispiel können Sie ein MG-Geräusch bestehend aus einem Startgeräusch, einer Schleife und einem Stoppgeräusch erzeugen.

Damit ist die Einführung in die Soundbearbeitung mit „**Audacity**“ beendet.  
Natürlich bietet das Programm noch mehr Möglichkeiten als die hier erklärten.  
Wenn Sie sich dafür interessieren, dann schauen Sie bitte in die **Hilfe** des  
Programms.

